
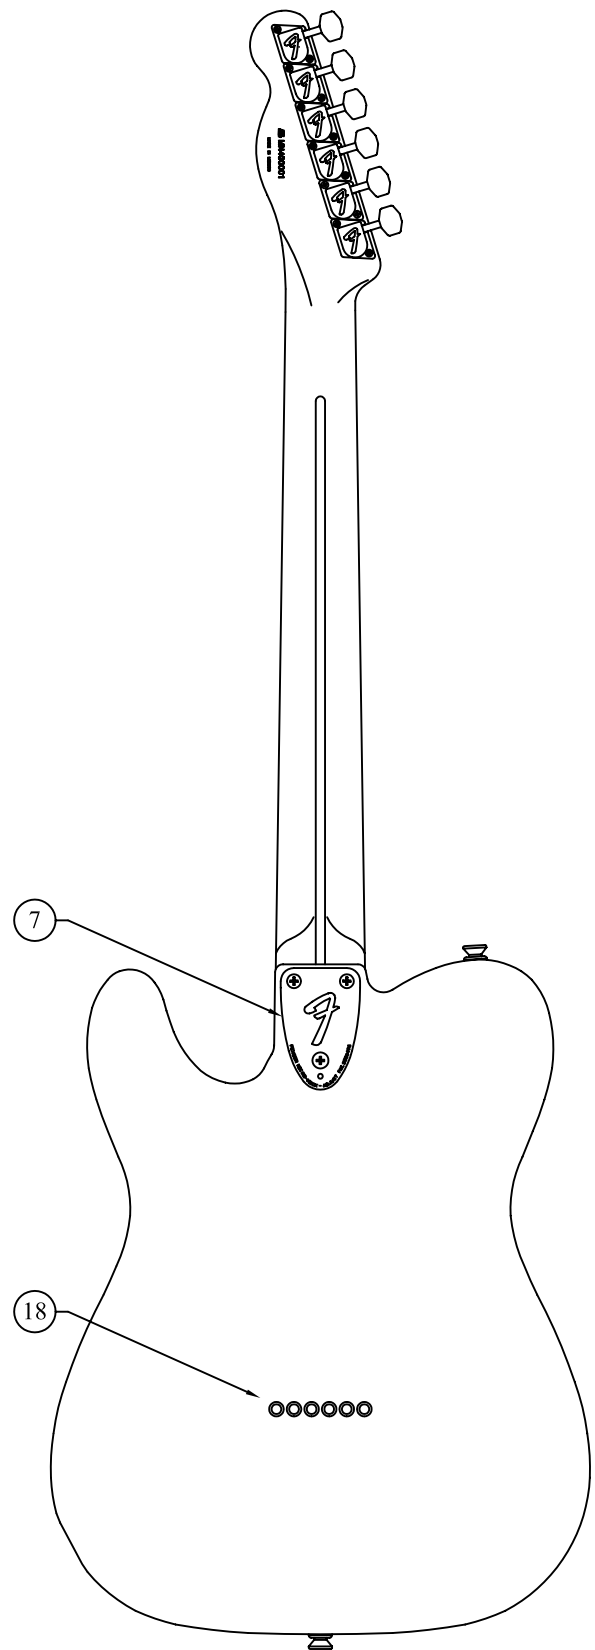


'72 TELECASTER® CUSTOM, RW/MN, 013-7500/7502

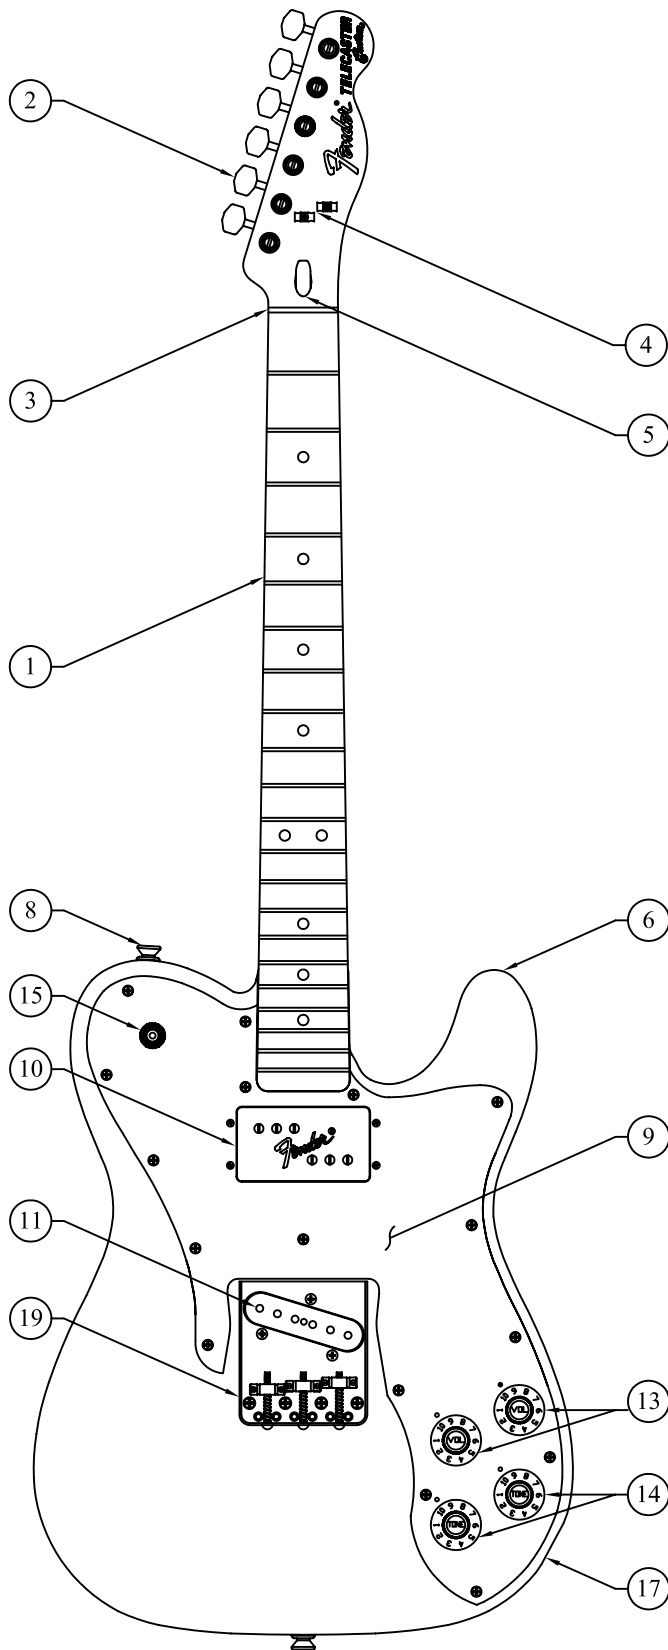

*Fender®*

# '72 TELECASTER® CUSTOM, RW/MN, 013-7500/7502

REF.#	P/N	DESCRIPTION
1	0054544980	Neck, '72 Tele Custom Mex., RW
	0054193000	Neck, '72 Tele Custom Mex., MN
2	0053684000	Tuning Key, (1) <del>Set W/Bushing's</del>
	0011357000	Mounting Screw
3	0083675000	Bone Nut
4	0010389000	String Guide
	0020423000	Spacer
	0011358000	Mounting Screw
5	0023811000	Wrench, Truss Rod Adjustment
6	See Chart	Body, '72 Tele Custom
7	0054525000	Neck Mounting Plate
	0012156000	Bolt, Tilt Adjust.
	0018622000	Wrench, Tilt Adjust.
	0015636000	Mounting Screw
8	0012344000	Strap Button
	0015610000	Mounting Screw
9	0054523002	Pickguard, '72 Tele Custom B/W/B
	0015578000	Mounting Screw
10	0054595000	Pickup, Humbucker, FWR, Neck
	0050166000	Mounting Screw
	0050167000	Mounting Spring
11	0053676000	Pickup, Assy. Mex Vint. Tele Bridge
	0012869000	Lug, Ground
	0063398000	Tubing Latex Cut
	0048631000	Mounting Screw
12	0019064000	Control, 250K (4)
	0016352000	Mounting Nut
	0016436000	Washer, Lock Intl.
13	0054521000	Knob, Volume, '72 Tele Custom (2)
14	0054522000	Knob, Tone, '72 Tele Custom (2)
15	0053694000	Switch, Toggle 3-Position (Wht. Knob & Mntng. Hrdwre Inclded.)
16	0024832000	Capacitor, .022uF(2)
17	0047329000	Output Jack
	0016436000	Washer, Lock Intl.
	0021452000	Ferrule, Jack
	0010355060	Retainer, Jack
	0016352000	Mounting Nut
18	0021429000	Retainer, String Chrome
19	0053679000	Bridge Assy, Tele Thinline Mex.
	0016188000	Mounting Screw
20	0053675000	Bridge Plate, Mex Tele Thinline
21	0007698000	Bridge Section S.S. (3)
22	0015834000	Intonation Screw, (3)
	0018689000	Intonation Spring (3)
23	0016105000	Set Screw (6)

Part # 0053684000 is a single key, SAP description:  
KEY 70's F SHRT PST NOS RH


Body Chart

PN	Color
0054529500	3-Color Sunburst
0054192506	Black



# '72 TELECASTER® CUSTOM, RW/MN, 013-7500/7502


## WIRING DIAGRAM

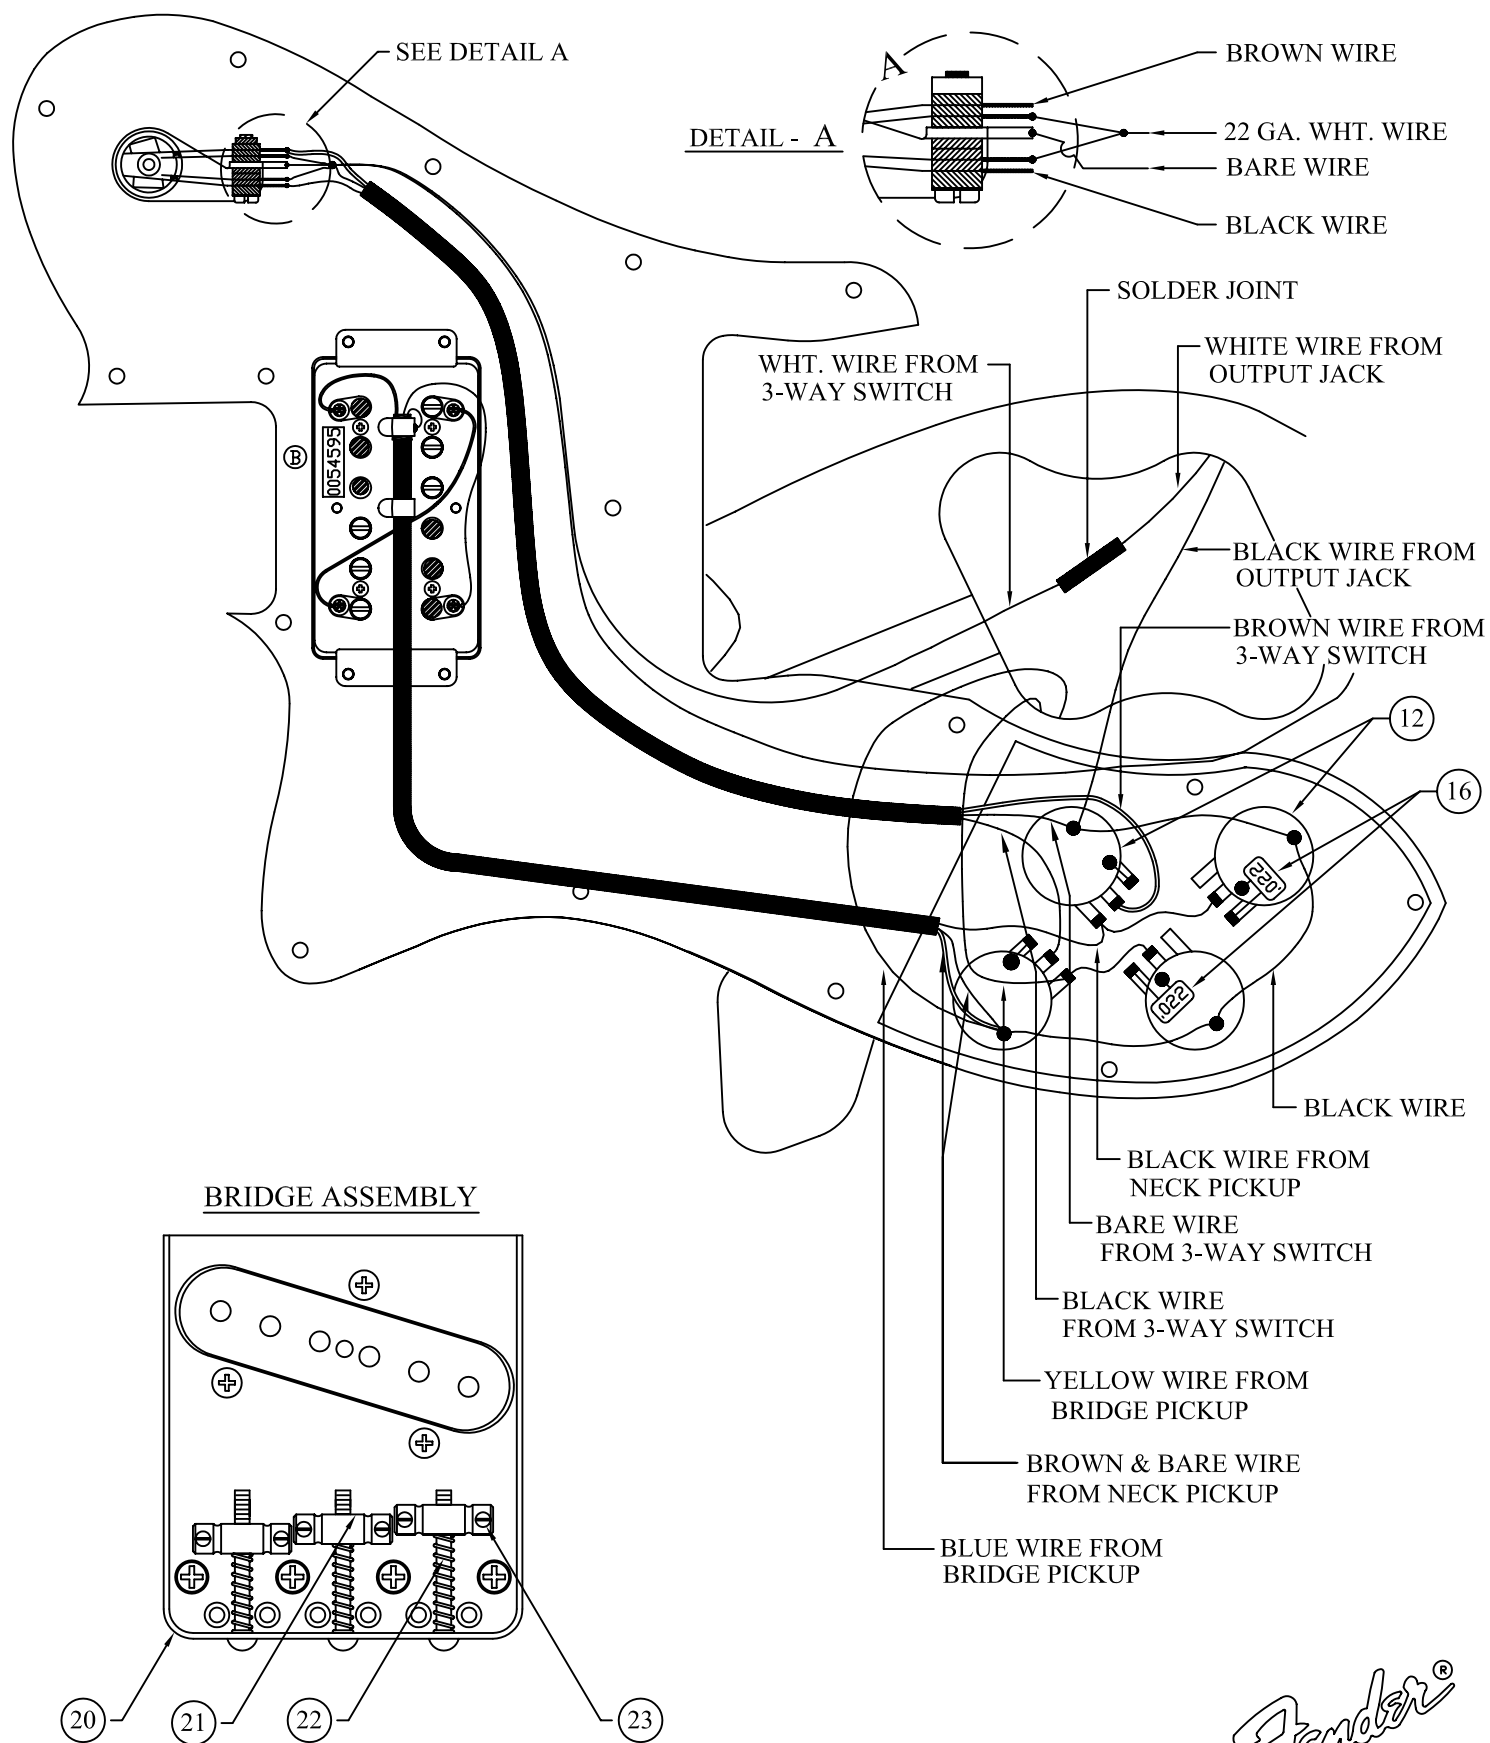

*Fender®*

# '72 TELECASTER® CUSTOM, RW/MN, 013-7500/7502

## SWITCH & CONTROL FUNCTION

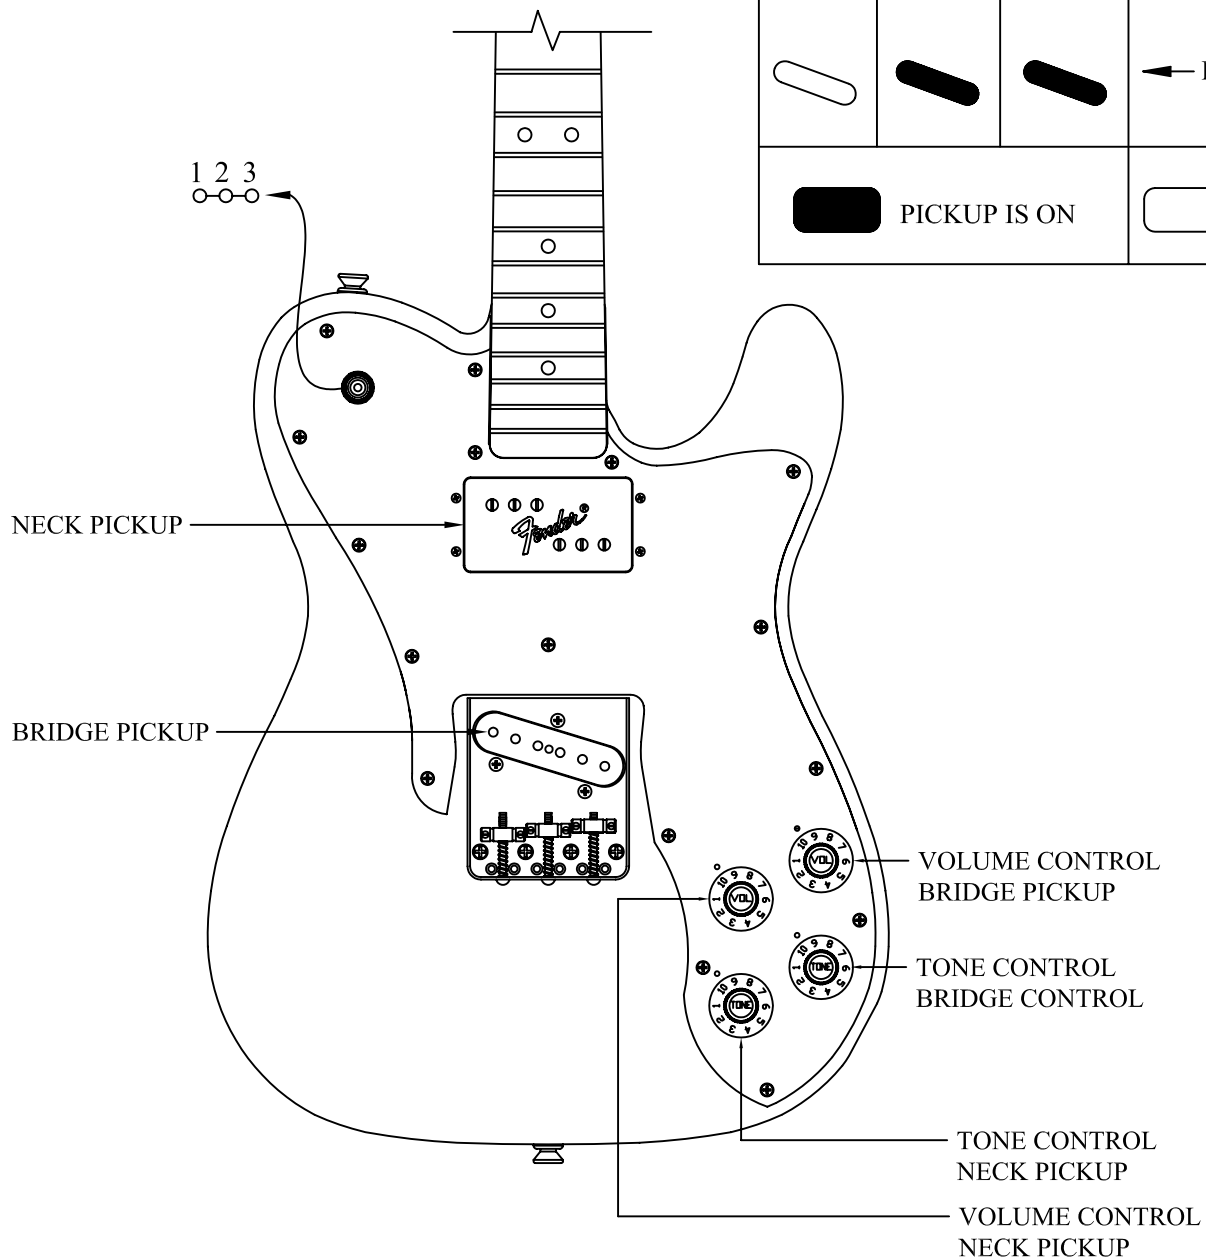

3 WAY SWITCH POSITION			
3 ●—○—○	2 ○—●—○	1 ○—○—●	← 3 WAY SWITCH POSITION
			← NECK PICKUP
			← BRIDGE PICKUP
PICKUP IS ON			PICKUP IS OFF

*Fender®*