



60th ANNIVERSARY AMERICAN SERIES TELECASTER® , 011-6100-700

REF.#	P/N	DESCRIPTION
1	0071961000	Neck, 60th Anniversary Am. Srs. Tele
2	0056260000	Tuning Key (E, B, G, D)
	0058820000	Bushing
	0058815000	Washer
3	0021374000	Tuning Key (2)
	0058820000	Bushing
	0058815000	Washer
4	0083675000	Bone Nut
5	0021537000	String Guide
	0021405000	Mounting Screw
6	0020810000	Truss Rod Adjustment Nut
	0023811000	Truss Rod Adjusting Wrench
7	0055221500	Body, American Telecaster
8	0071951000	Neck Plate, Fender 60th Anniversary
	0021424000	Mounting Screw
9	0063267000	Strap Button
	0016188000	Mounting Screw
	0019056000	Felt Washer, Black
10	0056200000	Pickguard, Tele, P/B/P
	0021407000	Mounting Screw
11	0053780000	Pickup Assy, Rhythm Vintage Tele
	0021409000	Mounting Screw
	0039409000	Tubing
12	0053782000	Pickup Assy, Bridge Vintage Tele
	0048631000	Mounting Screw
	0036878000	Tubing
13	0053290000	Switch, 3-way Grigsby
	0021417000	Mounting Screw
14	0019064000	Control, 250K
	0016352000	Mounting Hex Nut
	0016436000	Lock Washer, Intl
15	0050886000	Control, 250K, No Load
	0016352000	Mounting Hex Nut
	0016436000	Lock Washer, Intl
16	0024832000	Capacitor, .022uF 250V
17	0012869000	Solder Lug
	0015116000	Mounting Screw
18	0018359000	Switch Knob, Vintage Tele
19	0013359000	Knob, Knurled, Chrome
	0028897001	Set Screw
20	0033134000	Control Plate, Telecaster
	0021407000	Mounting Screw
21	0040808000	Output Jack
	0016352000	Mounting Hex Nut
	0016436000	Lock Washer, Intl
	0021452000	Jack Ferrule, Std Tele, Chrome
22	0071960000	Bridge Assembly, 60th Anniversary Am. Srs., Tele
	0021373000	Mounting Screw
23	0028184000	Bridge Plate
24	0026099000	Bridge Section, (6)
25	0031913000	Intonation Screw, (2)
26	0017031000	Intonation Screw, (4)
27	0029095000	Intonation Spring, (2)
28	0029094000	Intonation Spring, (4)
29	0026780000	Height Adjustment Screw, (4)
30	0018027000	Height Adjustment Screw, (8)
31	0021429000	Ferrule, String

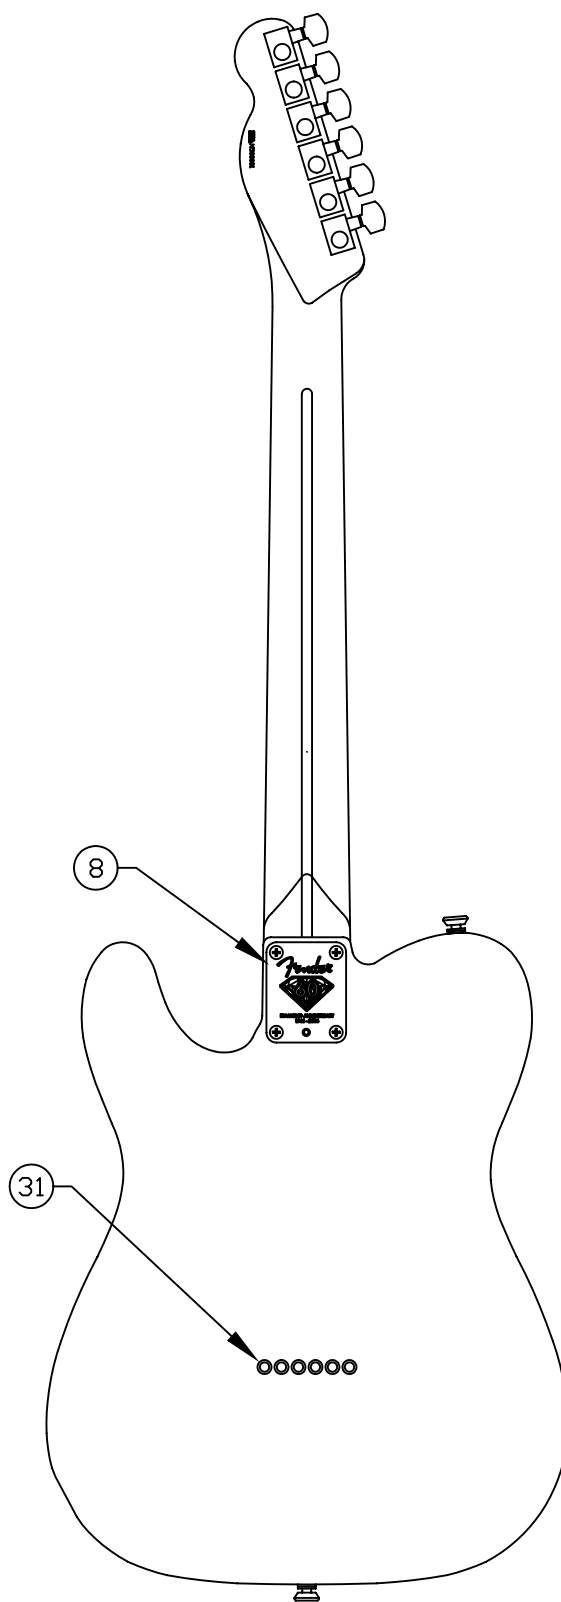


60th ANNIVERSARY AMERICAN SERIES TELECASTER®, 011-6100-700

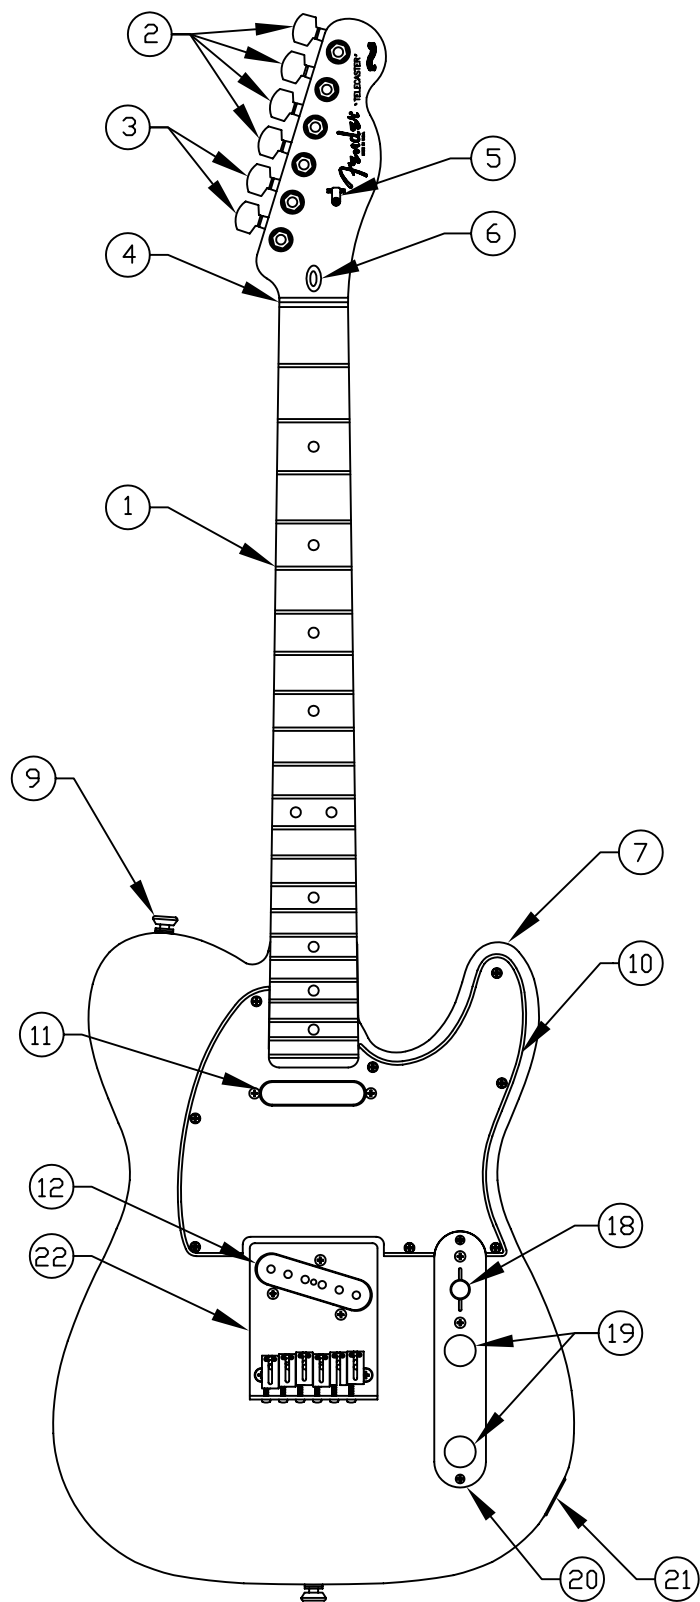


Fender®

WIRING ASSEMBLY

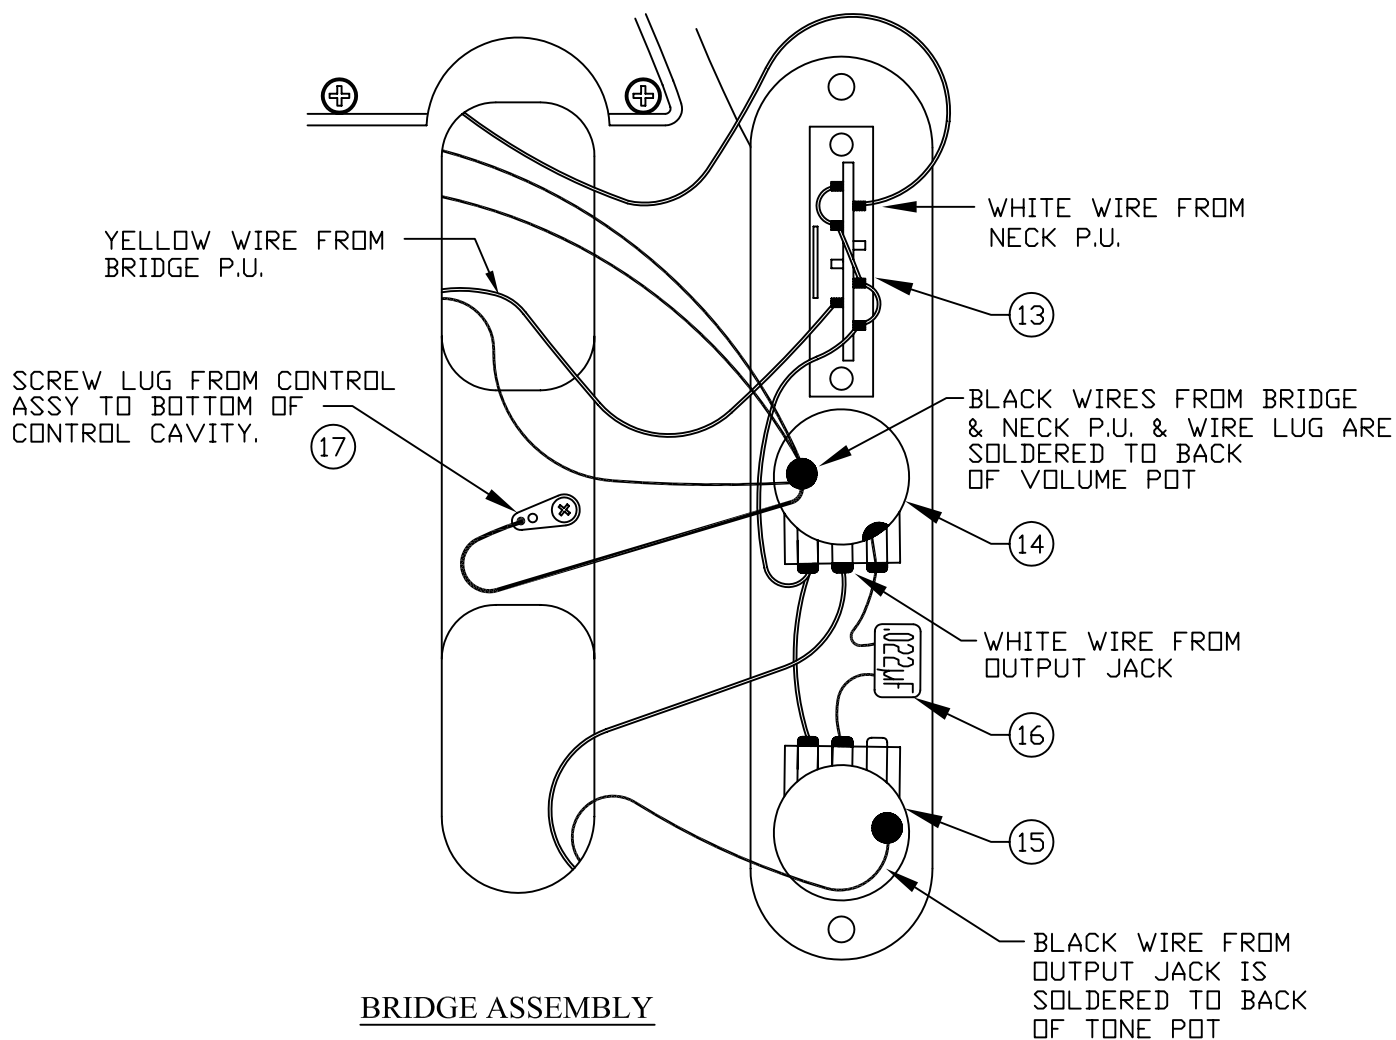


BRIDGE ASSEMBLY

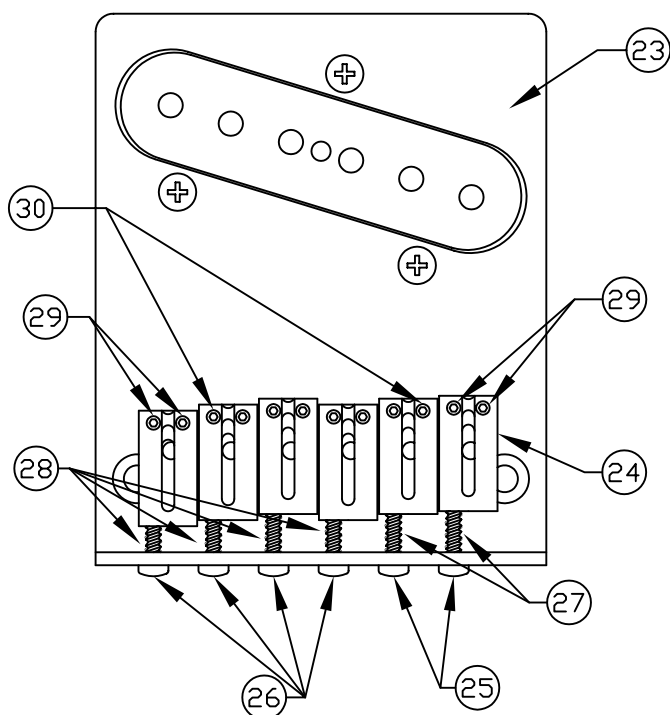

Fender®

CONTROL FUNCTIONS

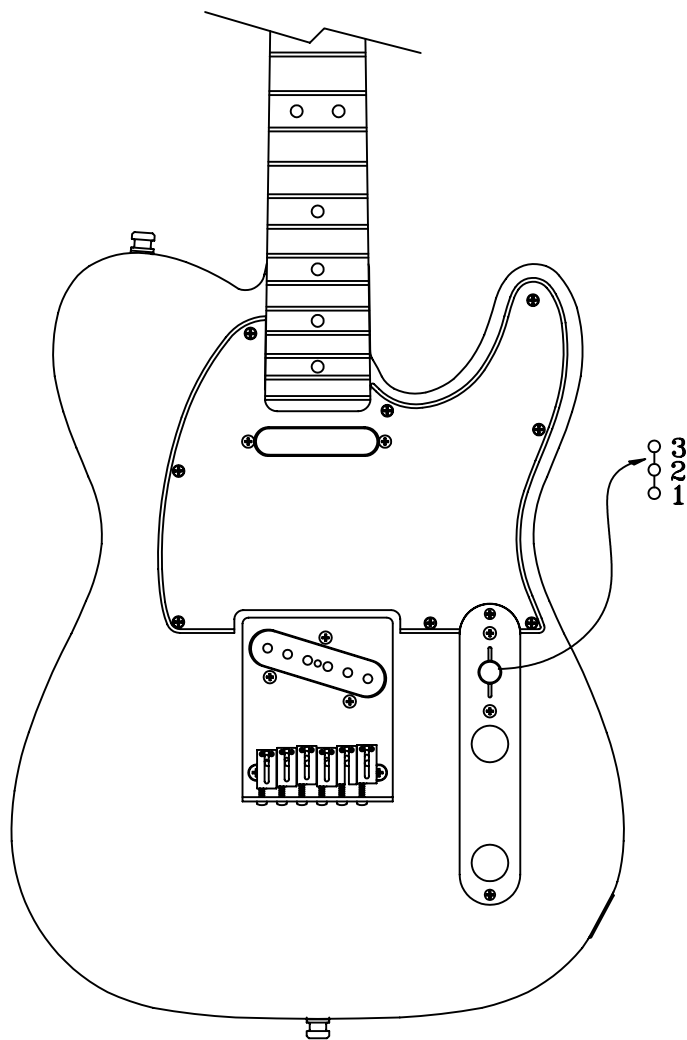

3 WAY SWITCH POSITION			
			
			← NECK PICKUP (A)
			← BRIDGE PICKUP (B)
	PICKUP IS ON		 INDICATES POSITION OF 3 WAY SWITCH
	PICKUP IS OFF		
A	PICKUP (NECK)		
B	PICKUP (BRIDGE)		

Fender®