
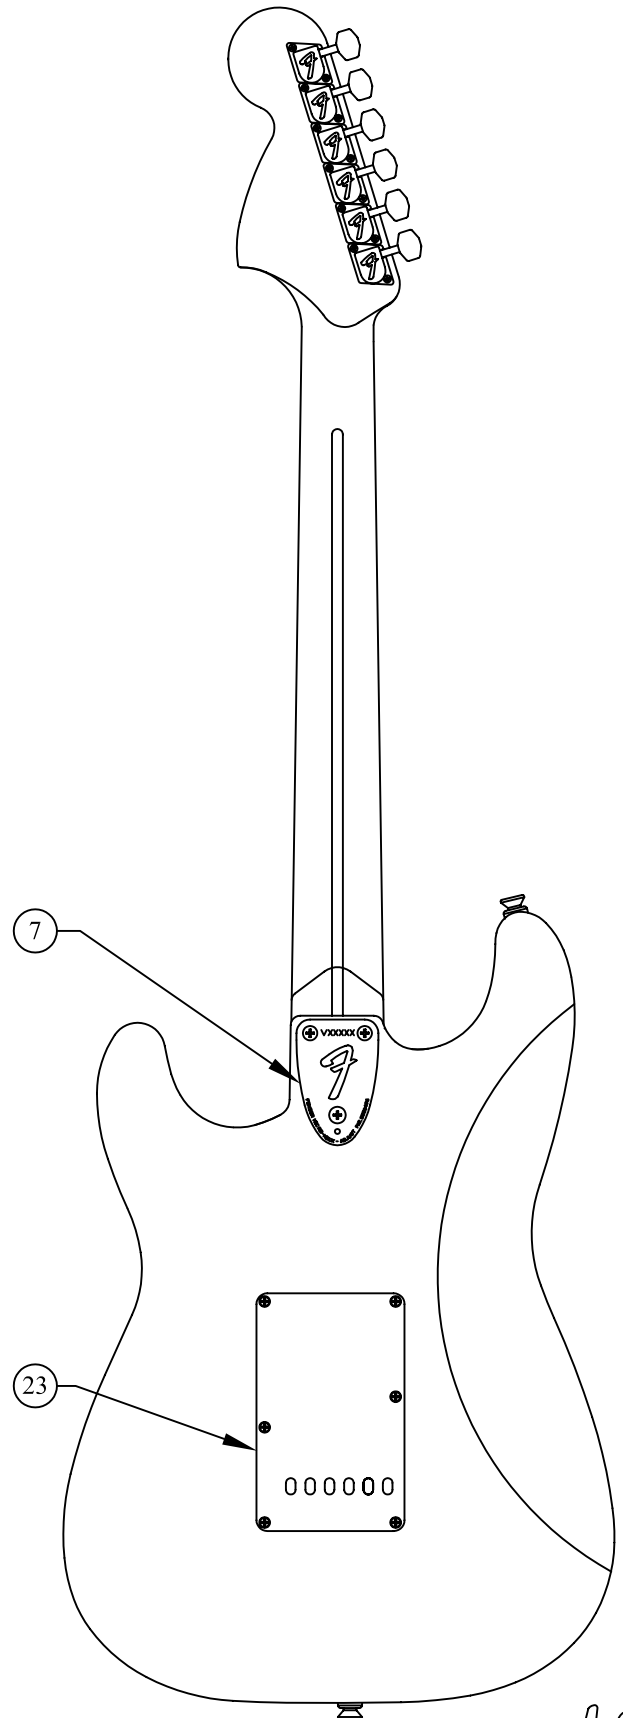


USA 70'S STRATOCASTER®, 010-0070/0072, RW/MN

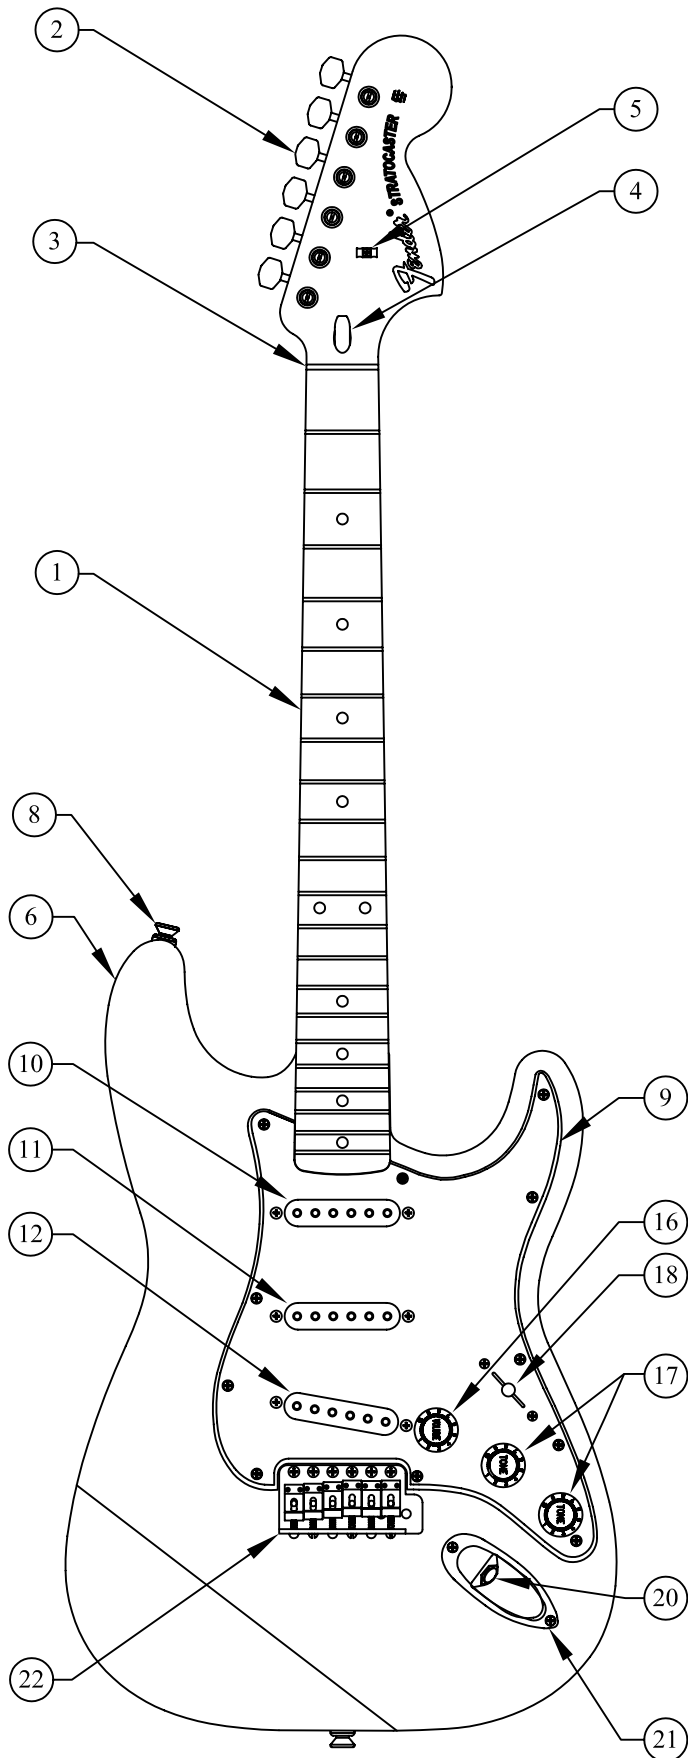

Fender®

USA 70'S STRATOCASTER®, 010-0070/0072, RW/MN

REF.#	P/N	DESCRIPTION	REF.#	P/N	DESCRIPTION
1	0069042000	Neck, USA 70'S Stratocaster®, RW	16	0056254000	Knob Strat ,Volume, Parch
	0069043000	Neck, USA 70'S Stratocaster®, MW	17	0056255000	Knob, Tone, Parch
2	0053684000	Tuning Key, Schaller F Shrt Pst Nos RH	18	0056253000	Knob, Selector Switch, Parch
	0011357000	Mounting Screw	19	0053290000	Switch, 3-Way Grigsby
	0058352000	Bushing		0015776000	Mounting Screw
3	0083675000	Bone Nut	20	0021956000	Output Jack
4	0018531000	Truss Rod Adjusting Wrench		0016436000	Lock Washer
5	0010389000	String Guide		0016352000	Mounting Hex Nut
	0020423000	Spacer	21	0010280090	Jack Ferrule
	0011358000	Mounting Screw		0015578000	Mounting Screw
6	See Chart	Body USA 70'S Stratocaster®	22	0019642000	Bridge Assembly
7	0069038000	Neck Mounting Plate		0019652040	Tremolo Arm
	0015636000	Mounting Screw		0010272100	Tremolo Claw
	0012156000	Tilt Adjustment Screw		0031643000	Tremolo Spring
	0020972000	Tilt Adjusting Set Screw		0016170000	Mounting Screw
	0018531000	Tilt Adjusting Wrench		0019470000	Bridge Plate
8	0012344000	Strap Button		0019280000	Bridge Section, (6)
	0015610000	Mounting Screw		0015693000	Intonation Screw, (6)
9	0054622002	Pickguard, USA 70's Strat, W/B/W		0019273000	Intonation Spring, (1&2)
	0015578000	Mounting Screw		0019281000	Intonation Spring, (3-6)
10	0069035000	Pickup, Neck		0032782000	Height Adjustment Screw, (1&6)
	0015776000	Mounting Screw		0016071000	Height Adjustment Screw, (2-5)
	0036481000	Mounting Tube		0019473000	Bridge Block
11	0069035000	Pickup, Middle		0019656000	Plate-to-Block Mounting Screw
	0015776000	Mounting Screw		0012180000	Spring, Tremolo
	0036481000	Mounting Tube	23	0019649000	Back Plate White Vintage Stratocaster®
12	0069035000	Pickup, Bridge		0015578000	Mounting Screw
	0015776000	Mounting Screw			
	0036481000	Mounting Tube			
13	0013446000	Control 250K, Volume			
	0016352000	Mounting Nut			
	0056790000	Lock Washer			
14	0013446000	Control 250K, Tone			
	0015552000	Capacitor, CD .05uF, 100V			
	0016352000	Mounting Nut			
	0056790000	Lock Washer			
15	0013446000	Control 250K. Tone			
	0016352000	Mounting Nut			
	0056790000	Lock Washer			


BODY CHART

Part #	Color
0069041500	3-Color Sunburst
0072033505	Olympic White
0072033506	Black
0069041521	Natural



USA 70'S STRATOCASTER®, 010-0070/0072, RW/MN

SWITCH & CONTROL FUNCTION

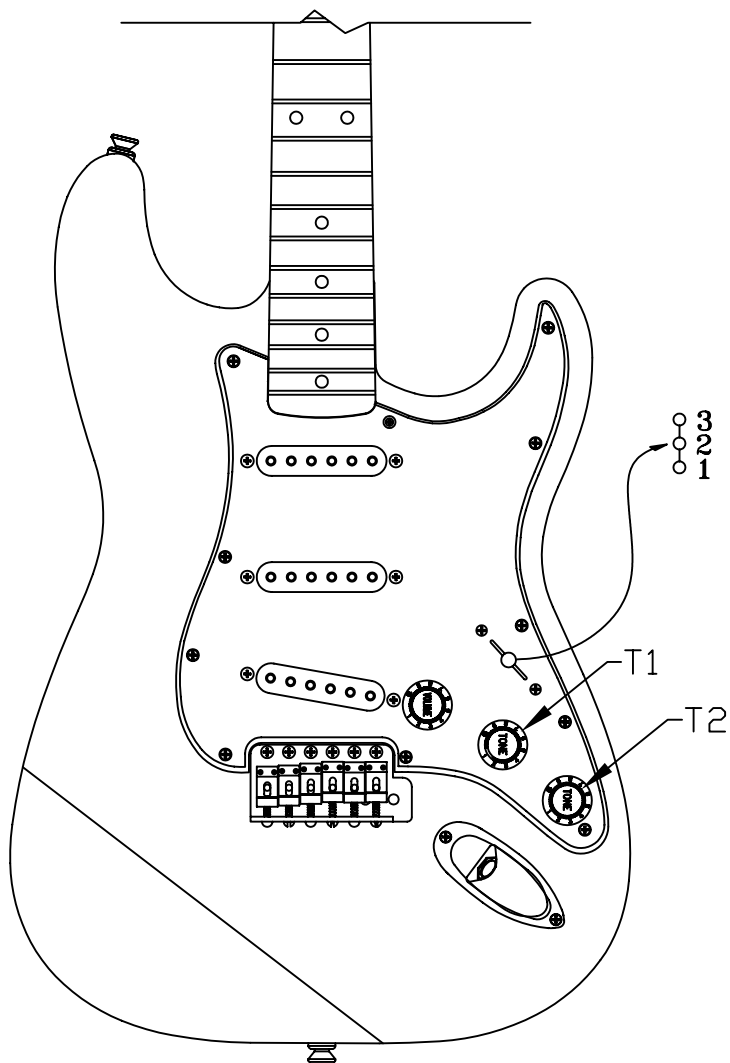


3 WAY SWITCH POSITION			
 3	 2	 1	
T1	T2	NT	
			← NECK PICKUP (A)
			← MIDDLE PICKUP (B)
			← BRIDGE PICKUP (C)
	PICKUP IS ON		
	PICKUP IS OFF		
A	PICKUP (NECK)		
B	PICKUP (MIDDLE)		
C	PICKUP (BRIDGE)		
NT	NO TONE		



INDICATES POSITION
OF 3 WAY SWITCH

WIRING DIAGRAM

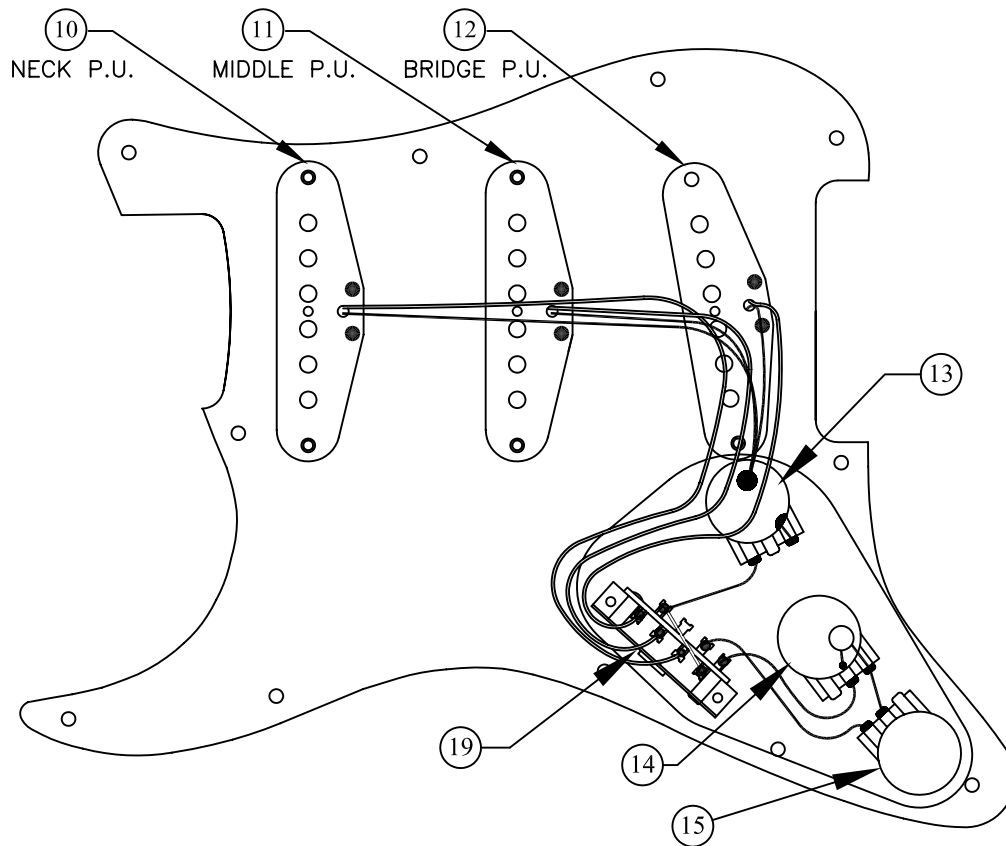

BRIDGE ASSY

