


AMERICAN DELUXE TELECASTER® 2013 (0119400XXX)(0119402XXX)

PARTS LAYOUT

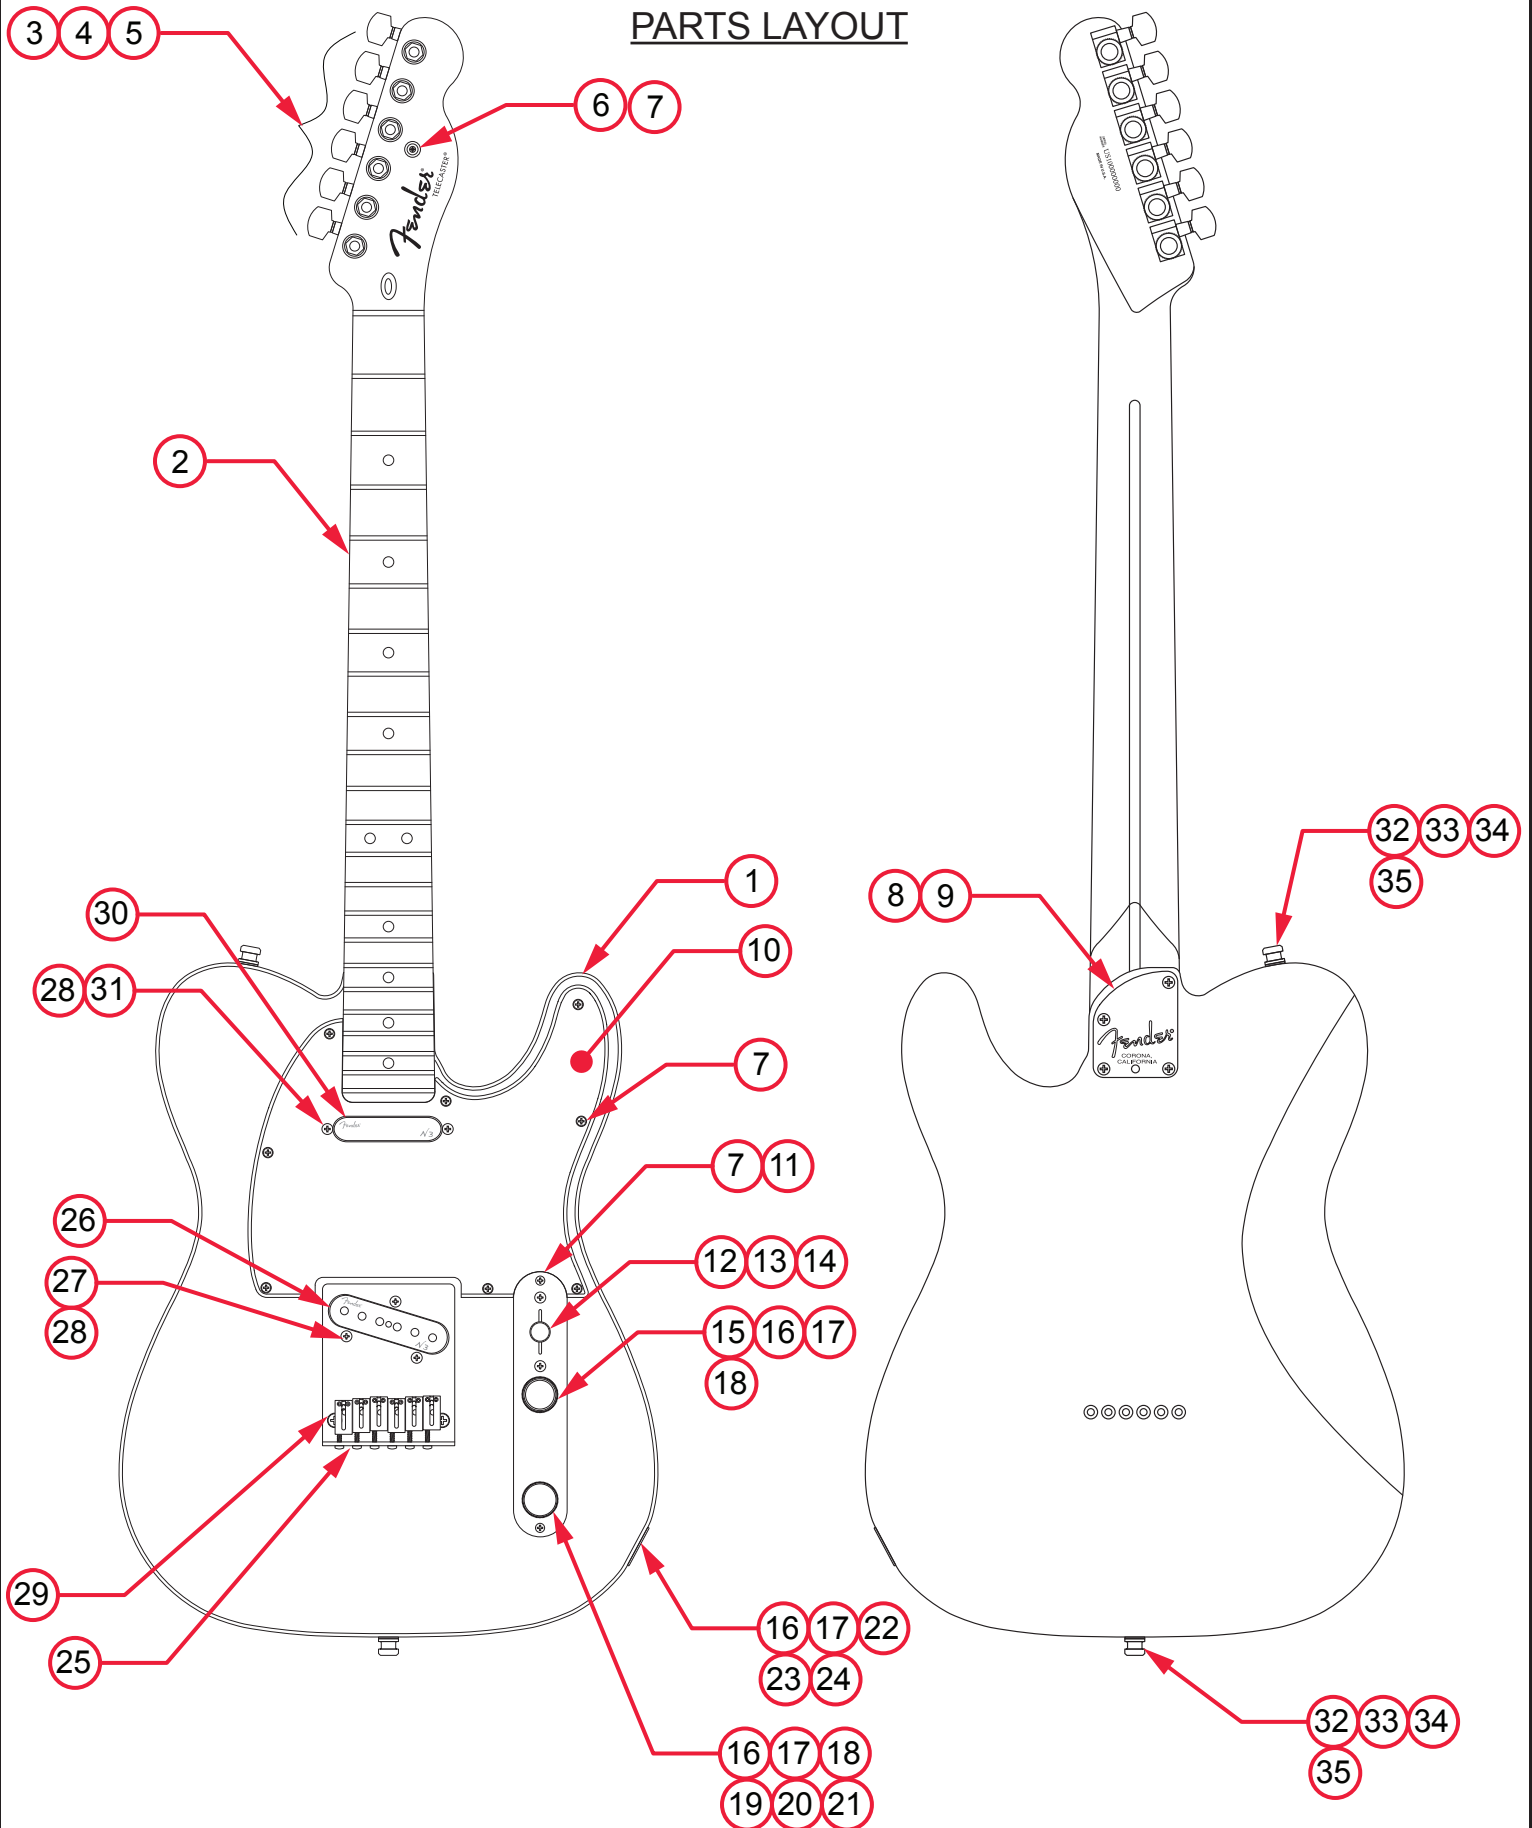

AMERICAN DELUXE TELECASTER® 2013 (0119400XXX)(0119402XXX)

PARTS LIST

REF#	DESCRIPTION	PART NUMBER
1	BODY AM DLX TELE TNG	0079353559
1	BODY AM DLX TELE ACB	0079354531
1	BODY AM DLX TELE OLP	0079355523
1	BODY AM DLX TELE CAR	0079353509
1	BODY AM DLX TELE 3TS	0079354500
2	NECK ASSY AM DLX TELE MPL UPGRD	0077686000
2	NECK ASSY AM DLX TELE RW UPGRD	0077685000
3	FENDER LOCKING TUNERS CHROME	0990818100
4	WASHERS KEY	0053106049
5	BUSHINGS KEY	0058820049
6	STRING GUIDE VINT /DLX TELE CHROME	0054625000
7	SCREW SMAB 4 X 1/2 OHP ZA CHR	0994923000
8	NECK PLATE DLX STRAT RH CHROME	0059209000
9	SCREW 8 X 1-3/4 OHP ZARTAN	0021424049
10	PICKGUARD AM STD MG/BLK/MG	0056083000
10	PICKGUARD AM STD B/W/B	0073054000
10	PICKGUARD AM STD BRN SHL	0041627000
10	PICKGUARD AM STD AGD PRL	0064061000
11	CONTROL PLATE TELE VINT CHROME	0093823000
12	3 WAY LEVER SWITCH	0992041000
13	SWITCH KNOB VINT TELE	0994936000
14	SCREW 6-32 X 5/8 ZARTAN	0994925000
15	SW KNOB TELE/P-BASS CHROME	0059272000
15A	SW CAP TELE/P-BASS CHROME	0059270000
*15B	COUPLING SLEEVE SOSH NYL	0059278000
*15C	SW/POT ASSY S-1 250K SOSH	0078979000
*16	NUT HEX 3/8-32 X 3/32 TK NI	0016352049
*17	WASHER LOCK INTL 3/8 X .687	0016436049
18	SCREW SET 8-32 X 3/16	9949220000
19	KNOB CONTROL ALUM CHROME	0095799000
*20	CONTROL 250K 10% TAPER NO LOAD SOSH	0078782000
*21	CAPACITOR MPF RDL .022µF 250V	0024832049
*22	JACK PHONE OPEN CIRUIT 11	0021956049
23	JACK FERRULE STD TELE CHROME	0021452000
*24	RETAINER JACK NI PLT TELE	0010355069

*= NOT PICTURED IN DIAGRAM




AMERICAN DELUXE TELECASTER® 2013 (0119400XXX)(0119402XXX)

[illegible]

*= NOT PICTURED IN DIAGRAM


AMERICAN DELUXE TELECASTER® 2013 (0119400XXX)(0119402XXX)

WIRING ASSEMBLY

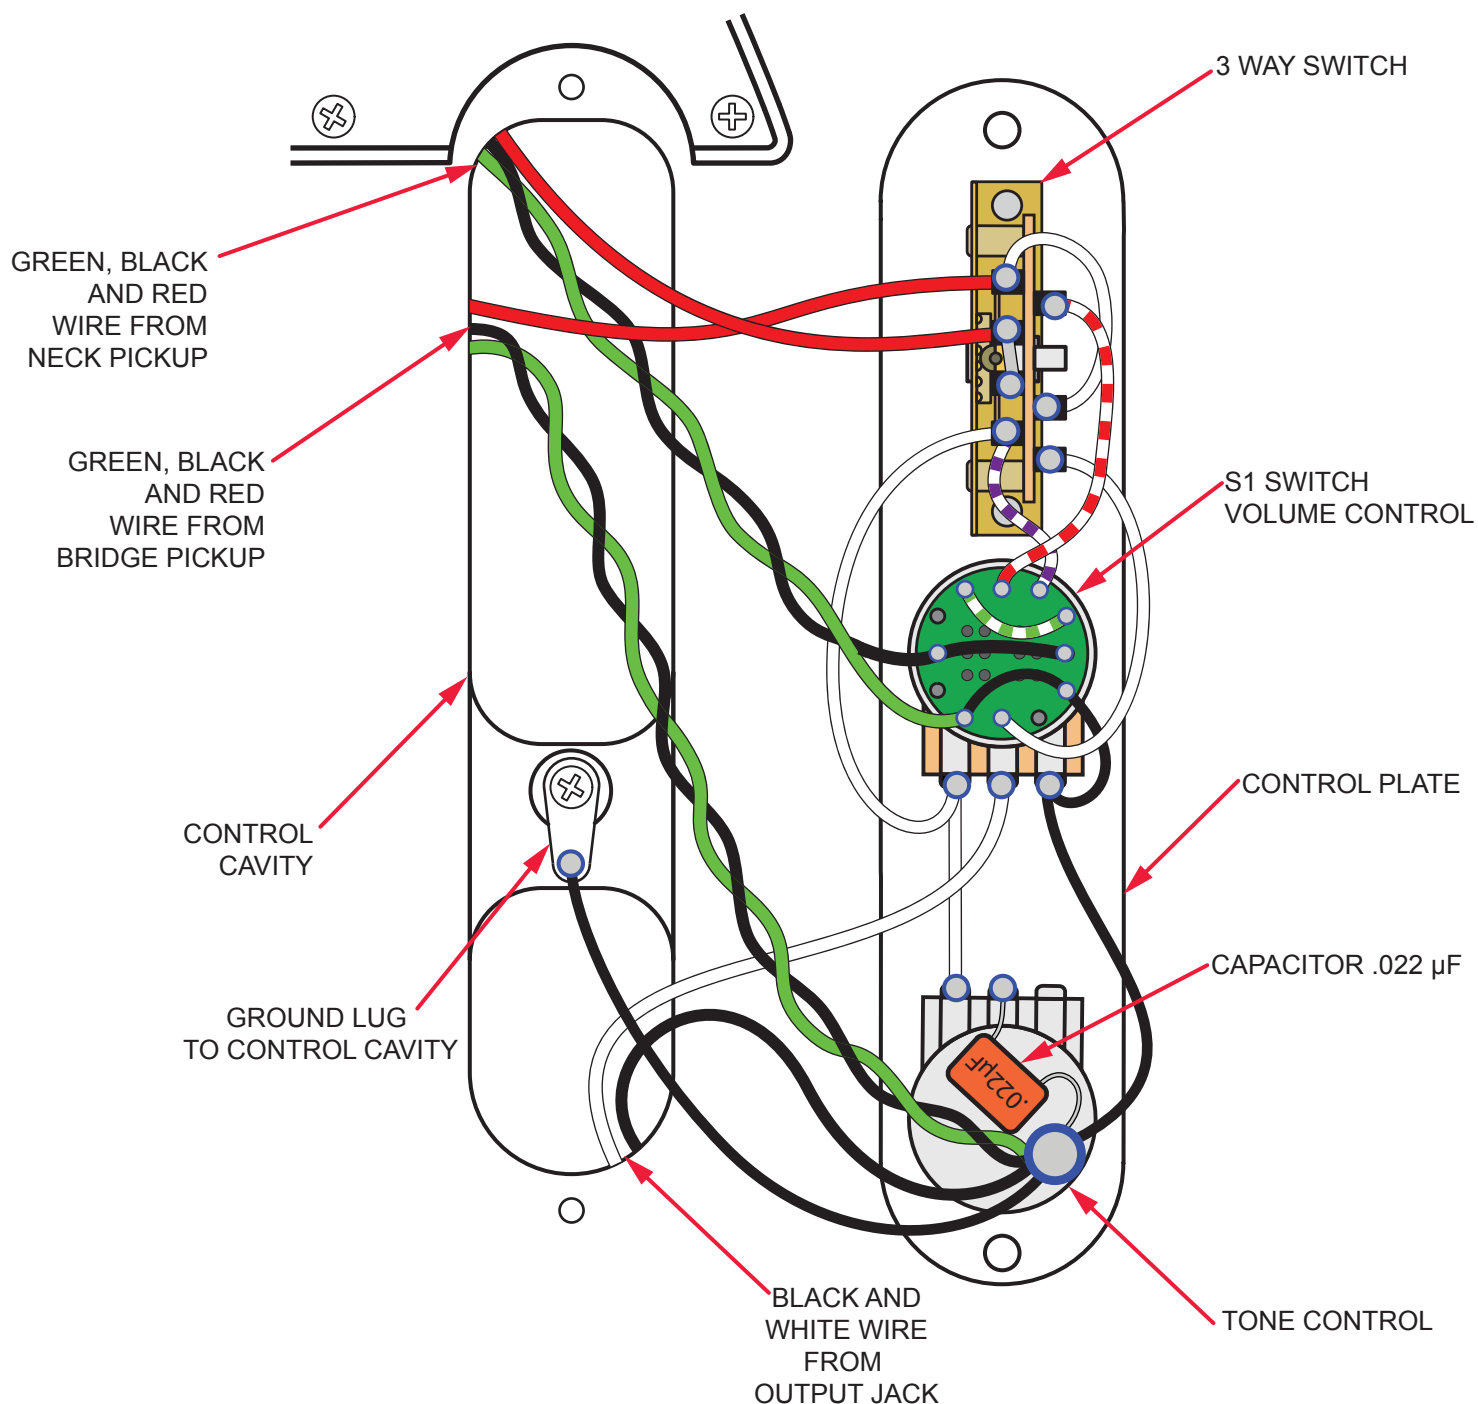

AMERICAN DELUXE TELECASTER® 2013 (0119400XXX)(0119402XXX)

SWITCH AND CONTROL FUNCTION

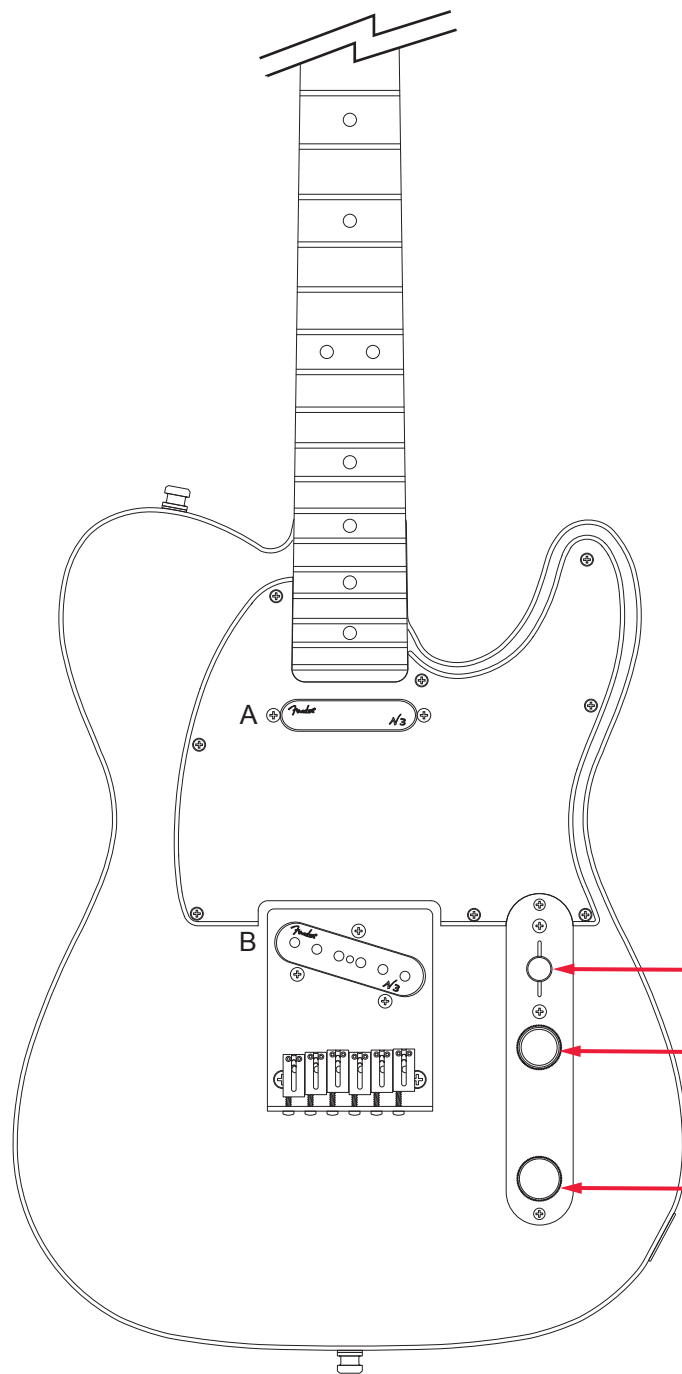

3 WAY SWITCH POSITIONS			
			← 3 WAY SWITCH POSITION
			← NECK PICKUP (A)
			← BRIDGE PICKUP (B)
3 WAY & S1 SWITCH POSITIONS			
	S1 SWITCH FUNCTIONS WORK IN #2 POSITION OF 3 WAY SWITCH <u>ONLY</u>		
		OFF - UP POSITION - S1 SWITCH CONNECTS PICKUPS PARALLEL	
		ON - DOWN POSITION - S1 SWITCH CONNECTS PICKUPS IN SERIES	
	PICKUP IS ON	 INDICATES 3 WAY SWITCH POSITION	
	PICKUP IS OFF		

3 WAY SWITCH

S 1 SWITCH / MASTER VOLUME

MASTER TONE