


CLASSIC PLAYER BAJA 60'S TELECASTER ® (014-1510-XXX)

PARTS LAYOUT

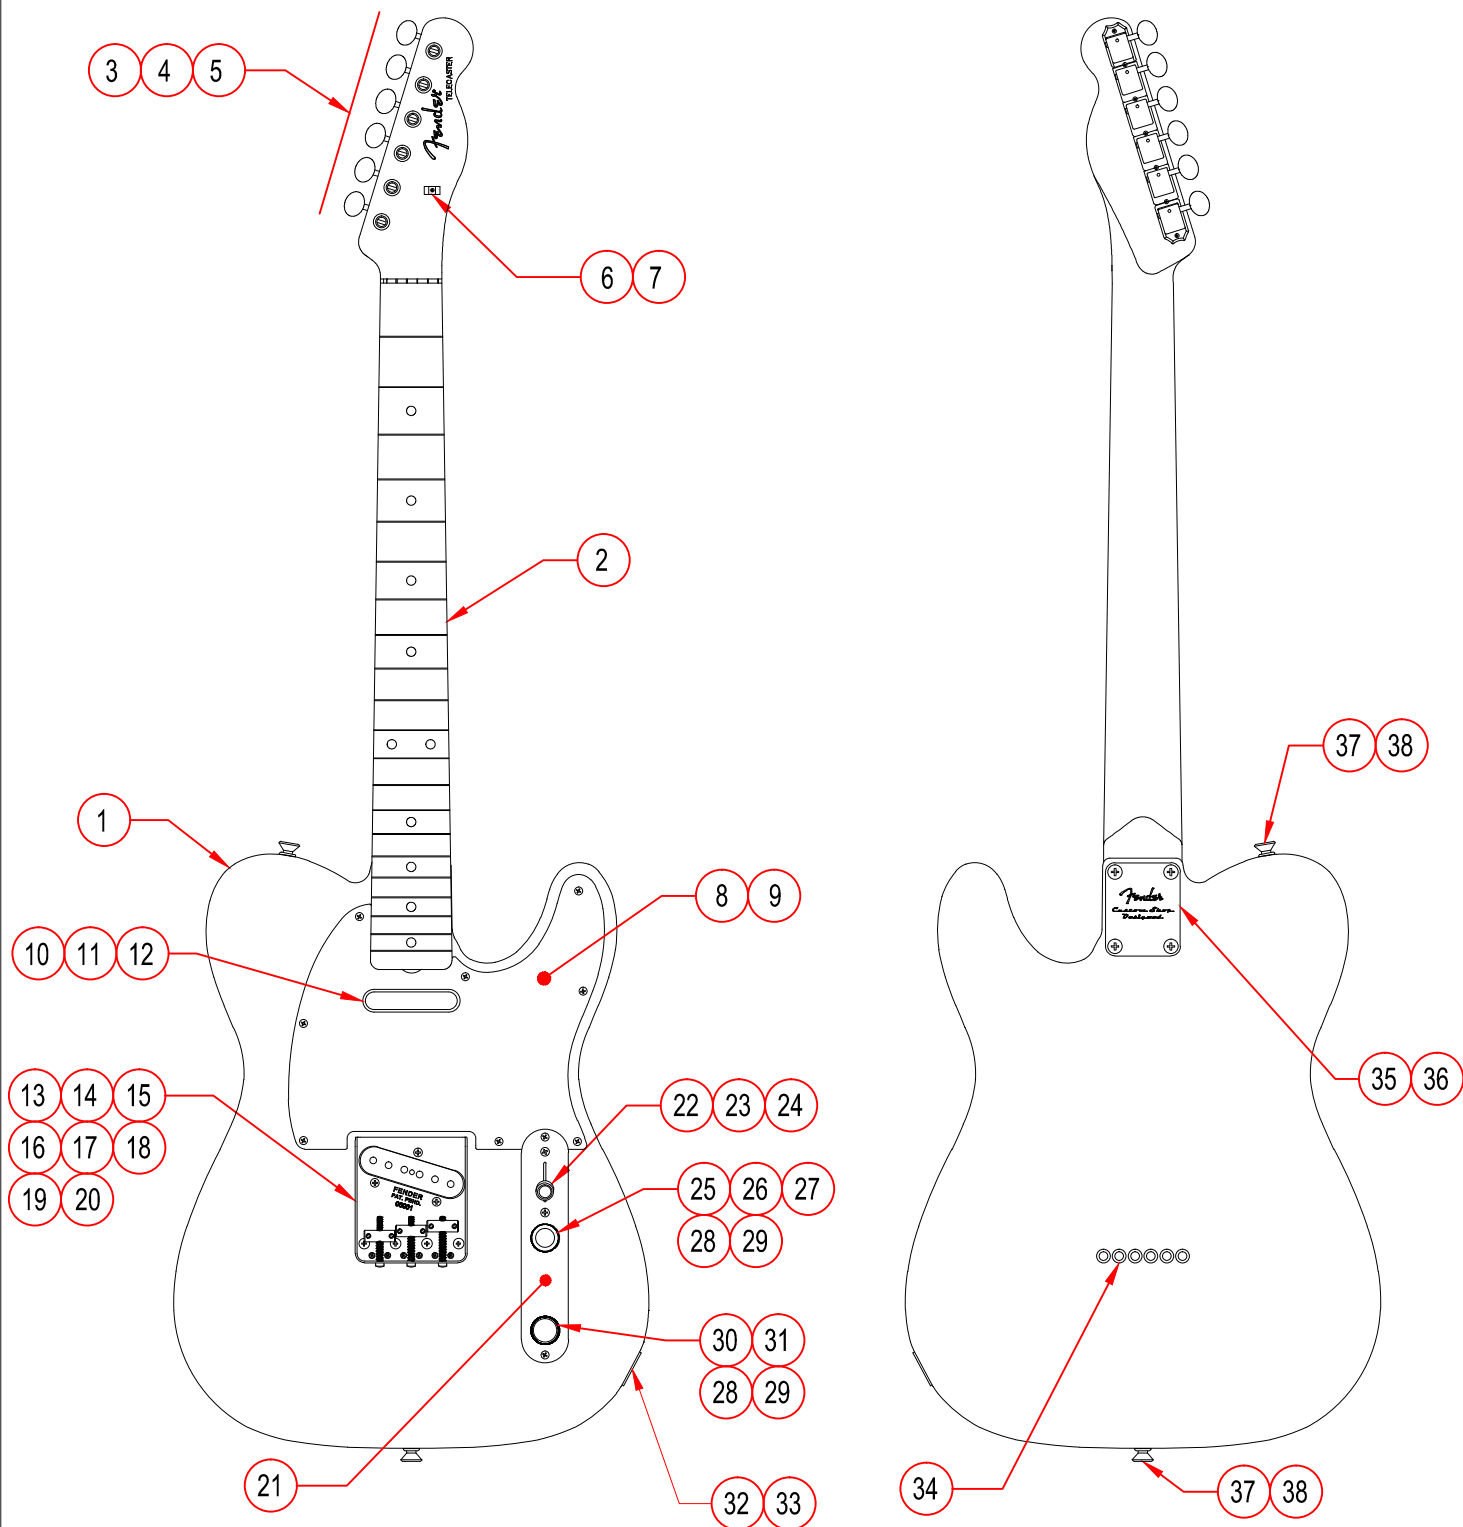

CLASSIC PLAYER BAJA 60'S TELECASTER ® (014-1510-XXX)

PARTS LIST

| REF # | DESCRIPTION | PART NUMBER |
|-------|---------------------------------------|-------------|
| 1 | BODY CLSC PLYR BAJA 60S TELE 3TSB | 7704736500 |
| | BODY CLSC PLYR BAJA 60S TELE CAR B&P | 7704736509 |
| | BODY CLSC PLYR BAJA 60S TELE FSNB B&P | 7704736572 |
| 2 | NECK CLSC PLYR BAJA 60S TELE RW PNT | 7704740000 |
| 3 | KEY, VINT ST | 0047912000 |
| 4 | BUSHING KEY VINT | 0053020000 |
| 5 | SCRW SMAB 3x3/8 RHP NI | 0011357049 |
| 6 | STRING GUIDE NICKEL | 0994910000 |
| 7 | SCRW SMA 3x5/8 RHP NI | 0011358000 |
| 8 | PICKGUARD 60's TELE P/B/P | 0073027000 |
| | PICKGUARD 62 CUST TELE MG/B/MG | 0056077000 |
| 9 | SCRW SMAB 4x1/2 OHP NI | 0015578049 |
| 10 | PICKUP ASSY 60's BAJA TELE NECK CHR | 7705554000 |
| 11 | SCRW WD RND HD 3 X 1 NI | 0016295049 |
| 12 | TUBING LATEX CUT .550 x 1/8 | 0992233000 |
| 13 | PICKUP ASSY 58 TELE BRIDGE | 0992233000 |
| 14 | BRIDGE PLATE VINT TELE KAN BAN | 0054162049 |
| 15 | BRIDGE SECT VINT TELE | 0990843000 |
| 16 | SCRW 6-32X3/4 RHP TAPTRI L ZA | 0048631049 |
| 17 | TUBING, LATEX CUT .425 x 1/8 | 0039409000 |
| 18 | SPRING COMPRESSION 1 1/16 #144 | 0018689049 |
| 19 | SCREW ST 6-32x7/16 OVPT,SL,NI | 0016105049 |
| 20 | SCRW M 6-32x1-1/4 RHP NI | 0015834049 |
| 21 | PLATE CONTROL MEX TELE | 0992058000 |
| 22 | SWITCH LEVER 4 WAY | 0992250000 |
| 23 | KNOB SWITCH VINT TELE | 0994936000 |
| 24 | SCREW-MA 6-32X5/8 RH ZARTAN | 0994925000 |
| 25 | SW/POT ASSY S-1 250K .25B SOSH | 0061260000 |
| 26 | SW KNOB TELE/P BASS CHR | 0059272049 |
| 27 | SW CAP TELE/P BASS CHROME | 0059270000 |
| 28 | NUT HEX 3/8-32x3/32 TK NI | 0016352049 |
| 29 | WASHER LOCK INTL 3/8 X .687 | 0016436049 |
| 30 | CONTROL 250K 10% AUDIO METAL | 0990831000 |
| 31 | KNOB KNURLED CHROME | 0991366000 |
| 32 | JACK PHONE 1/4 - OUTPUT | 0047329049 |
| 33 | FERRULE JACK STD TELE TUMBLE | 0021452004 |




CLASSIC PLAYER BAJA 60'S TELECASTER ® (014-1510-XXX)

PARTS LIST

[illegible]


CLASSIC PLAYER BAJA 60'S TELECASTER ® (014-1510-XXX)

WIRING DIAGRAM

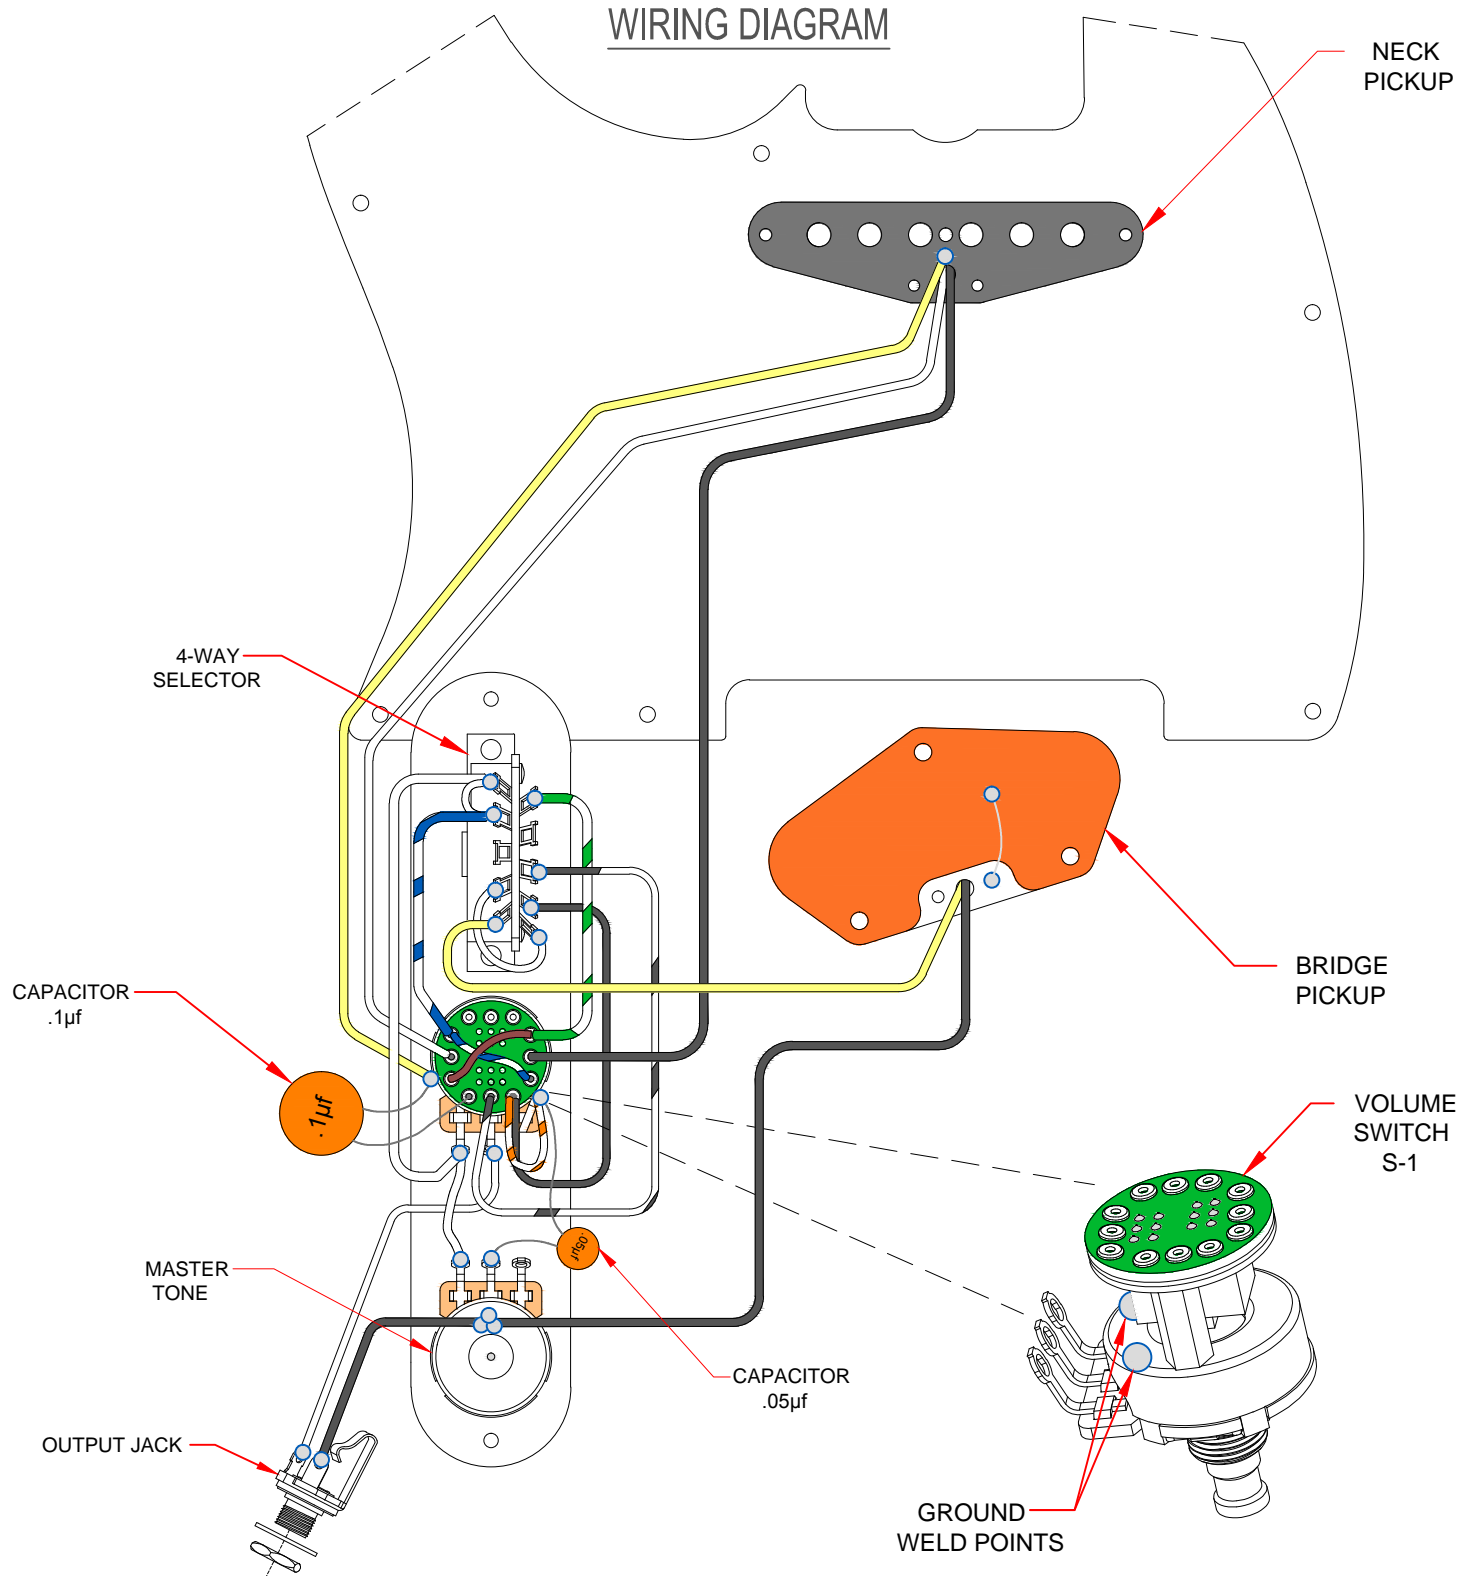

CLASSIC PLAYER BAJA 60'S TELECASTER ® (014-1510-XXX)

SWITCH & CONTROL FUNCTION

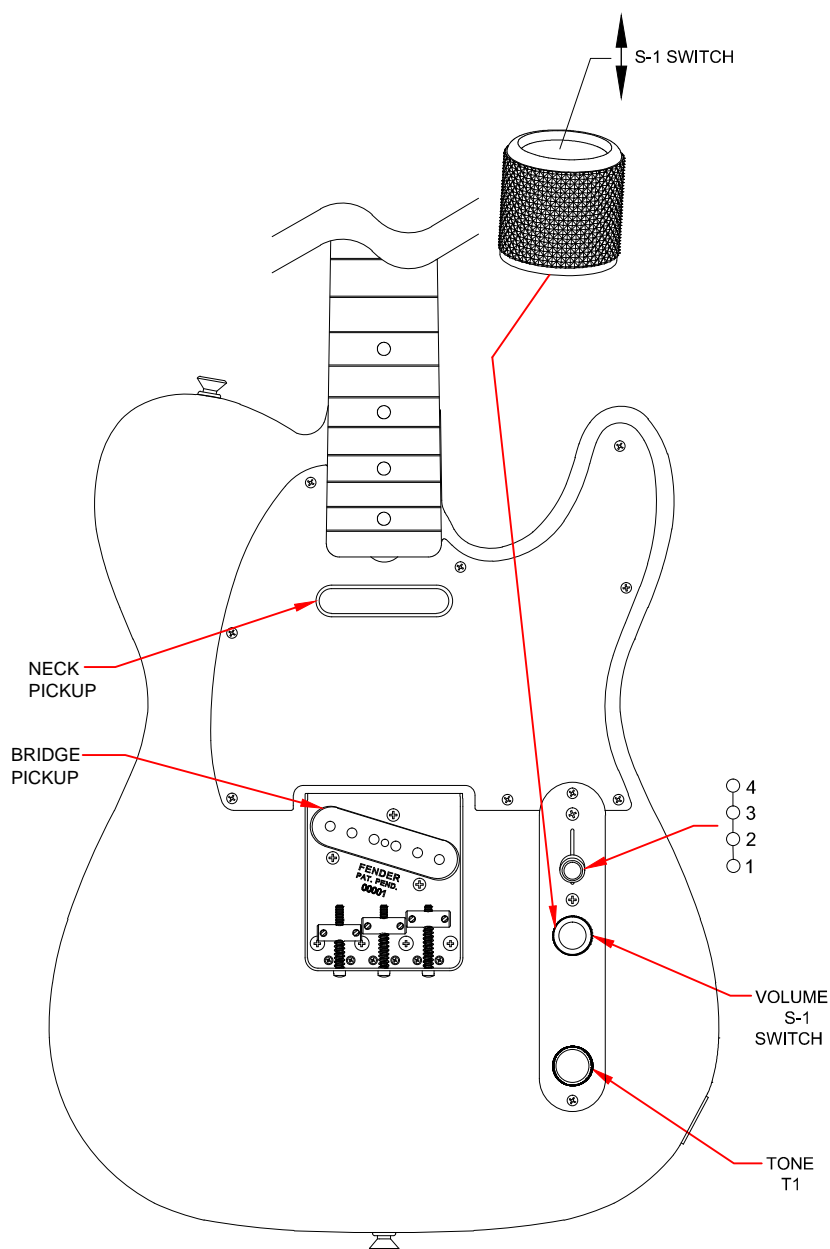

S-1 SWITCH OFF (DOWN POSITION)

| | | | | |
|--------|----|----------|----|-----------------|
| | | | | SWITCH POSITION |
| T1 | T1 | T1 | T1 | ← TONE CONTROL |
| | | | | ← NECK PICKUP |
| | | | | ← BRIDGE PICKUP |
| SERIES | | PARALELL | | |

| | | | |
|--|--------------|--|---------------|
| | | | |
| | PICKUP IS ON | | PICKUP IS OFF |

S-1 SWITCH ON (UP POSITION)

| | | | | |
|---------------------|----|-----------------------|----|-----------------|
| | | | | SWITCH POSITION |
| T1 | T1 | T1 | T1 | ← TONE CONTROL |
| | | | | ← NECK PICKUP |
| | | | | ← BRIDGE PICKUP |
| SERIES OUT OF PHASE | | PARALELL OUT OF PHASE | | |