


DLX TRIPLE PLAY STRAT ® (014-1800-300 / 014-1800-306)

PARTS LAYOUT

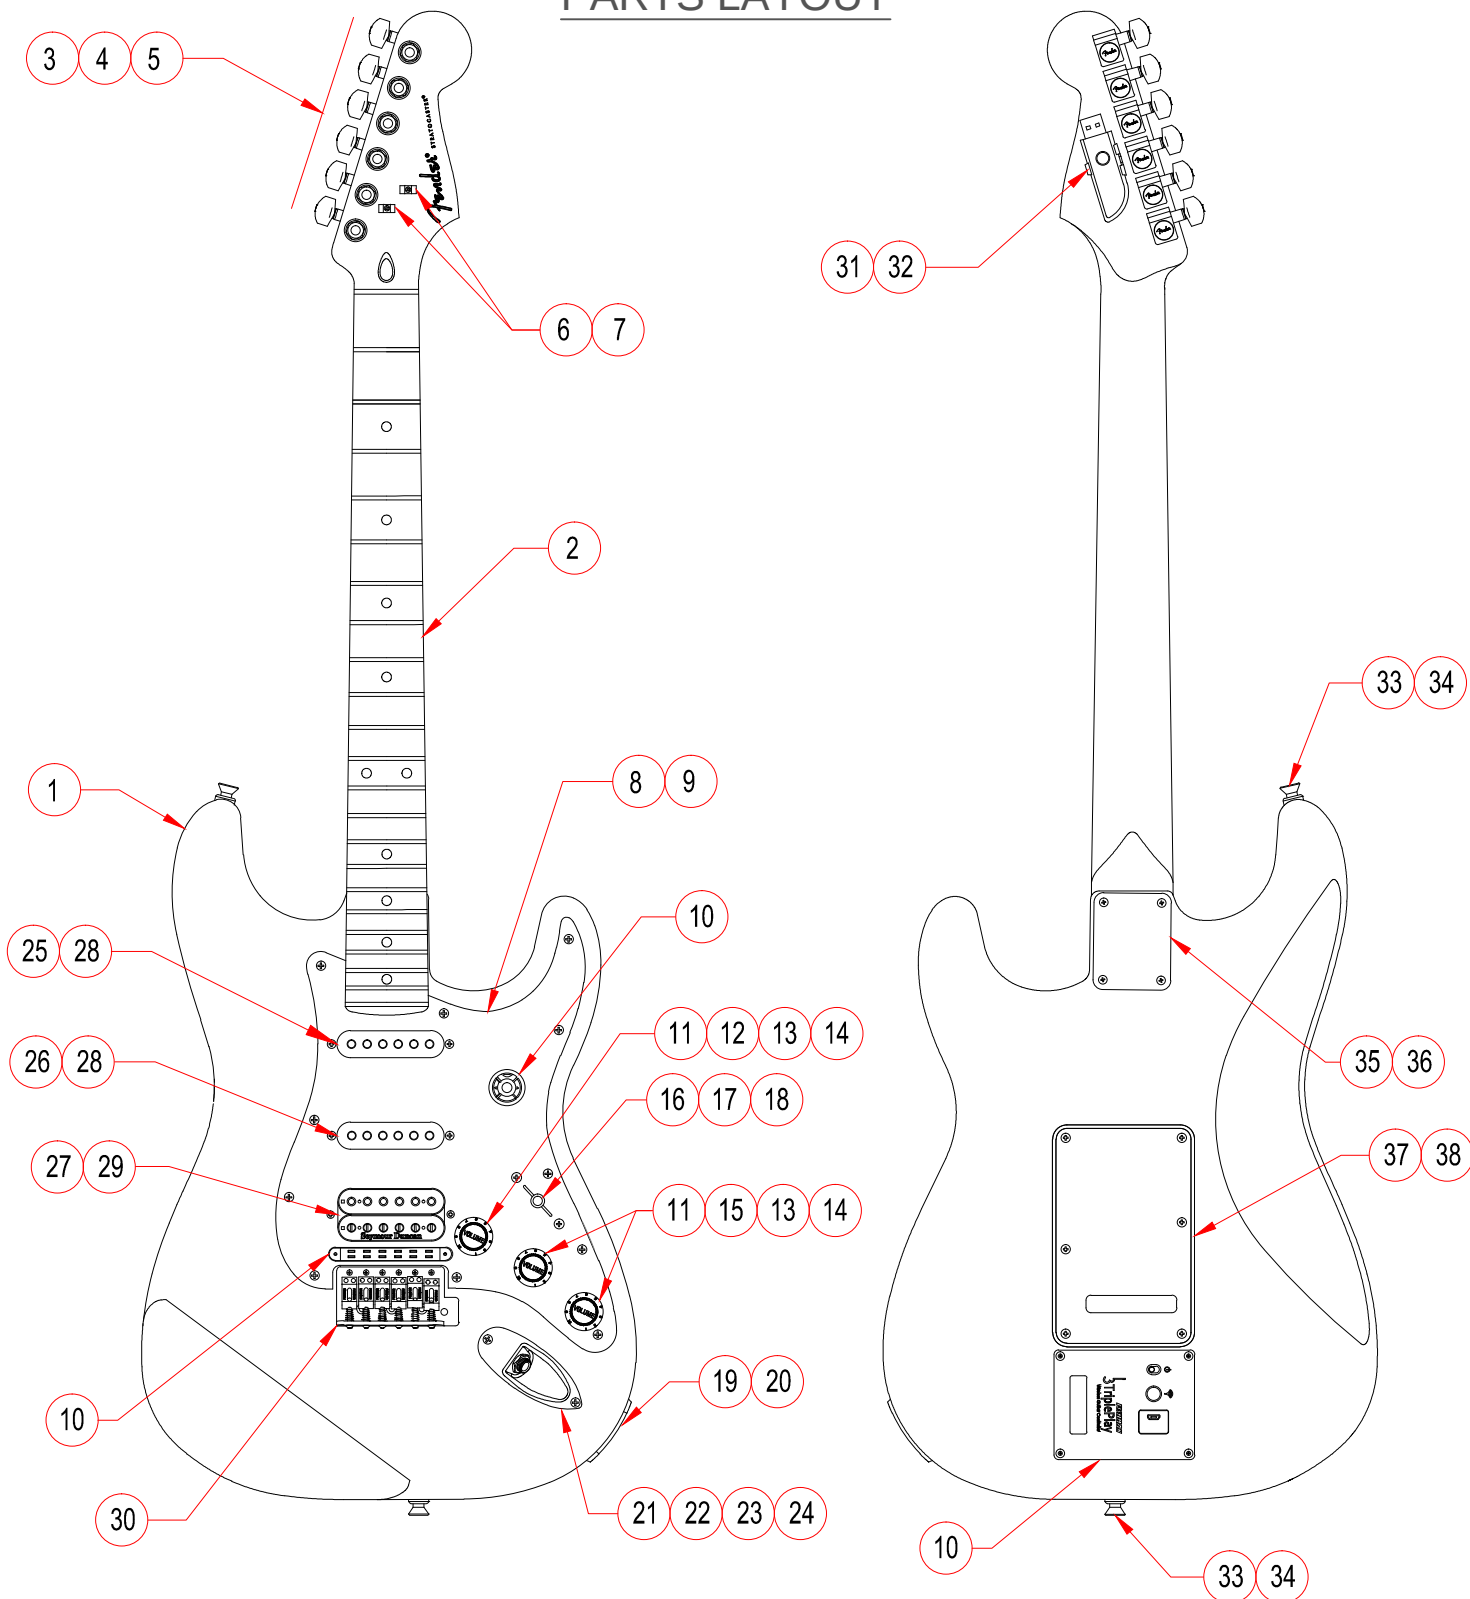

Fender

DLX TRIPLE PLAY STRAT ® (014-1800-300 / 014-1800-306)

PARTS LIST

REF #	DESCRIPTION	PART NUMBER
1	BODY STRAT TRPLPLY BLK	7704174506
	BODY STRAT TRPLPLY 3TSB	7704173500
2	KEY GTR DUAL PIN MNT	0037429000
	NECK STRAT TRPLPLY RW	7704182000
3	KEY GTR DUAL PIN MNT	0990820100
4	WASHER KEY	0053106049
5	BUSHING KEYS	0058820049
6	STRING GUIDE NICKEL	0994910000
7	SCRW SMA 3x5/8 RHP NI	0011358049
8	PICKGUARD STRAT 1HB P/B/P TRPLPLY BVL	7704175002
9	SCRW SMAB 4x1/2 OHP NI	0015578049
10	FISHMAN TRIPLE PLAY KIT	7702534000
11	KNOB STRAT VOLUME PARCH	0056254049
12	CONTROL 250K 10% TPR	0990830000
13	WASHER LOCK INTL 3/8 X .687	0016436049
14	NUT HEX 3/8-32x3/32 TK NI	0016352049
15	CONTROL B25K 10% TAPER	7702473000
16	SWITCH 5 WAY LEVER W/METAL	0991367000
17	SCREW-MA 6-32X5/8 RH ZARTAN	0994925000
18	KNOB PICKUP SWITCH PARCHMENT	0056253049
19	USB GUITAR I/O BOARD ASSY	7703232000
20	JACKPLATE, I/O PCB HOLDER, USB GUITAR	7702480000
21	JACK PHONE 1/4 - OUTPUT	0047329049
22	NUT HEX 3/8-32x3/32 TK NI	0016352049



DLX TRIPLE PLAY STRAT ® (014-1800-300 / 014-1800-306)


PARTS LIST

REF #	DESCRIPTION	PART NUMBER
23	WASHER LOCK INTL 3/8 X .687	0016436049
24	FERRULE JACK CHR STD STR	0033023000
25	PICKUP ASSY NF NK/MID PARCH	0074275010
26	PICKUP ASSY NF MID PARCH	0074275011
27	P/UP PRLY GATES SD	0050165000
28	SCRW 6-32X3/4 RHP TAPTRI L ZA	0048631049
29	SCREW-MA 6-32X5/8 RH ZARTAN	0994925000
30	STD BRIDGE ASSY RH SGGB	0071014000
31	CLIP, FISHMAN USB TRANSCEIVER	7702481000
32	USB THUMB DRIVE W/SOFTWARE	7704342000
33	BUTTON STRAP NI 0.156	0994915000
34	SCRW SMAB 5x1 OHP NI	0015610049
35	PLATE NECK MTG-CHR, STD STR	0033024000
36	SCRW SMA 8x1-3/4 OHP NI	0015636049
37	BACK COVER STRAT SPRING BWB	0081420000
38	SCRW SMAB 4x1/2 OHP NI	0015578049




DLX TRIPLE PLAY STRAT ® (014-1800-300 / 014-1800-306)

WIRING DIAGRAM

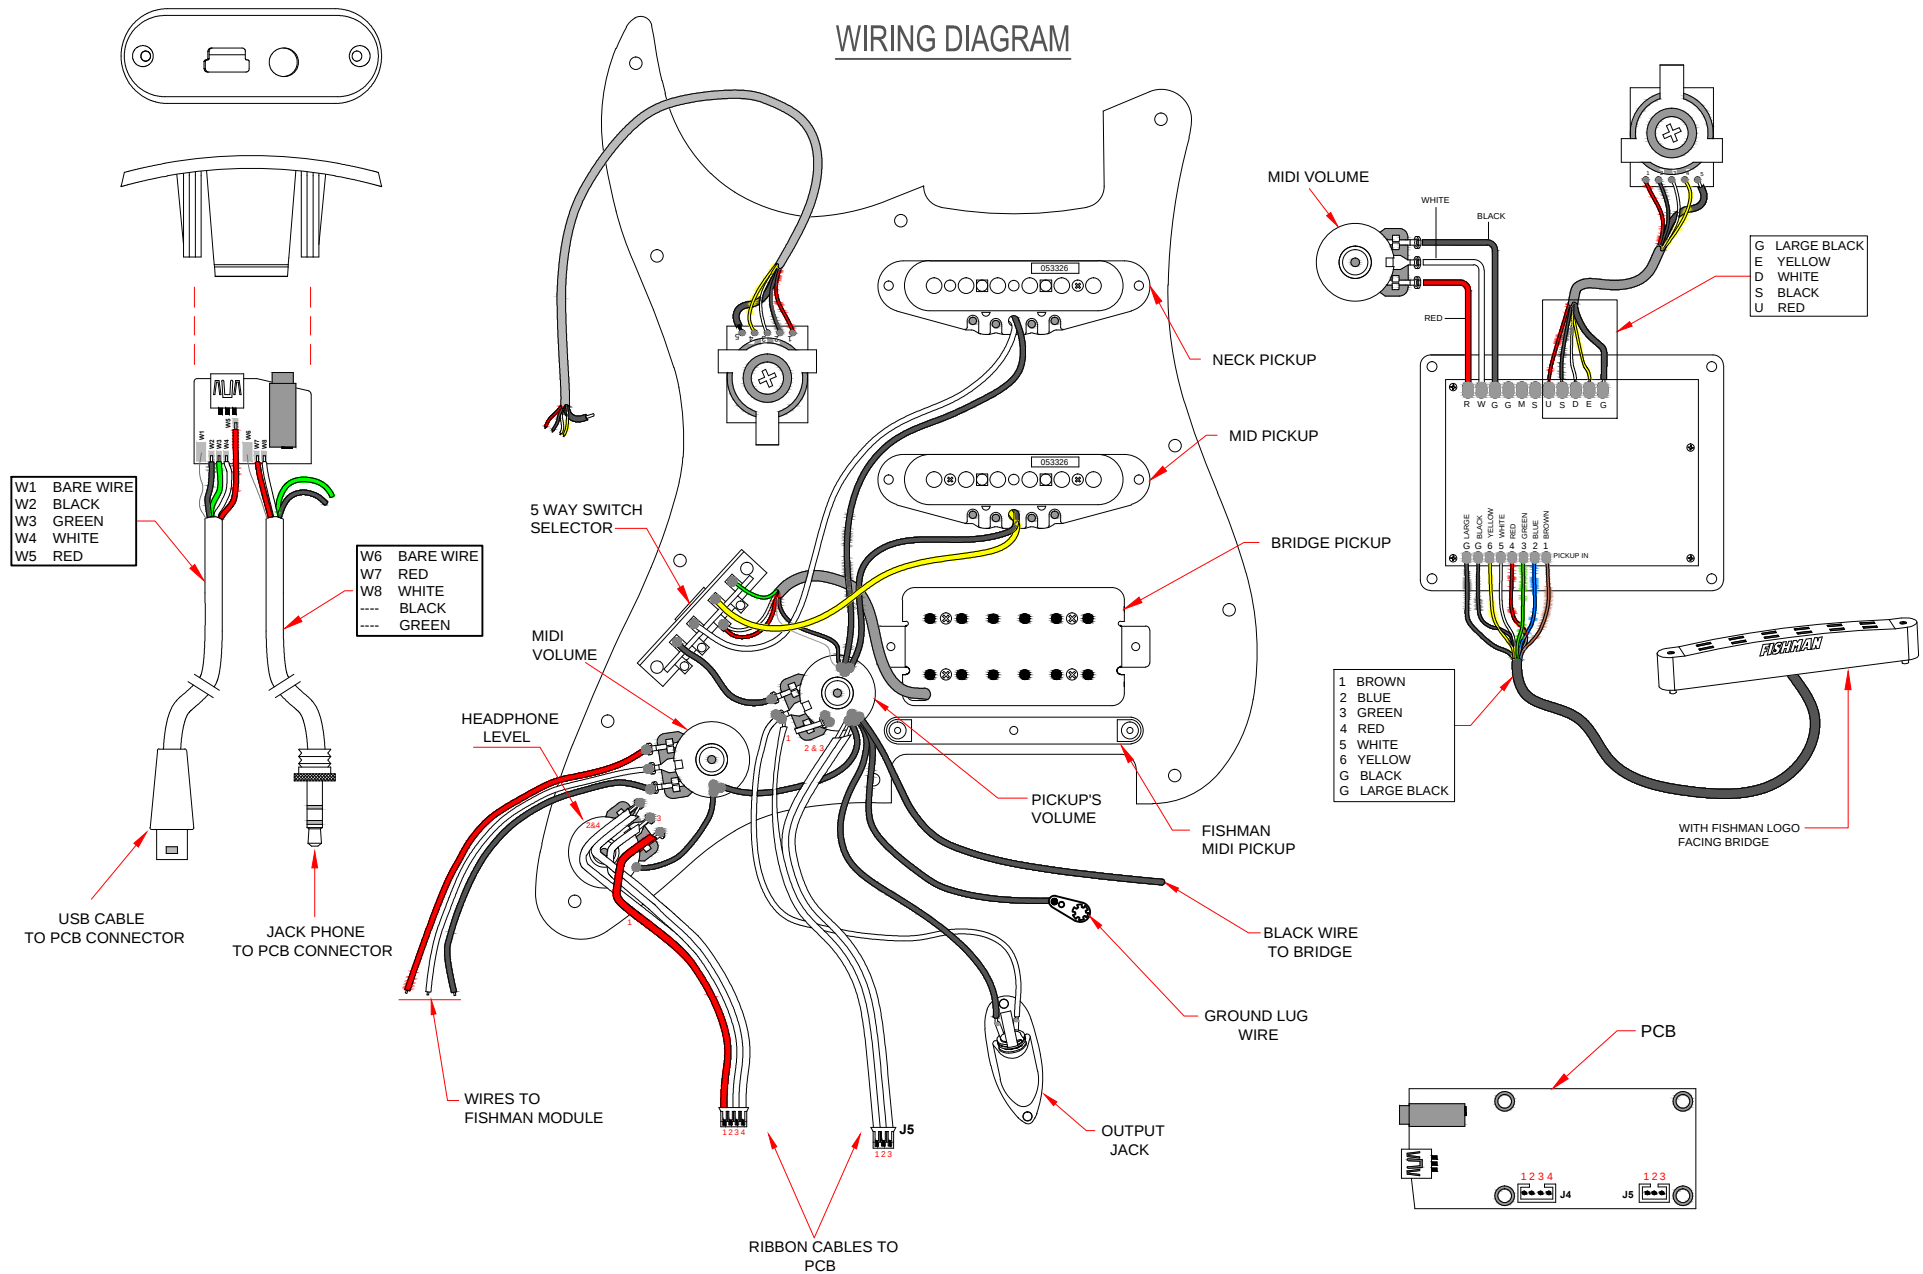

DLX TRIPLE PLAY STRAT ® (014-1800-300 / 014-1800-306)


SWITCH & CONTROL FUNCTION

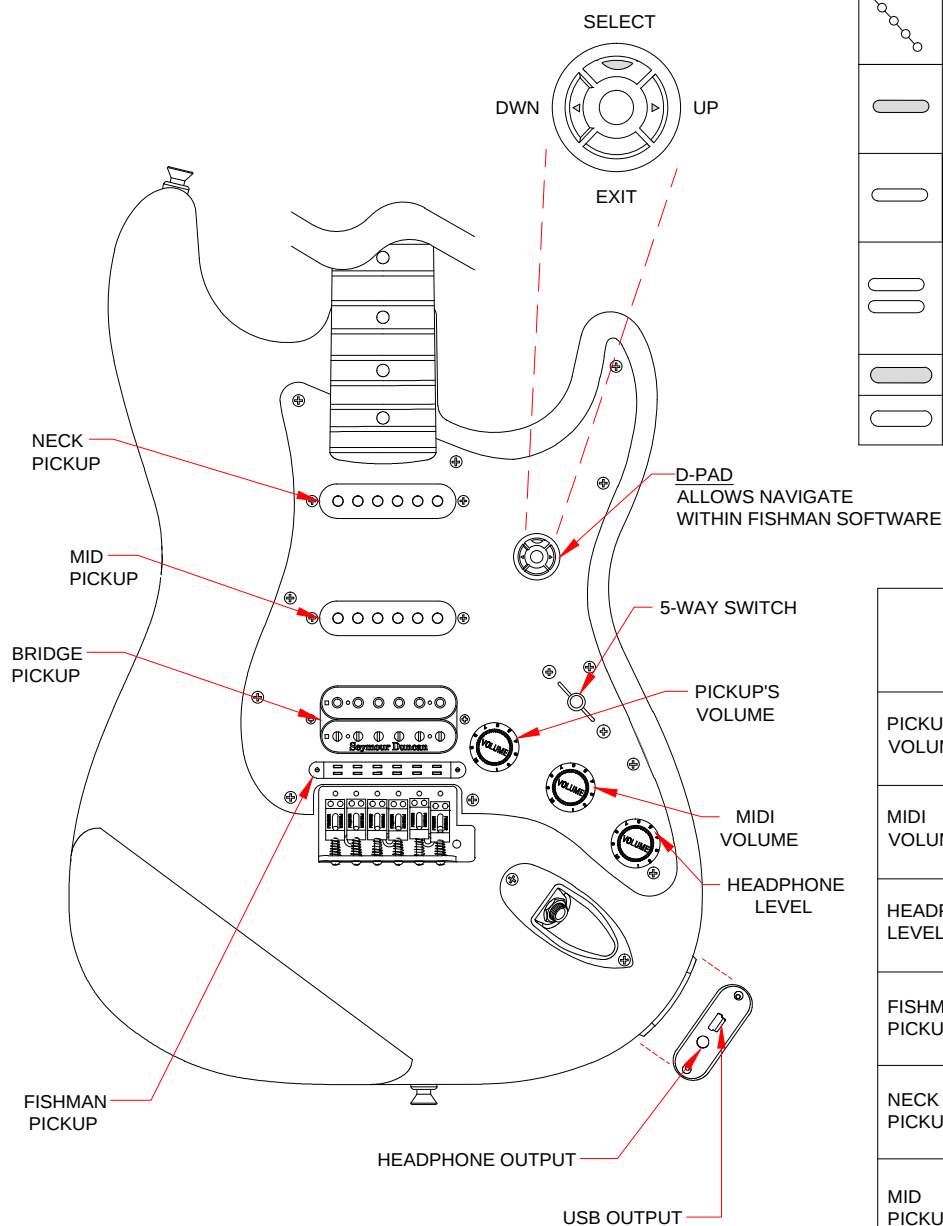

5 WAY SWITCH POSITION

5	4	3	2	1	SWITCH POSITION
					← NECK PICKUP
					← MID. PICKUP
					← BRIDGE PICKUP
					PICKUP IS ON
					PICKUP IS OFF
					INDICATES POSITION OF 5 WAY SWITCH

 USB AUDIO INTERFACE




FUNCTIONS AVAILABLE			
FUNCTION		GUITAR MODE	MIDI MODE
PICKUP'S VOLUME		✓	
MIDI VOLUME			✓
HEADPHONE LEVEL		✓	✓
FISHMAN PICKUP			✓
NECK PICKUP		✓	
MID PICKUP		✓	
BRIDGE PICKUP		✓	
5-WAY SWITCH		✓	




CONTROL FUNCTION FOR WIRELESS CONNECTIVITY


- 1 PLUG IN
USB WIRE TO THE PC
- 2 PLUG IN
HEADPHONE WIRE

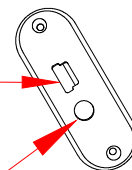


- 3 PLUG IN
USB WIRELESS TO THE PC

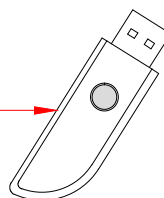

- 4 TURN ON
POWER SWITCH

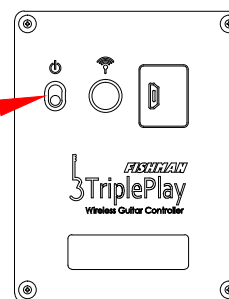

- 5 PRESS
USB WIRELESS BUTTON

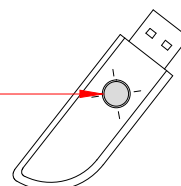

- 6 PRESS
MODULE WIRELESS BUTTON

