


FENDER SELECT TELECASTER® CHROME HDWR (0170303733)

PARTS LAYOUT

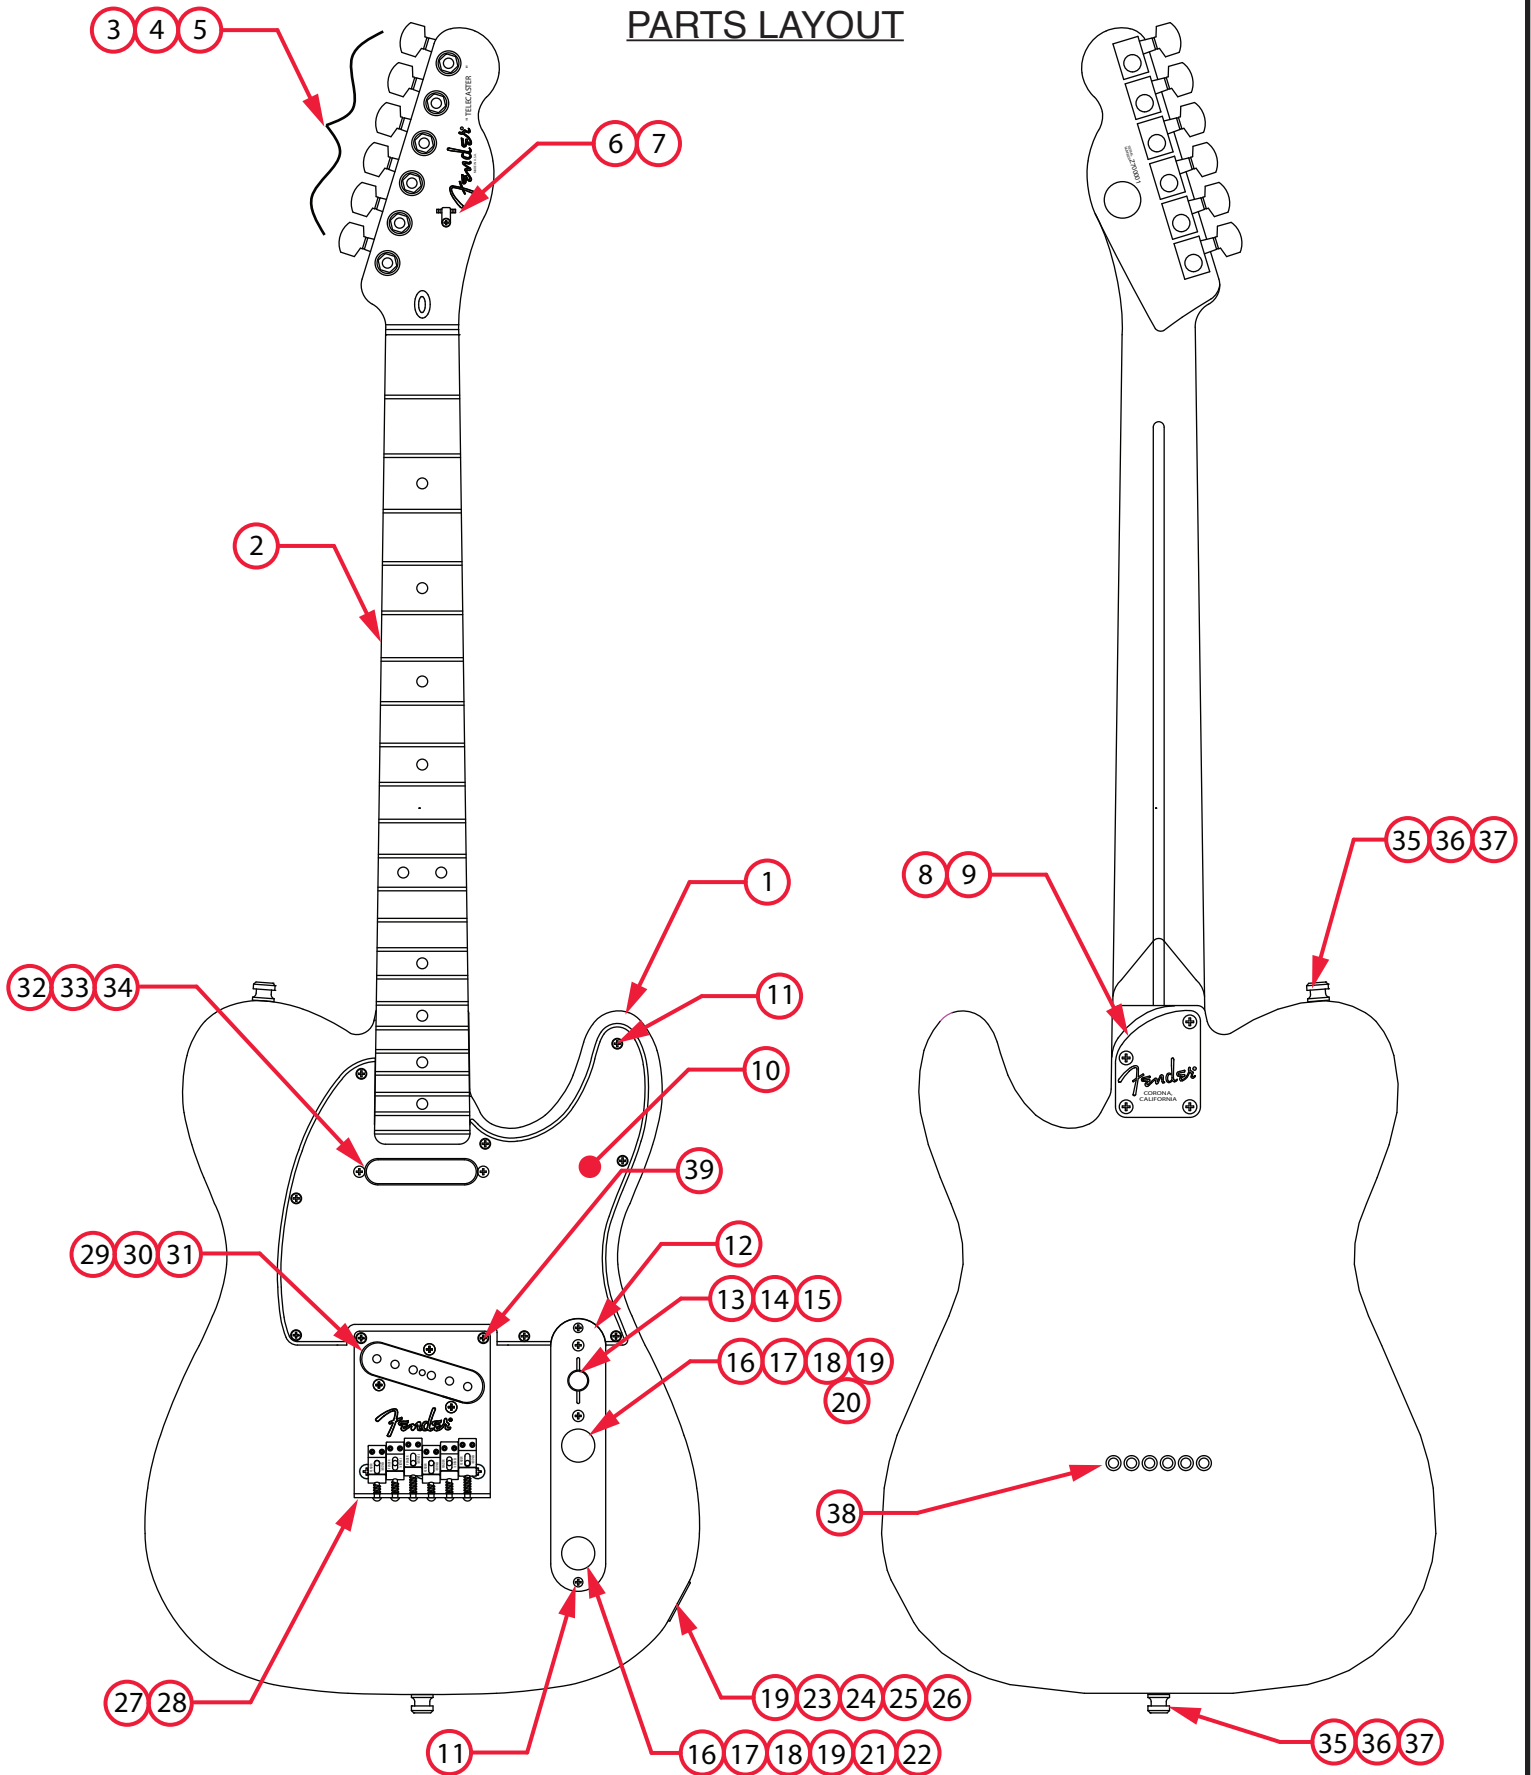

FENDER SELECT TELECASTER® CHROME HDWR (0170303733)

PARTS LIST

REF#	DESCRIPTION	PART NUMBER
1	BODY FENDER SELECT TELE CHAMBERED VIOLIN BURST	0091794533
2	NECK FENDER SELECT TELE BIRDSEYE MPL	0091808000
3	FENDER LOCKING TUNERS CHROME	0990818100
4	WASHER KEY	0053106049
5	BUSHING KEYS	0058820049
6	STRING GUIDE TREE AM STD	0994911000
7	SCREW SMAB 3 X 3/8 RHP ZA CHROME	0021405049
8	NECK PLATE DLX SERIES NO TILT RH CHROME	0092954000
9	SCREW SMA 8 X 1-3/4 OHPH ZARTAN	0021424049
10	PICKGUARD TELE AM SERIES RH P/B/P	0991375000
11	SCREW SMAB 4 X 1/2 OHP ZA CHROME	0994923000
12	CONTROL PLATE TELE	0992058000
13	3-WAY LEVER SWITCH	0992041000
14	SCREW MA 6-32 X 5/8 ZARTAN	0994925000
15	SWITCH KNOB VINT TELE	0994936000
16	KNOB KNURLED CHROME	0991366000
17	SCREW ST 8-32 X 3/16	0994922000
18	NUT HEX 3/8-32 X 3/32 TK NI	0016352049
19	WASHER LOCK INTL 3/8 X .670	0016436049
20	CONTROL 250K 10%	0990831000
21	CONTROL 250K SOLID SHFT NO LOAD	0990833000
22	CAPACITOR MPF RDL .022μF 250V 10%	0024832049
23	JACK PHONE OPEN CIRCUIT 11	0021956049
24	RETAINER JACK NI PLT TELE	0010355069
25	FERRULE JACK STD TELE	0021452000
26	NUT HEX 3/8-32 X 3/32 TK NI	0016352049
27	BRIDGE ASSY FENDER SELECT TELE	0092324000
27A	BRIDGE PLATE AM SRS TELE RH CHROME	0075106000
27B	BRIDGE SECTION ASSY NI AS TELE SHORT	0075123103
27C	BRIDGE SECTION ASSY NI AS TELE TALL	0075123104
27D	SPRING INTONATION ADJ 6 COIL NI	0056138000
27E	SPRING INTONATION ADJ 7 COIL NI	0056139000
27F	SCREW M 4-40 X 3/4 RHP NI	0076245000
28	SCREW SMA 8 X 1 OHP ZA CROME	0021373049
29	PICKUP ASSY SELECT SERIES TELE BRIDGE	0092668000
30	SCREW 6-32 X 3/4 RHP TAP ZA	0048631049

* = NOT PICTURED IN DIAGRAM



FENDER SELECT TELECASTER® CHROME HDWR (0170303733)


PARTS LIST

[illegible]

* = NOT PICTURED IN DIAGRAM


FENDER SELECT TELECASTER® CHROME HDWR (0170303733)

WIRING ASSEMBLY NON PCB

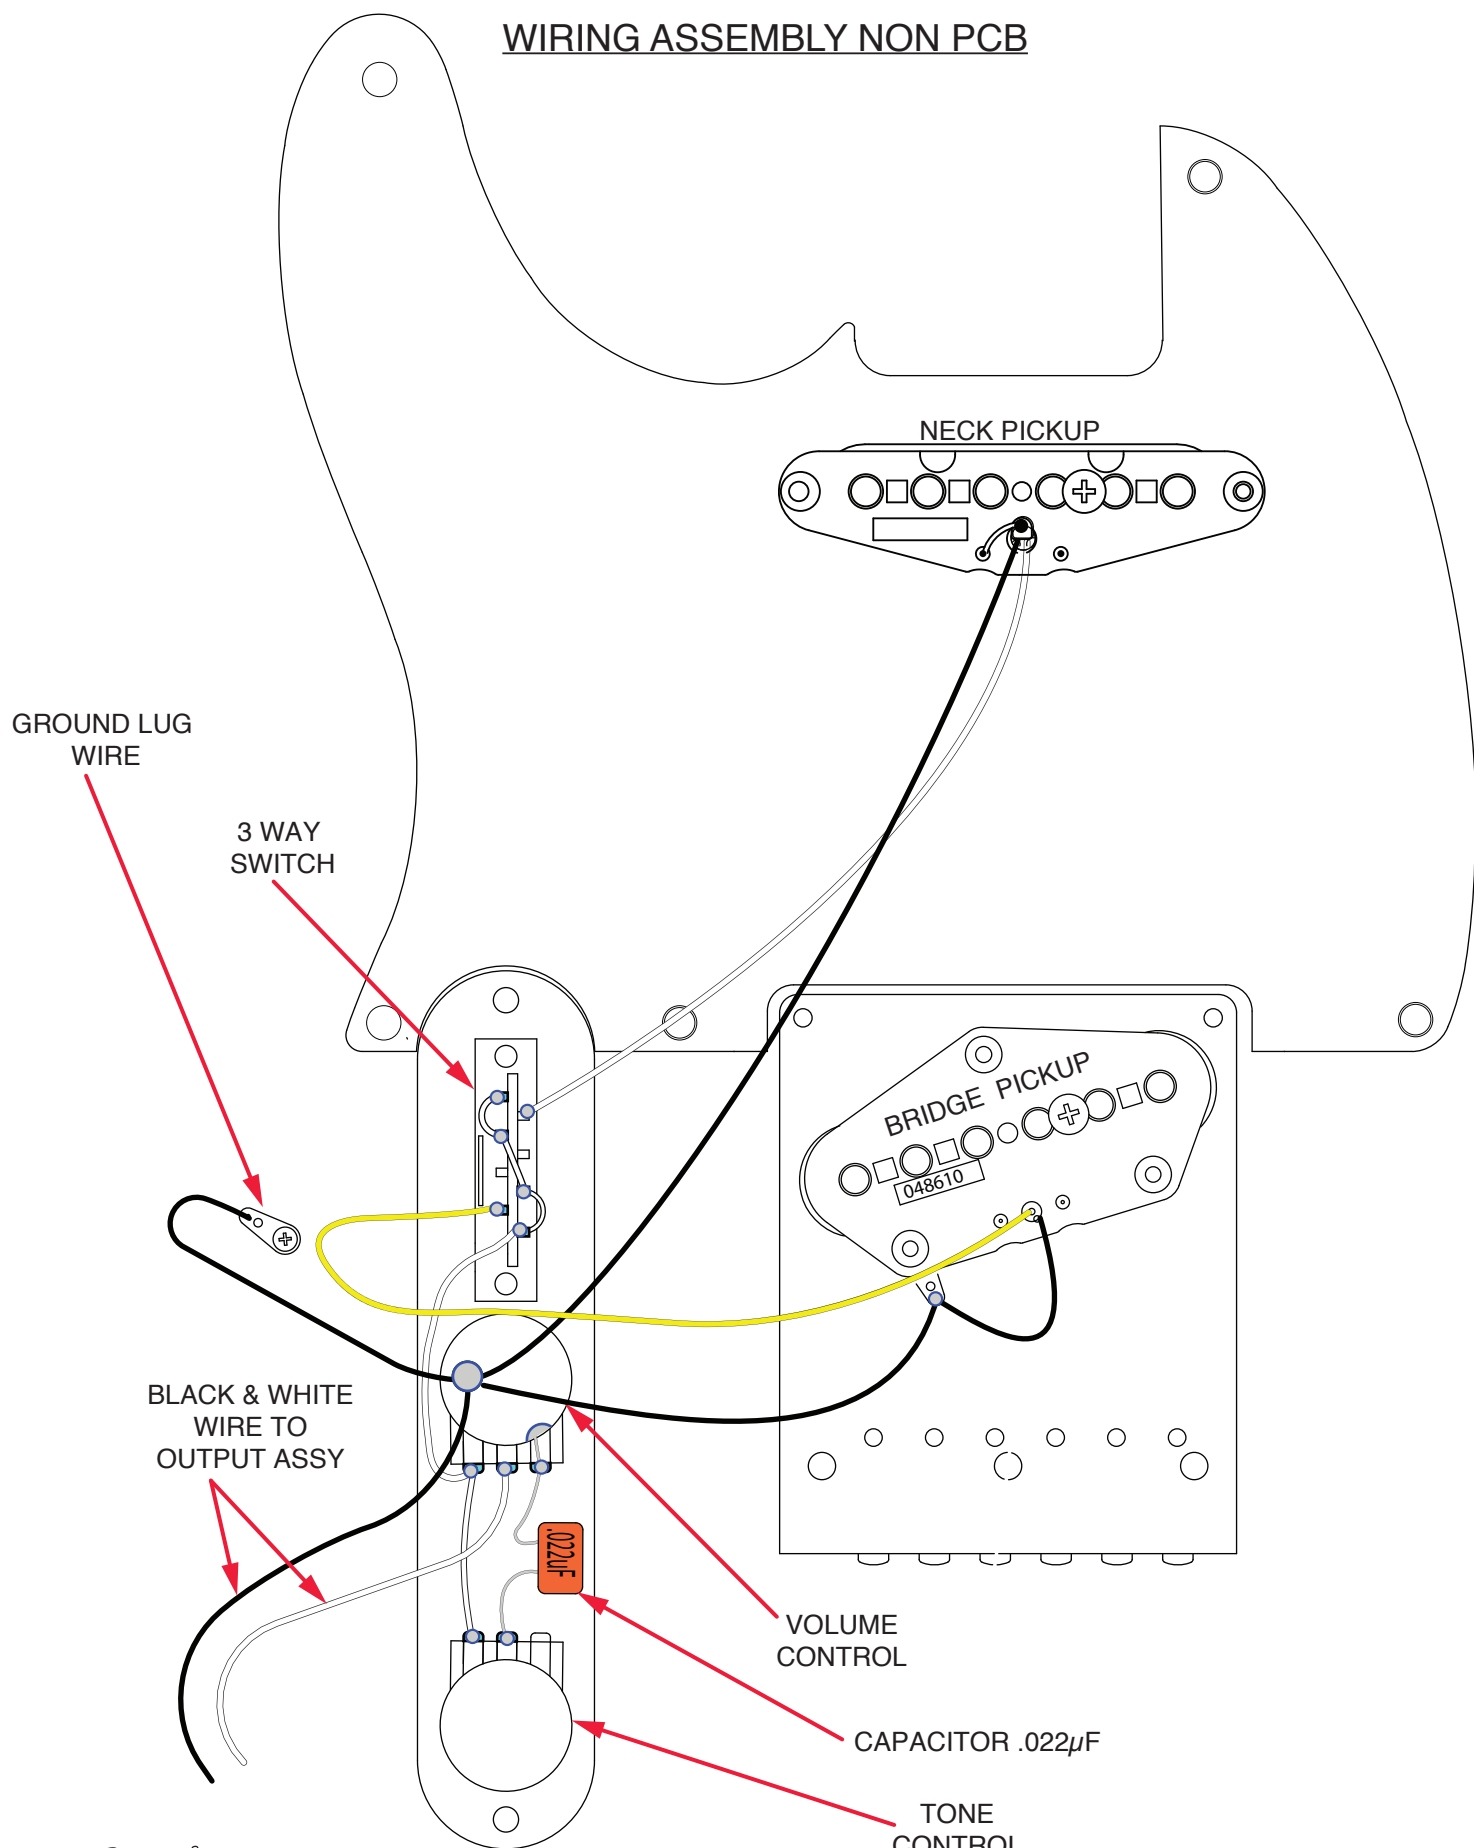


FENDER SELECT TELECASTER® CHROME HDWR (0170303733)

WIRING ASSEMBLY W/PCB

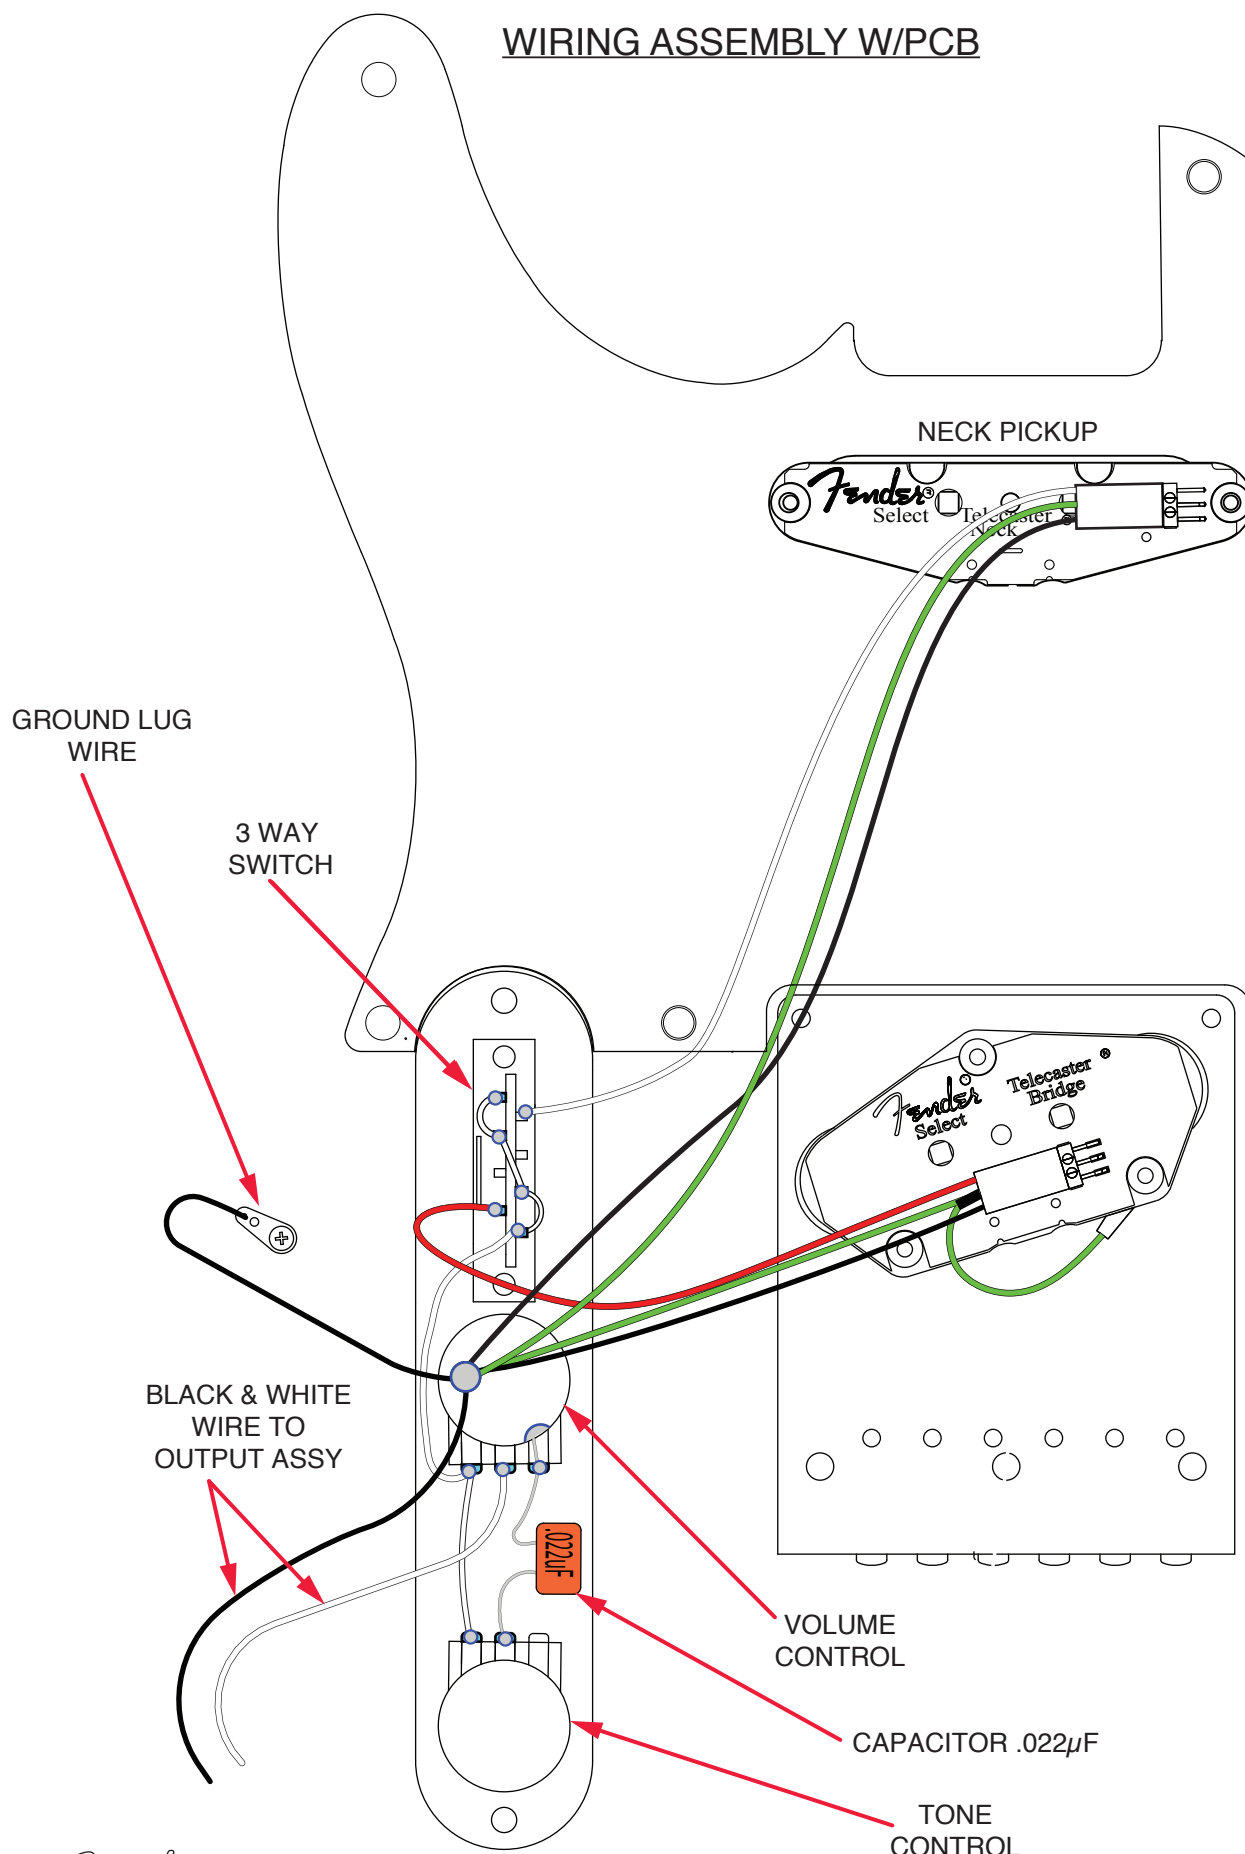

FENDER SELECT TELECASTER® CHROME HDWR (0170303733)

SWITCH AND CONTROL FUNCTION

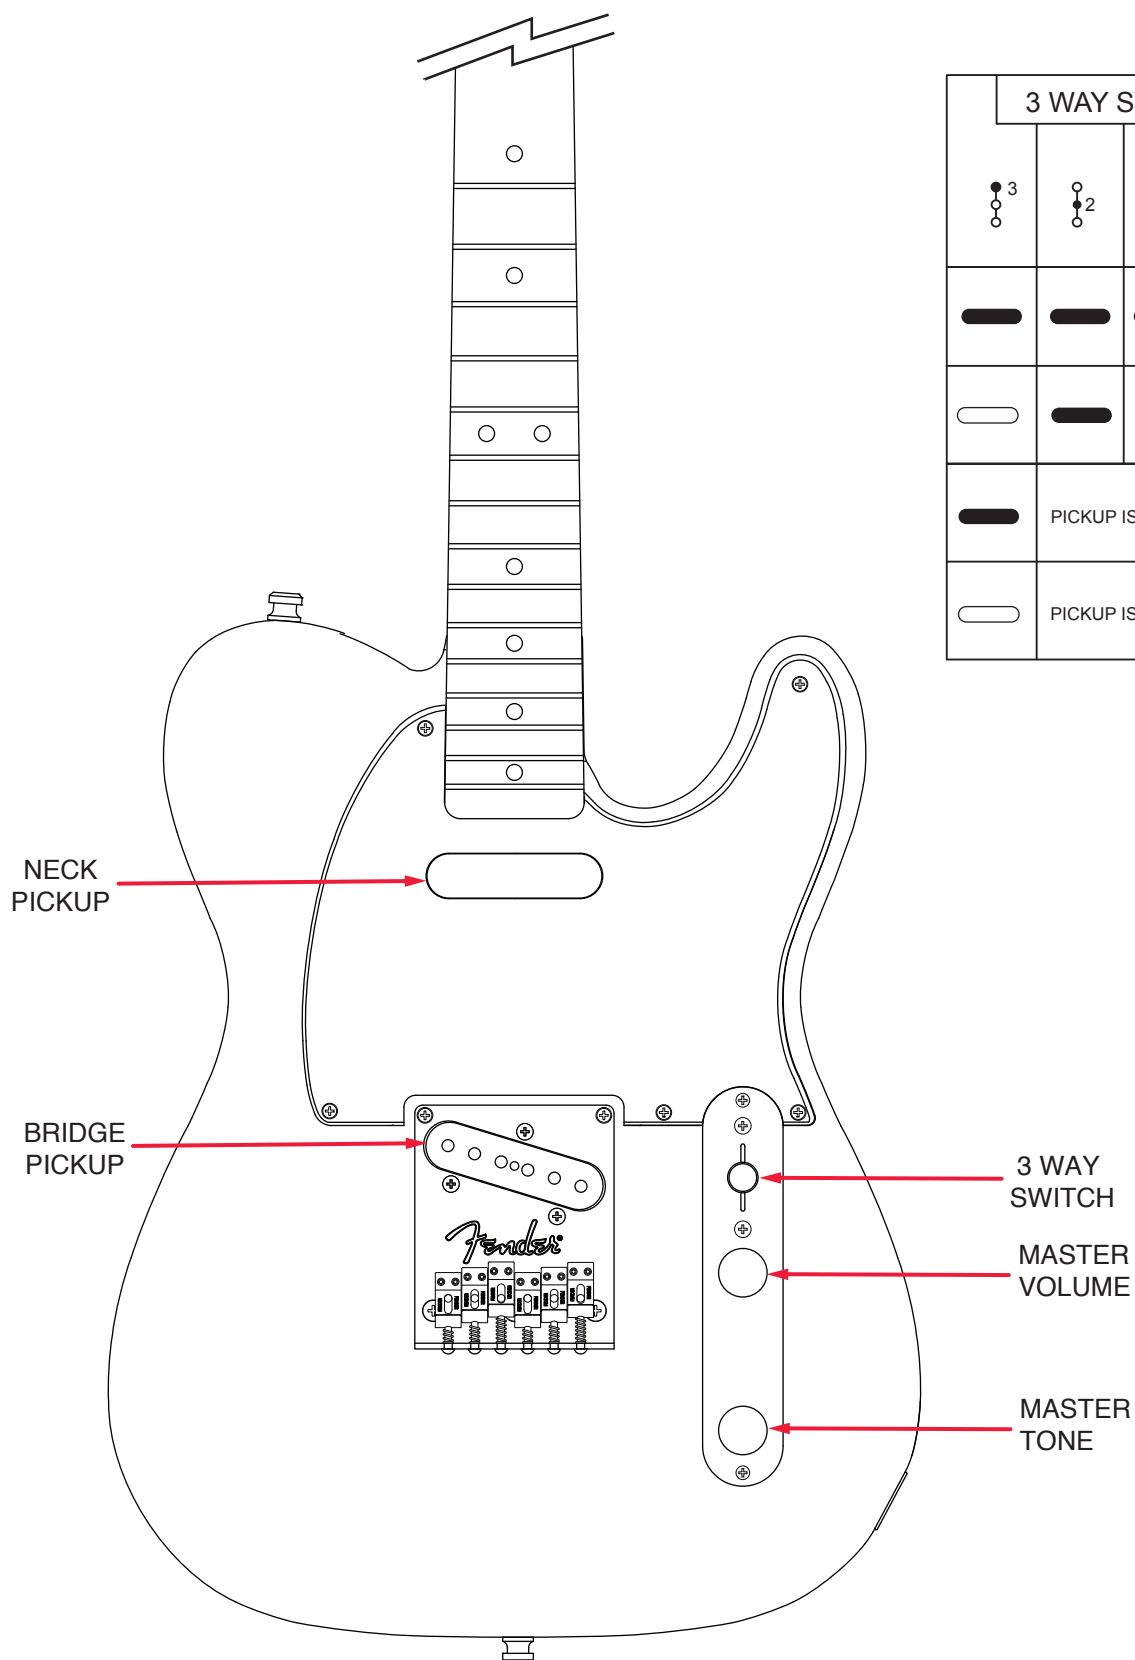

3 WAY SWITCH POSITION			
 3	 2	 1	← 3 WAY SWITCH POSITION
			← NECK PICKUP
			← BRIDGE PICKUP
	PICKUP IS ON		INDICATES POSITION OF 3 WAY SWITCH  1
	PICKUP IS OFF		