


AMERICAN DELUXE STRATOCASTER® LEFT HANDED, 0117420/7422

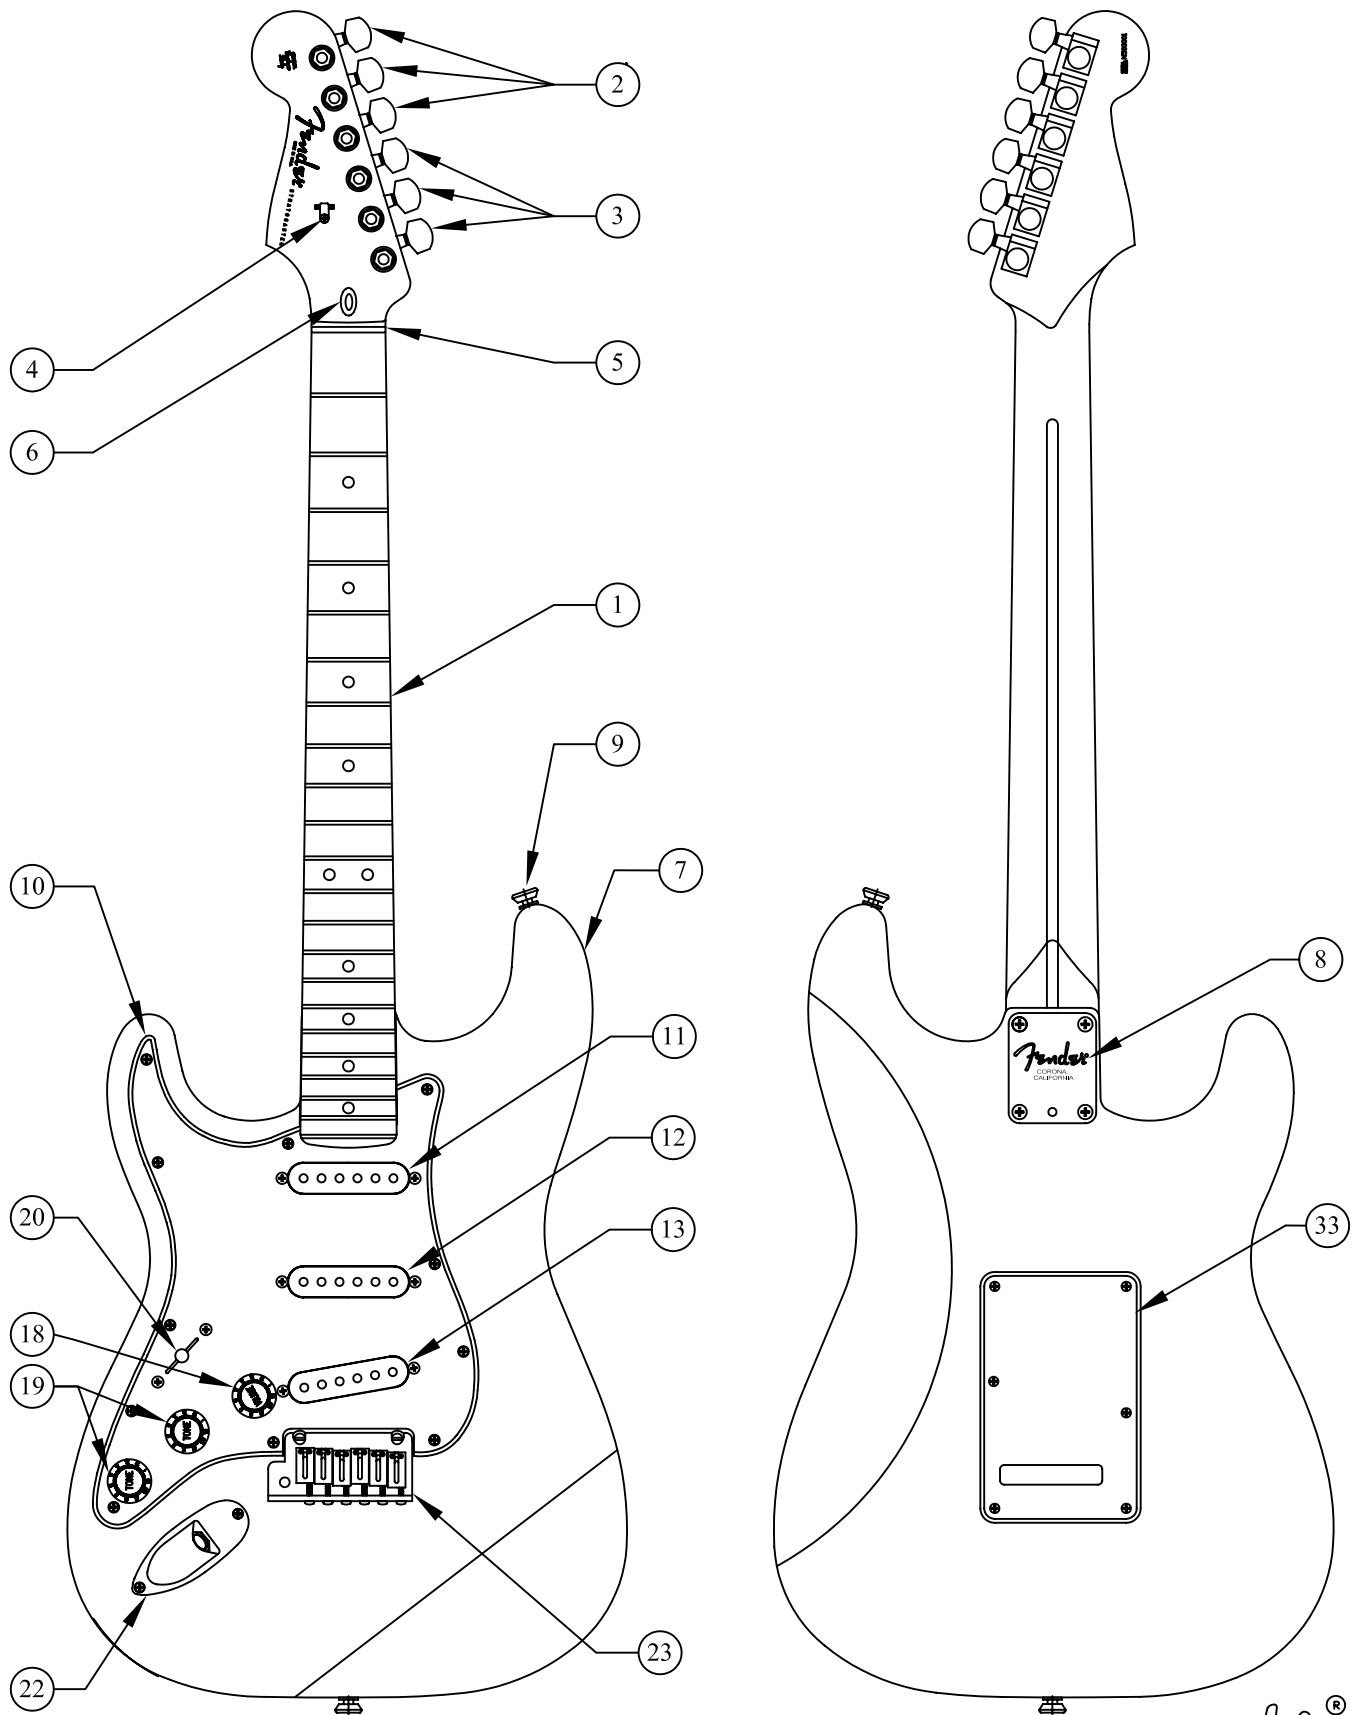

Fender®

AMERICAN DELUXE STRATOCASTER® LEFT HANDED, 0117420/7422



	P/N	DESCRIPTION	REF.#	P/N	
1	0056217000	Neck, Am Stratocaster®, RW, LH	23	0026107000	Bridge Assembly
	0056218000	Neck, Am Stratocaster®, MPL, LH		0028957000	Bridge Pivot Screw
2	0073120000	Tuning Key, Ping Short, LH		0028958000	Bridge Pivot Insert
	0053106000	Washer	24	0026108000	Bridge Plate
	0053107000	Bushing	25	0026111000	Bridge Section, (6)
3	0073120000	Tuning Key, Ping, LH	26	0017031000	Intonation Screw, (6)
	0053106000	Washer	27	0019395000	Intonation Spring, (5&6)
	0053107000	Bushing	28	0019394000	Intonation Spring, (1-4)
4	0021537000	String Guide	29	0026779000	Height Adjustment Screw, (1&6)
	0021405000	Mounting Screw	30	0026780000	Height Adjustment Screw, (2-5)
5	0083675000	Bone Nut	31	0026109000	Bridge Block
6	0023811000	Truss Rod Adjusting Wrench	32	0019656000	Set Screw
7	See Chart	Body Stratocaster®	33	0056214000	Back Plate - LH Parchment
8	0054038000	Neck Mounting Plate		0021407000	Mounting Screw
	0021424000	Mounting Screw		0011957040	Tremolo Arm
	0031571000	Tilt Adjustment Screw		0010272100	Tremolo Claw
	0023811000	Tilt Adjusting Wrench		0018671000	Tremolo Spring
9	0063267000	Strap Button		0015636000	Mounting Screw
	0016188000	Mounting Screw			
	0019056000	Felt Washer, Black			
	0020491000	Felt Washer, White			
10	0056199000	Pickguard			
	0021407000	Mounting Screw			
11	0056705000	Pickup, Neck			
	0048631000	Mounting Screw			
	0036481000	Mounting Tube			
12	0056706000	Pickup, Middle			
	0048631000	Mounting Screw			
	0036481000	Mounting Tube			
13	0056707000	Pickup, Bridge			
	0048631000	Mounting Screw			
	0036481000	Mounting Tube			
14	0013446000	Control 250K, Tone (T2)			
	0024832000	Capacitor, MPL RDL.022 µF			
	0016352000	Mounting Nut			
	0022384000	Lock Washer			
15	0013446000	Control 250K, Tone (T1)			
	0016352000	Mounting Nut			
	0022384000	Lock Washer			
16	0013446000	Control 250K, Volume			
	0016352000	Mounting Nut			
	0022384000	Lock Washer			
17	0053291000	Switch, 5 way Grigsby w/ M.R.			
	0016352000	Mounting Nut			
18	0056254000	Knob, Volume, Parch			
19	0056255000	Knob, Tone, Parch			
20	0056253000	Knob, Selector Switch			
21	0012869000	Solder Lug			
	0015116000	Mounting Screw			
22	0021956000	Output Jack			
	0016436000	Lock Washer			
	0016352000	Mounting Hex Nut			
	0010280090	Jack Ferrule			
	0021407000	Mounting Screw			


BODY CHART


P/N	COLOR
0048702500	3 COLOR SUNBURST
0055310501	WHITE BLONDE
0056239506	BLACK
0056239525	CHROME RED
0056239515	HOT ROD RED
0056239505	OLYMPIC WHITE




SWITCH & CONTROL FUNCTION

5 WAY SWITCH POSITION					
					
T1	T1&T2	T2	T2	NT	
					← NECK PICKUP (A)
					← MIDDLE PICKUP (B)
					← BRIDGE PICKUP (C)

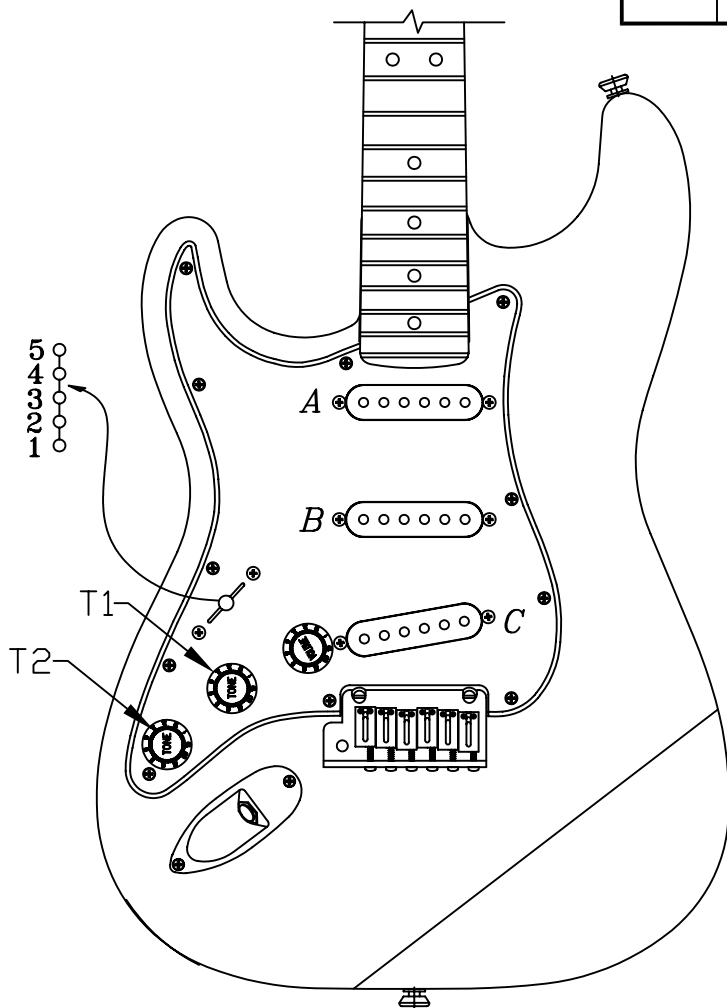


	PICKUP IS ON
	PICKUP IS OFF
A	PICKUP (NECK)
B	PICKUP (MIDDLE)
C	PICKUP (BRIDGE)
NT	NO TONE
	INDICATES POSITION OF 5 WAY SWITCH

WIRING DIAGRAM

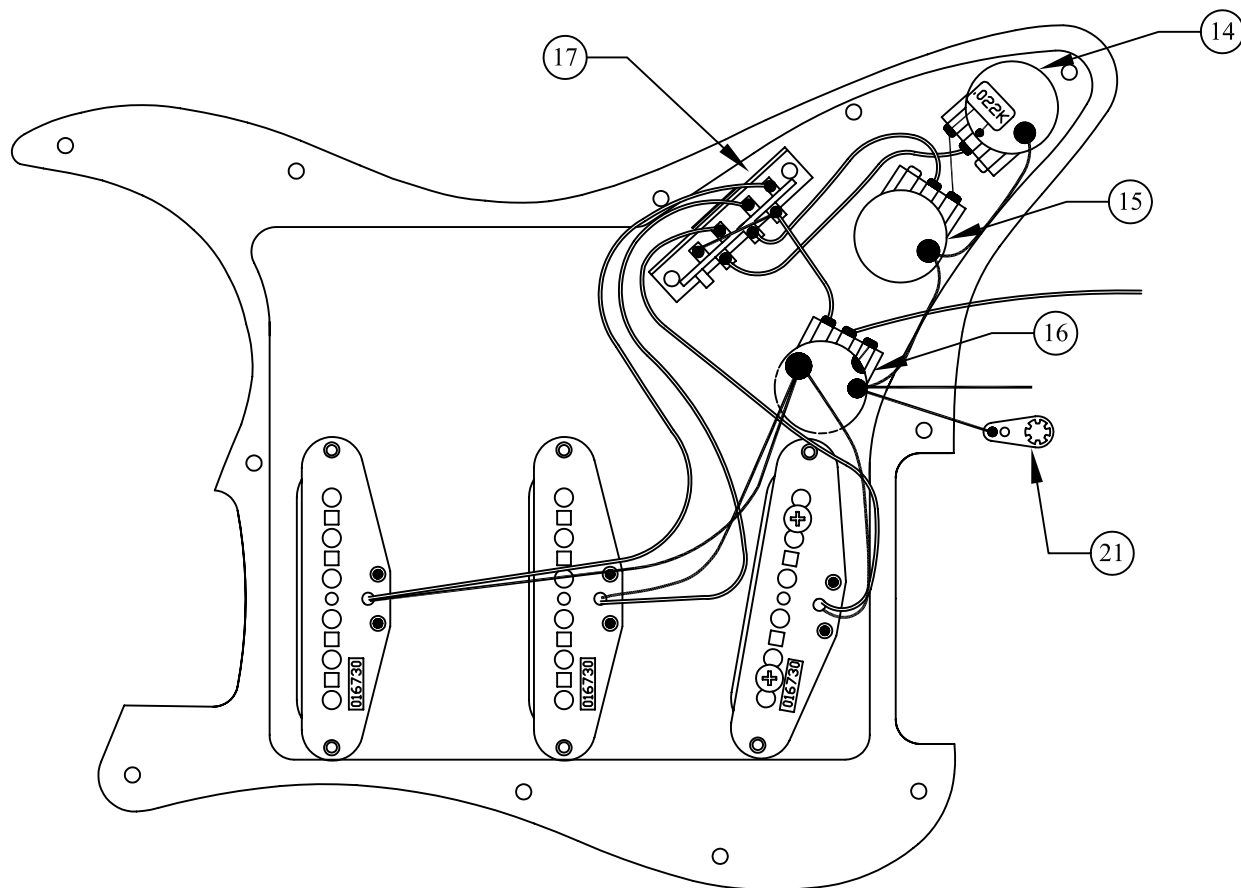

BRIDGE ASSY.

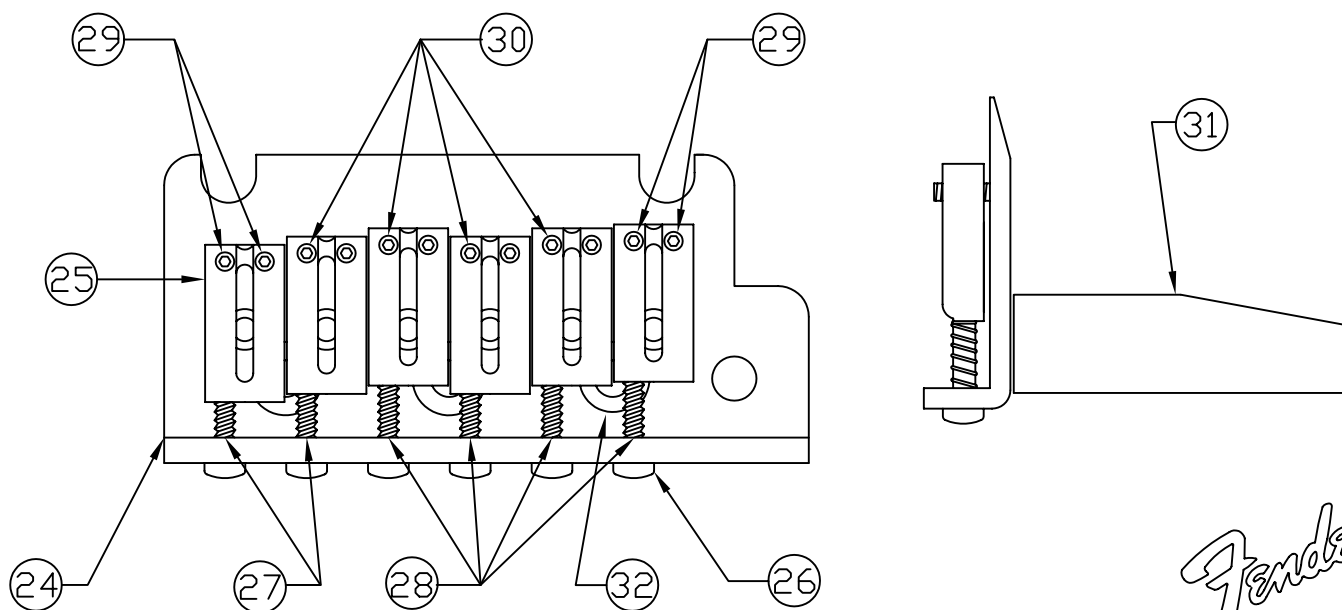

Fender®