


AMERICAN DELUXE TELECASTER[®], 0101600/1602, RW/MN

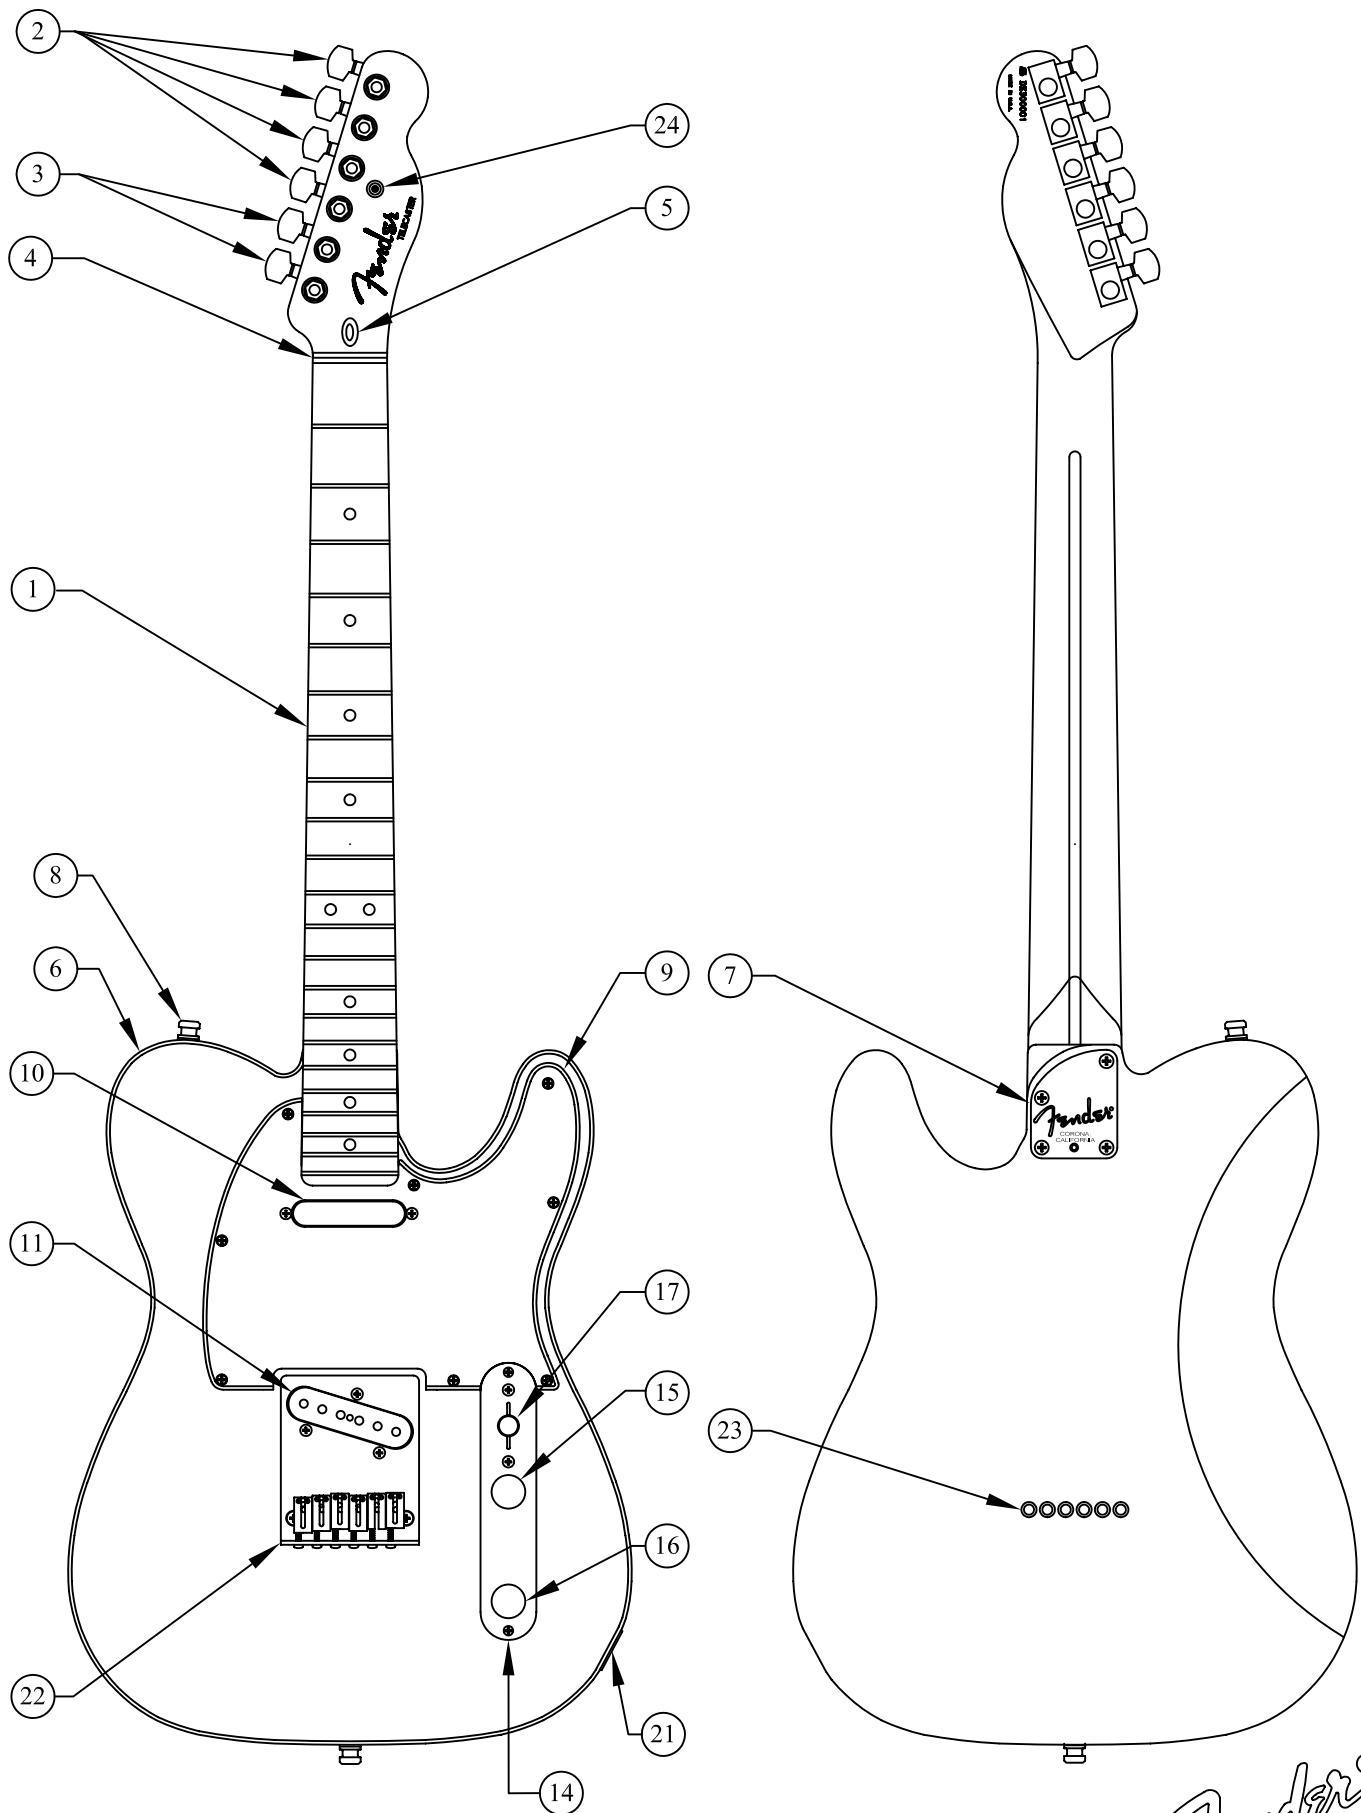

Fender[®]

AMERICAN DELUXE TELECASTER[®], 0101600/1602, RW/MN



REF.#	P/N	DESCRIPTION	REF.#	P/N	DESCRIPTION
1	0054042000	Neck, American Dlx Telecaster [®] , RW	15	0059272000	Knob, Volume
	0054043000	Neck, American Dlx Telecaster [®] , MN		0059270000	Switch Cap, Volume
2	0056260000	Tuning Key, Std Schl (E, B, G, D,)		0059278000	Coupling Sleeve Sosh
	0058815000	Washer Schalr		0028897001	Mounting Screw
	0058820000	Bushing Schalr	16	0013359000	Knob, Tone
3	0021374000	Tuning Key, XGS-1C Std Schl		0028897001	Mounting Screw
	0058815000	Washer Schalr	17	0018359000	Knob, Selector Switch
	0058820000	Bushing Schalr	18	0053290000	Switch, 3-Way
4	0083675000	Bone Nut		0021417000	Mounting Screw
5	0023811000	Truss Rod Adjusting Wrench	19	0024832000	Capacitor, .022uF
6	See Chart	Body Am Dlx Telecaster [®] Upgrade	20	0012869000	Solder Lug
7	0059209000	Neck Mounting Plate		0015116000	Mounting Screw
	0021424000	Mounting Screw	21	0040808000	Output Jack
	0031571000	Tilt Adjustment Screw		0016436000	Lock Washer
	0023811000	Tilt Adjusting Wrench		0016352000	Mounting Hex Nut
8	0021453000	Strap Button	22	0064115000	Bridge Assembly
	0021422000	Mounting Screw		0021373000	Mounting Screw
	0019056000	Felt Washer, Black		0028184000	Bridge Plate
	0020491000	Felt Washer, White		0058083000	Bridge Section, (6)
9	See Chart	Pickguard		0017031000	Intonation Screw, (1-4)
	0021407000	Mounting Screw		0031913000	Intonation Screw, (5&6)
10	0064110000	Pickup, Neck		0029094000	Intonation Spring, (1-4)
	0059319000	Mounting Screw		0029095000	Intonation Spring, (5&6)
	0068156000	Mounting Tube		0018027000	Height Adjustment Screw, (2-4)
11	0064114000	Pickup, Bridge		0026780000	Height Adjustment Screw, (1&6)
	0063396000	Mounting Screw	23	0021429000	String Retainer
	0068156000	Mounting Tube	24	0054625000	String Guide
12	0061260000	S-1 Sw/Pot Assy 250K, Volume		0021407000	Mounting Screw
	0016352000	Mounting Nut			
	0016436000	Lock Washer			
13	0050886000	Control 250K			
	0016352000	Mounting Nut			
	0016436000	Lock Washer			
14	0033134000	Control Plate Telecaster [®]			
	0021407000	Mounting Screw			

BODY & PICKGUARD COMBINATION CHART


BODY		PICKGUARD	
P/N	Color	P/N	Color
0064131500	3-Color Sunburst	0056083000	Mint/Blk/Mint, RH
0064131531	Aged Cherry Sunburst	0064031000	White Pearl, RH
0070797541	Vintage White	0056082000	Brown Shell, RH
0064132564	Montego Black	0064032000	Gold Metallic, RH
0064132582	Candy Tangerine	0064031000	White Pearl, RH



WIRING DIAGRAM

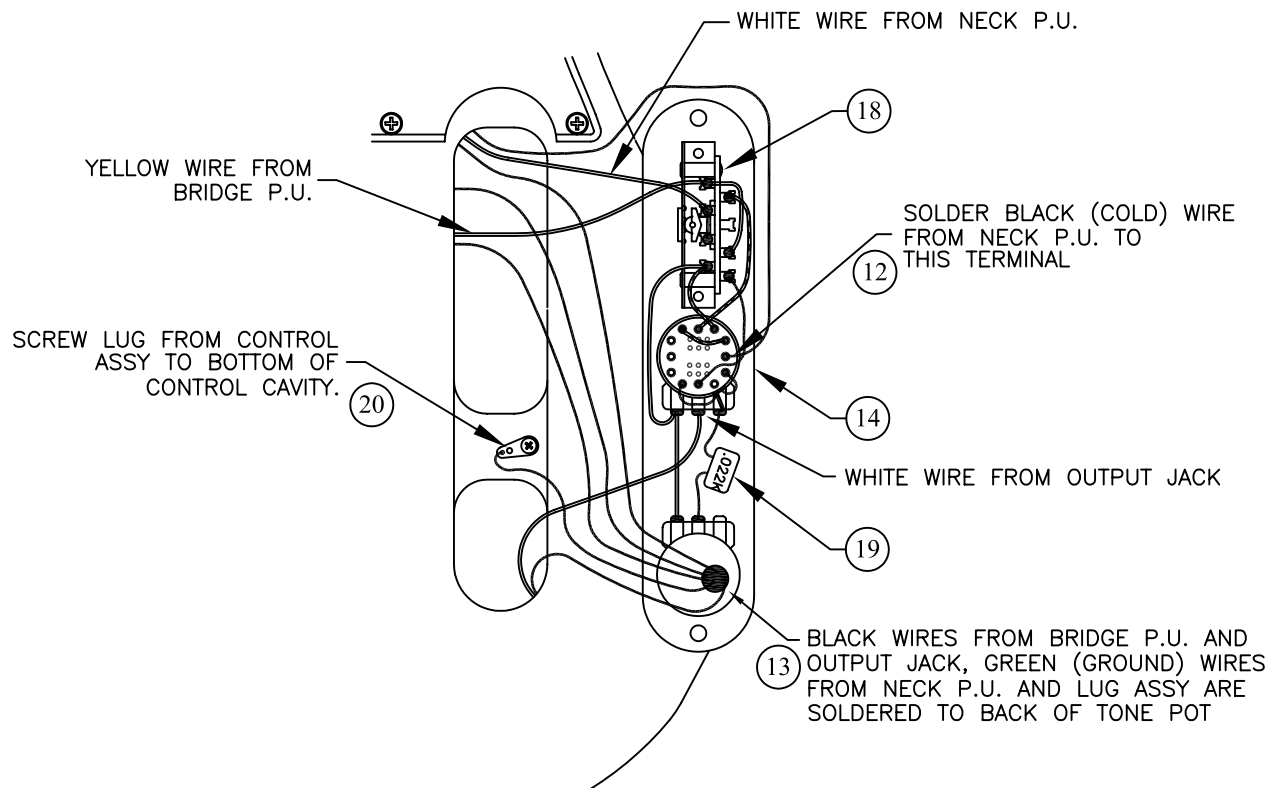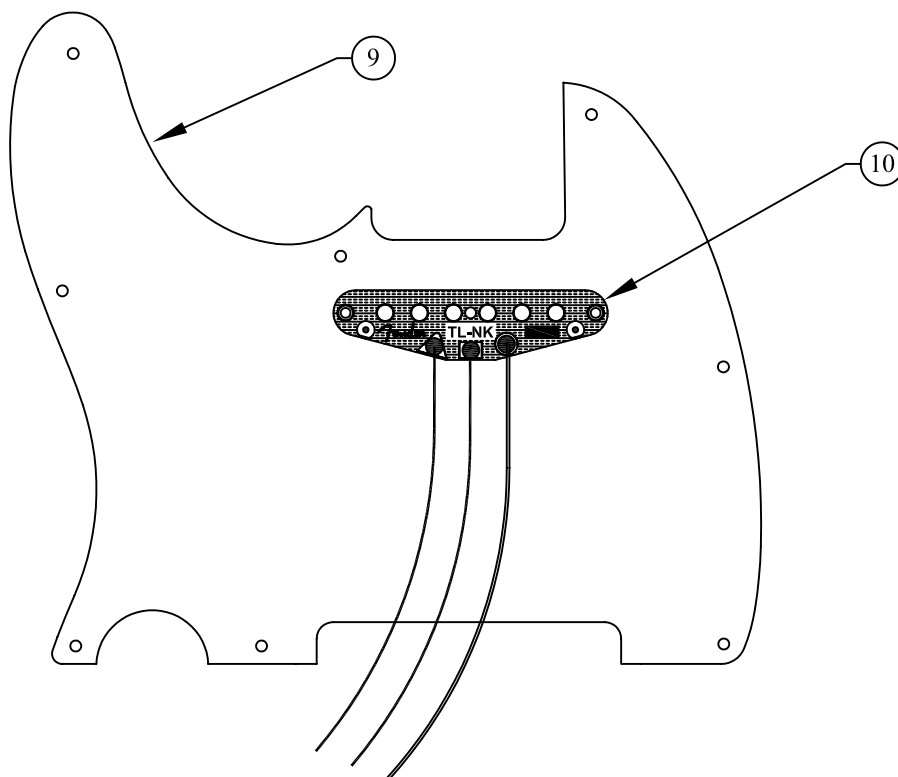

SWITCH & CONTROL FUNCTION

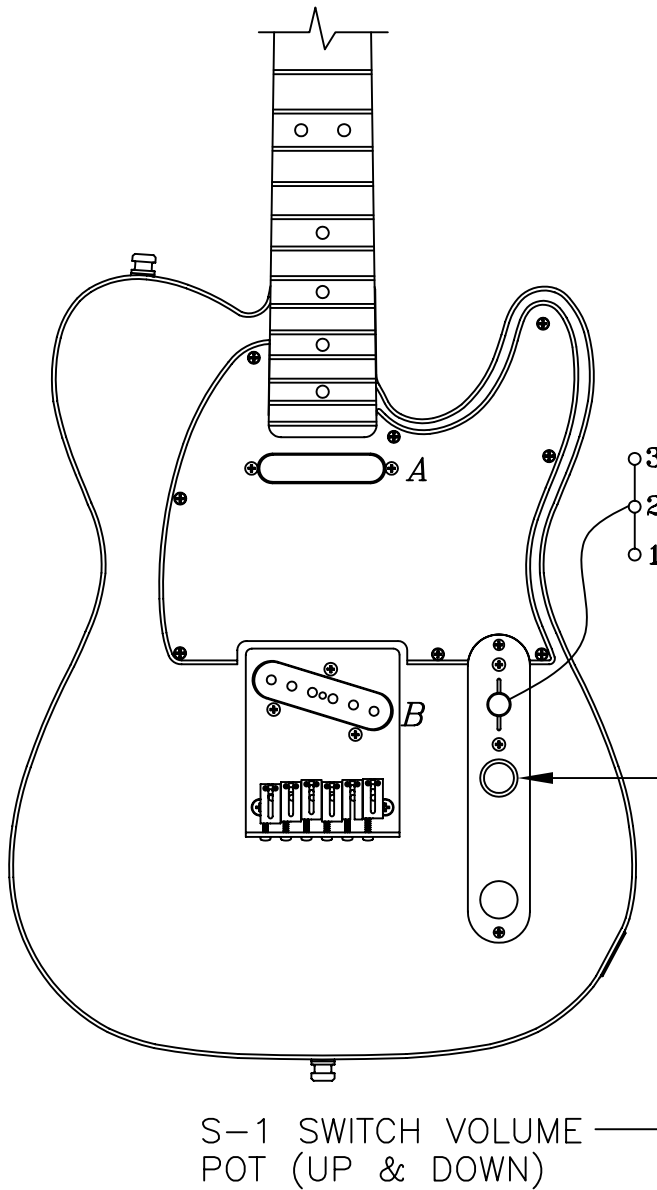

	PICKUP IS ON
	PICKUP IS OFF
<i>A</i>	PICKUP (NECK)
<i>B</i>	PICKUP (BRIDGE)

3 WAY SW POSITIONS, S-1 SWITCH UP			
			POSITION
			← NECK (A)
			← BRIDGE (B)
NECK ONLY	NECK & BRIDGE PARALLEL CONNECTION	BRIDGE ONLY	CONNECTION

3 WAY SW POSITIONS, S-1 SWITCH DOWN			
			POSITION
			← NECK (A)
			← BRIDGE (B)
NECK ONLY	NECK & BRIDGE SERIES CONNECTION	BRIDGE ONLY	CONNECTION