


AMERICAN DELUXE STRATOCASTER® ASH 0101400/1402, RW/MN

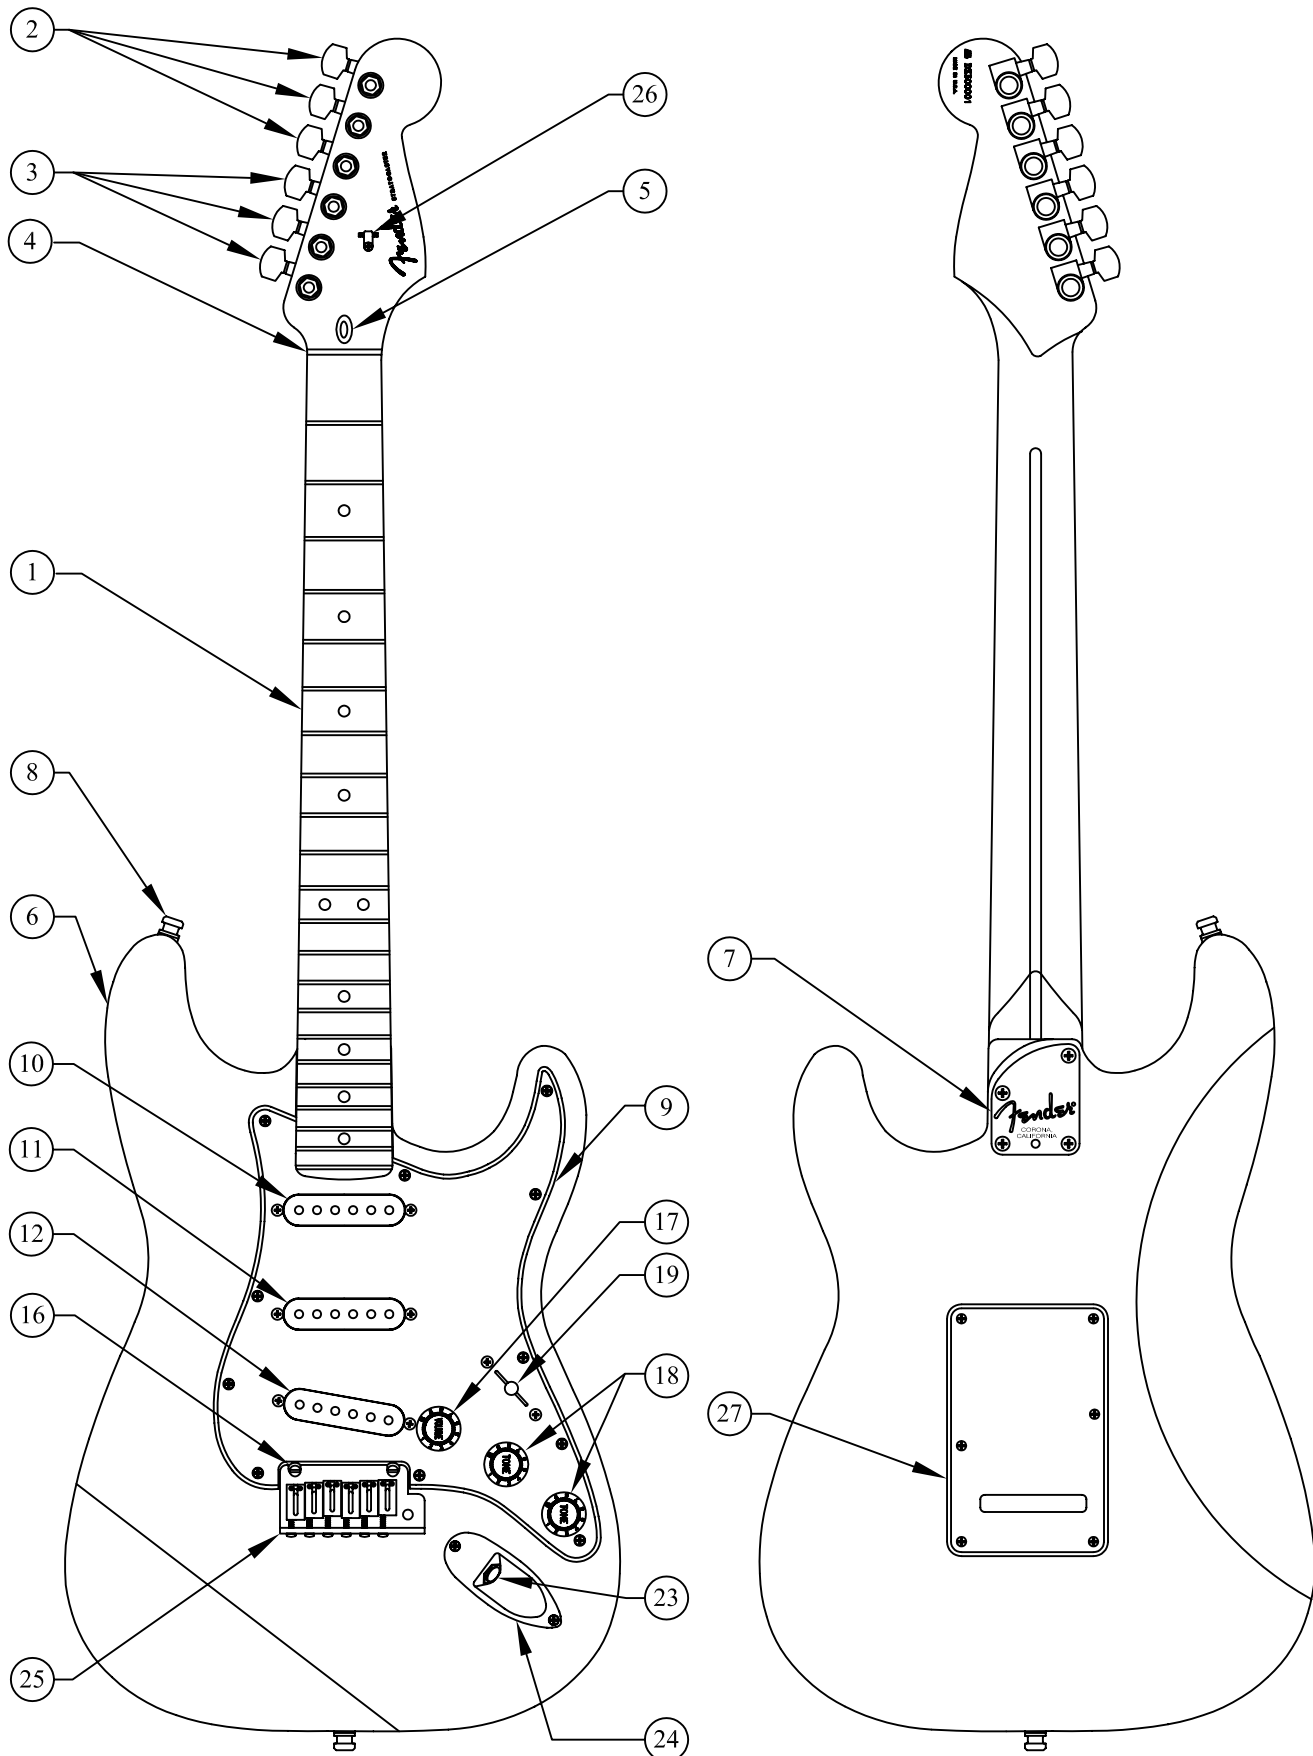

AMERICAN DELUXE STRATOCASTER® ASH 0101400/1402, RW/MN


BODY, PICKGUARD, PICKUP, BACKPLATE & KNOB COMBINATION CHART

BODY		PICKGUARD		PICKUP			BACKPLATE		VOLUME		TONE	SEL SW
P/N	Color	P/N	Color	P/N	REF.#	Color	P/N	Color	Knob	Cap	Knob	Knob
0059204531	Aged	0040830000	Aged	0062971030	10	Aged White	0038964000	Aged	0059267030	0059266030	0056144000	0053765000
	Cherry		White	0062972030	11	Aged White		White				
	Sunburst		Pearl	0062973030	12	Aged White		Pearl				
0059204550	Butter-	0063401000	Blk/	0062971020	10	Black	0063266000	Blk/	0059267020	0059266020	0056146000	0013267000
	scotch		Blk/	0062972020	11	Black		Blk/				
	Blonde		Blk	0062973020	12	Black		Blk				
0059204552	Tobacco	0040837000	Mint	0062971030	10	Aged White	0054029000	Mint	0059267030	0059266030	0056144000	0053765000
	Sunburst		Geen	0062972030	11	Aged White		Green				
			0062973030	12	Aged White							

REF.#	P/N	DESCRIPTION	REF.#	P/N	DESCRIPTION
1	0054016000	Neck, Dlx American Stratocaster®, RW	17	See Chart	Knob & Switch Cap, Volume
	0054017000	Neck, Dlx American Stratocaster®, MW	18	See Chart	Knob, Tone
2	0036447000	Tuning Key, (1,2,3) Ultra Pol Chr	19	See Chart	Knob, Selector Switch
	0058815000	Washer Schalr	20	0050610000	Switch, 5-Position, 4 Pole
	0058820000	Bushing Schalr		0021417000	Mounting Screw
3	0036448000	Tuning Key, (4,5,6) Ultra Pol Chr	21	0024832000	Capacitor, .022uF
	0058815000	Washer Schalr	22	0012869000	Solder Lug
	0058820000	Bushing Schalr		0015116000	Mounting Screw
4	0083675000	Bone Nut	23	0021956000	Output Jack
5	0023811000	Truss Rod Adjusting Wrench		0016436000	Lock Washer
6	See Chart	Body Stratocaster®		0016352000	Mounting Hex Nut
7	0059209000	Neck Mounting Plate	24	0010280090	Jack Ferrule
	0021424000	Mounting Screw		0021407000	Mounting Screw
	0031571000	Tilt Adjustment Screw	25	0036449000	Bridge Assembly
	0023811000	Tilt Adjusting Wrench		0036534000	Tremolo Arm
8	0021453000	Strap Button		0010272100	Tremolo Claw
	0021422000	Mounting Screw		0018671000	Tremolo Spring
	0019056000	Felt Washer, Black		0015636000	Mounting Screw
	0020491000	Felt Washer, White		0036527000	Bridge Plate
9	See Chart	Pickguard		0036528000	Bridge Section, (6)
	0021407000	Mounting Screw		0017031000	Intonation Screw, (6)
10	See Chart	Pickup, Neck		0019395000	Intonation Spring, (5&6)
	0063396000	Mounting Screw		0019394000	Intonation Spring, (1-4)
	0063398000	Mounting Tube		0026779000	Height Adjustment Screw, (1&6)
11	See Chart	Pickup, Middle		0026780000	Height Adjustment Screw, (2-5)
	0063396000	Mounting Screw		0036530000	Bridge Block
	0063398000	Mounting Tube		0036615000	Set Screw
12	See Chart	Pickup, Bridge	26	0021537000	String Retainer
	0063396000	Mounting Screw		0021405000	Mounting Screw
	0063398000	Mounting Tube	27	See Chart	Back Plate AM Series Stratocaster®
13	0061256000	S-1 Sw/Pot Assy, 250K		0021407000	Mounting Screw
	0015552000	Capacitor, .05uF			
	0016352000	Mounting Nut			
	0022384000	Lock Washer			
14	0013446000	Control 250K			
	0016352000	Mounting Nut			
	0022384000	Lock Washer			
15	0050666000	Control 250K. No Load			
	0016352000	Mounting Nut			
	0022384000	Lock Washer			
16	0028957000	Pivot Screw			
	0028958000	Insert			


Pg. 3 of 4
5-7-2004 Rev. A

SWITCH & CONTROL FUNCTION

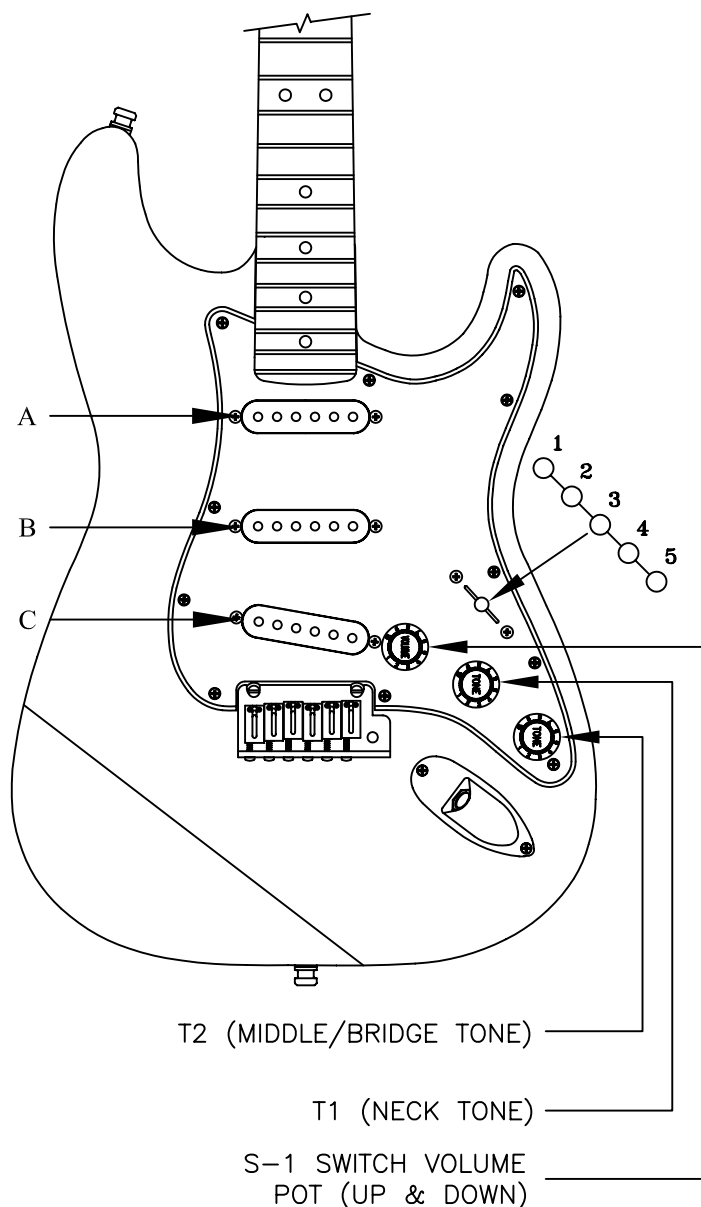

MV = MASTER VOLUME
 T1 = NECK TONE
 T2 = MID/BRIDGE TONE
 + = SERIES CONNECTION
 / = PARALLEL CONNECTION
 SC = SPECIALS CAPACITOR

5 WAY SW POSITIONS, S-1 SWITCH UP



1	2	3	4	5	POSITION
MV T1	MV T1+T2	MV T2	MV T2	MV T2	CONTROL
					← NECK (A)
					← MIDDLE (B)
					← BRIDGE (C)
	A/B		B/C		CONNECTION

5 WAY SW POSITIONS, S-1 SWITCH DOWN


1	2	3	4	5	POSITION
MV T1	MV T1+T2	MV T2	MV T2	MV T2	CONTROL
					← NECK (A)
					← MIDDLE (B)
					← BRIDGE (C)
A+B	(A/SC) + B	(A/C) + B	B + (C/SC)	B+C	CONNECTION

	PICKUP IS ON
	PICKUP IS OFF
A	PICKUP (NECK)
B	PICKUP (MIDDLE)
C	PICKUP (BRIDGE)


WIRING DIAGRAM

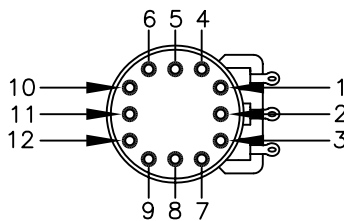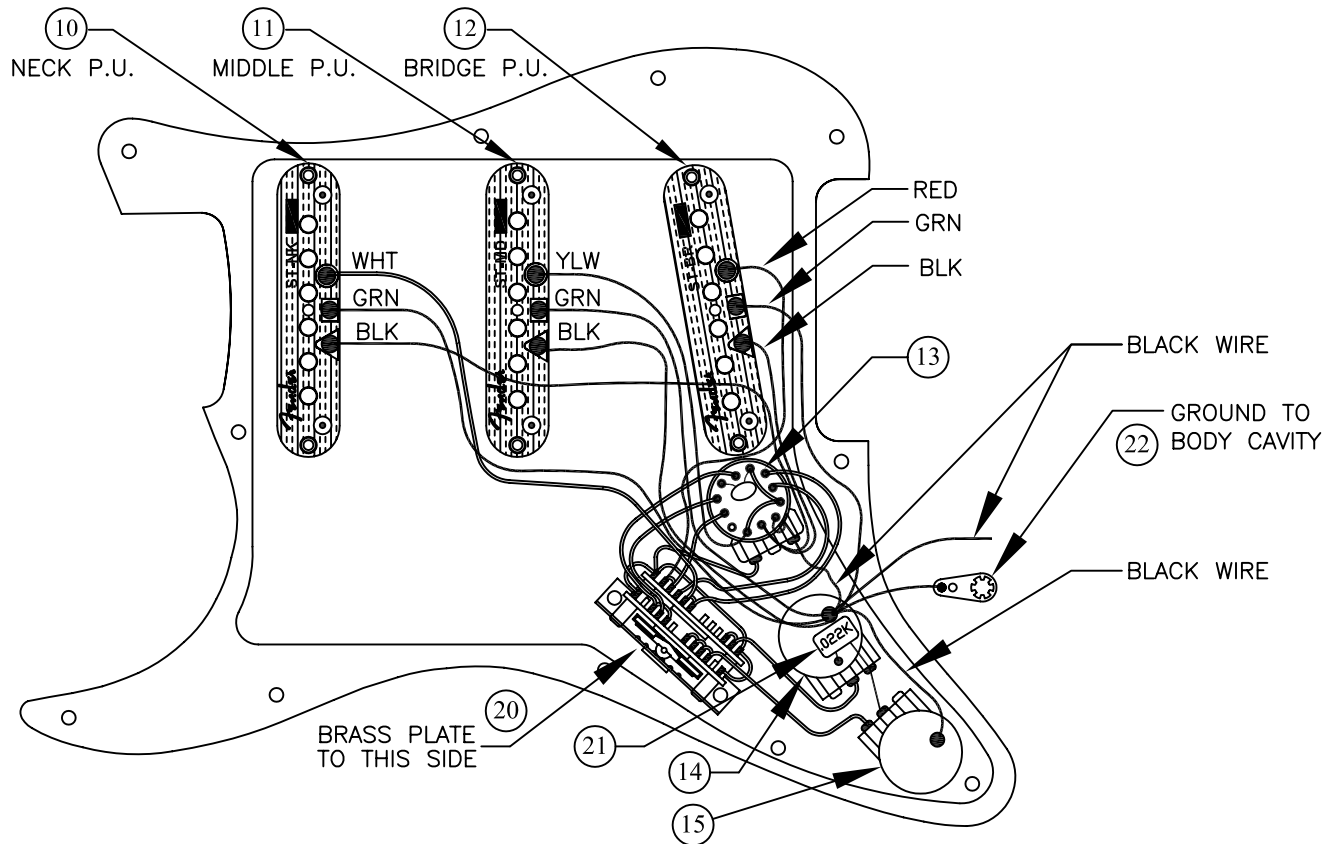

S-1 SWITCH TERMINAL NUMBERS

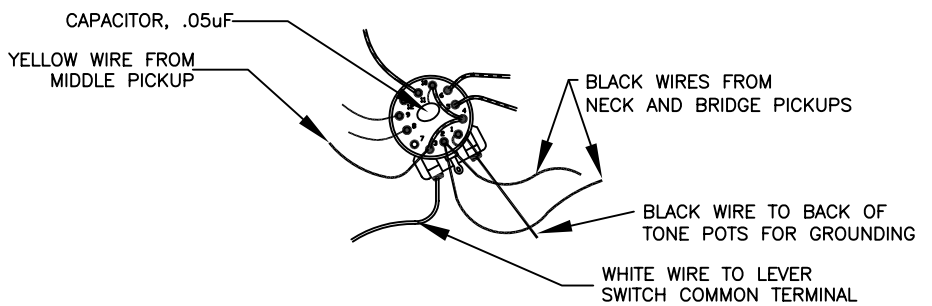

S-1 SWITCH WIRING DETAIL

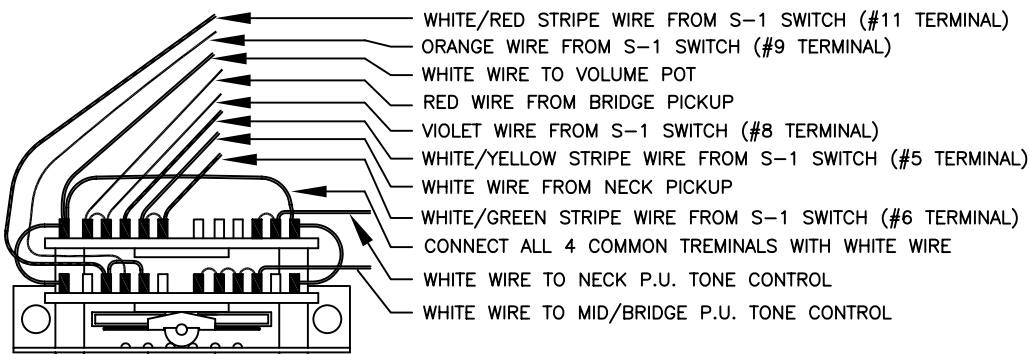

LEVER SWITCH WIRING DETAIL