


AMERICAN DELUXE ASH TELECASTER® 2013 (0119502XXX)

PARTS LAYOUT

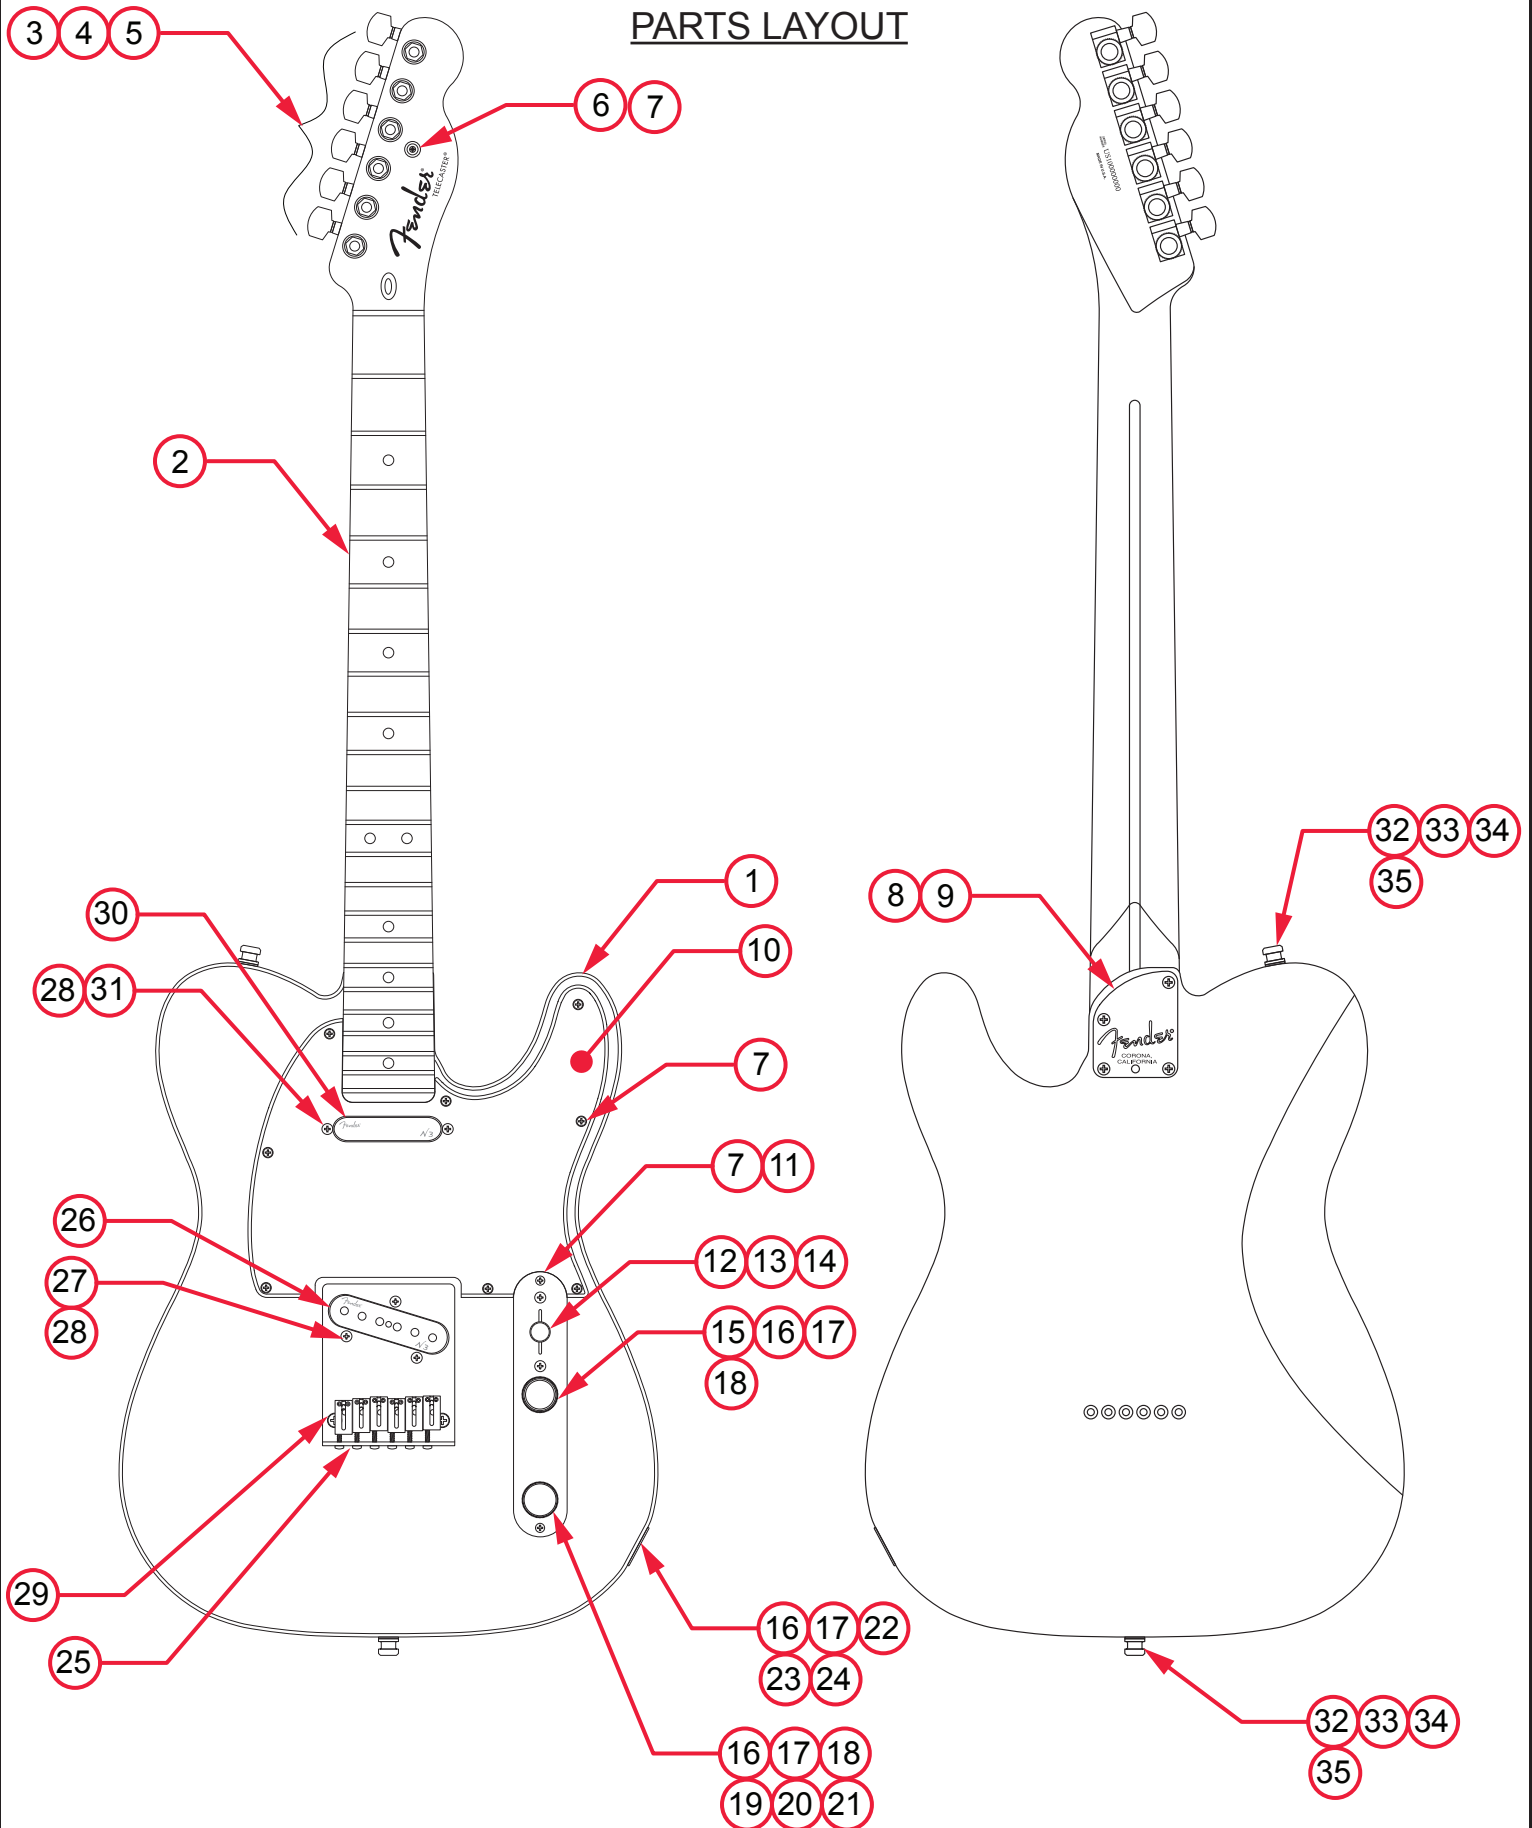

AMERICAN DELUXE ASH TELECASTER® 2013 (0119502XXX)

PARTS LIST

REF#	DESCRIPTION	PART NUMBER
1	BODY AM DLX TELE WBL	0093563501
1	BODY AM DLX TELE BTB	0093563550
1	BODY AM DLX TELE WTRANS	0093563575
2	NECK ASSY AM DLX TELE MPL UPGRD	0077688000
3	FENDER LOCKING TUNERS CHROME	0990818100
4	WASHERS KEY	0053106049
5	BUSHINGS KEY	0058820049
6	STRING GUIDE VINT /DLX TELE CHROME	0054625000
7	SCREW SMAB 4 X 1/2 OHP ZA CHR	0994923000
8	NECK PLATE DLX STRAT RH CHROME	0059209000
9	SCREW 8 X 1-3/4 OHP ZARTAN	0021424049
10	PICKGUARD AM STD MG/BLK/MG	0056083000
10	PICKGUARD AM STD B/W/B	0073054000
10	PICKGUARD AM STD BRN SHL	0041627000
10	PICKGUARD AM STD BLK PHEN	0064109000
11	CONTROL PLATE TELE VINT CHROME	0093823000
12	3 WAY LEVER SWITCH	0992041000
13	SWITCH KNOB VINT TELE	0994936000
14	SCREW 6-32 X 5/8 ZARTAN	0994925000
15	SW KNOB TELE/P-BASS CHROME	0059272000
15A	SW CAP TELE/P-BASS CHROME	0059270000
*15B	COUPLING SLEEVE SOSH NYL	0059278000
*15C	SW/POT ASSY S-1 250K SOSH	0078979000
*16	NUT HEX 3/8-32 X 3/32 TK NI	0016352049
*17	WASHER LOCK INTL 3/8 X .687	0016436049
18	SCREW SET 8-32 X 3/16	9949220000
19	KNOB CONTROL ALUM CHROME	0095799000
*20	CONTROL 250K 10% TAPER NO LOAD SOSH	0078782000
*21	CAPACITOR MPF RDL .022µF 250V	0024832049
*22	JACK PHONE OPEN CIRUIT 11	0021956049
23	JACK FERRULE STD TELE CHROME	0021452000
*24	RETAINER JACK NI PLT TELE	0010355069

*= NOT PICTURED IN DIAGRAM



AMERICAN DELUXE ASH TELECASTER® 2013 (0119502XXX)


REF#	DESCRIPTION	PART NUMBER
25	BRIDGE ASSY AM DLX TELE UPGRD	0077657000
25A	BRIDGE PLATE AM DLX TELE RH CHROME	0077094000
25B	SADDLE CC TELE CHROME RH	0058083000
25C	SPRING INTONATION .115 X 1/2 BLK	0029094049
25D	SPRING INTONATION .115 X 5/8 BLK	0029095049
25E	SCREW M 4-40 X 3/4 PHP BLX	0031913049
25F	SCREW M 4-40 X 5/8 PHP BLK	0017031049
25G	SCREW HEIGHT ADJ 4-40 X 3/8	0018027049
25H	SCREW HEIGHT ADJ 5/16	0026780049
26	PICKUP ASSY TELE BRIDGE ALN35	0993116001
27	SCREW SPCL M 4-40 X 13/16 M5 RHP ZARTAN	0063396049
*28	TUBING SIL RUBBER CUT RED .625	0068156000
29	SCREW SMA 8 X 1 OHP ZA CHR	0021373049
30	PICKUP ASSY TELE NECK ALN55	0993116002
31	SCREW M 4-40 X 7/8 RHP ZA	0059319000
32	STRAP BUTTONS STD/ELITE CHROME	0994914000
33	SCREW SMAB 5 X 1 OHP ZA CHROME	0021422049
34	WASHER FELT BLACK	0019056049
35	WASHER FELT WHITE	0020491049
*	CASE ABS MOLDED STRAT/TELE	0095756000
*	WRENCH .050 HEX KEY SHORT ARM	0018531049
*	WRENCH 1/8 X 1-1/4 X 2-3/4 HEX	0023811049
*	STRAP LOCK	0990690000

*= NOT PICTURED IN DIAGRAM




AMERICAN DELUXE ASH TELECASTER® 2013 (0119502XXX)

WIRING ASSEMBLY

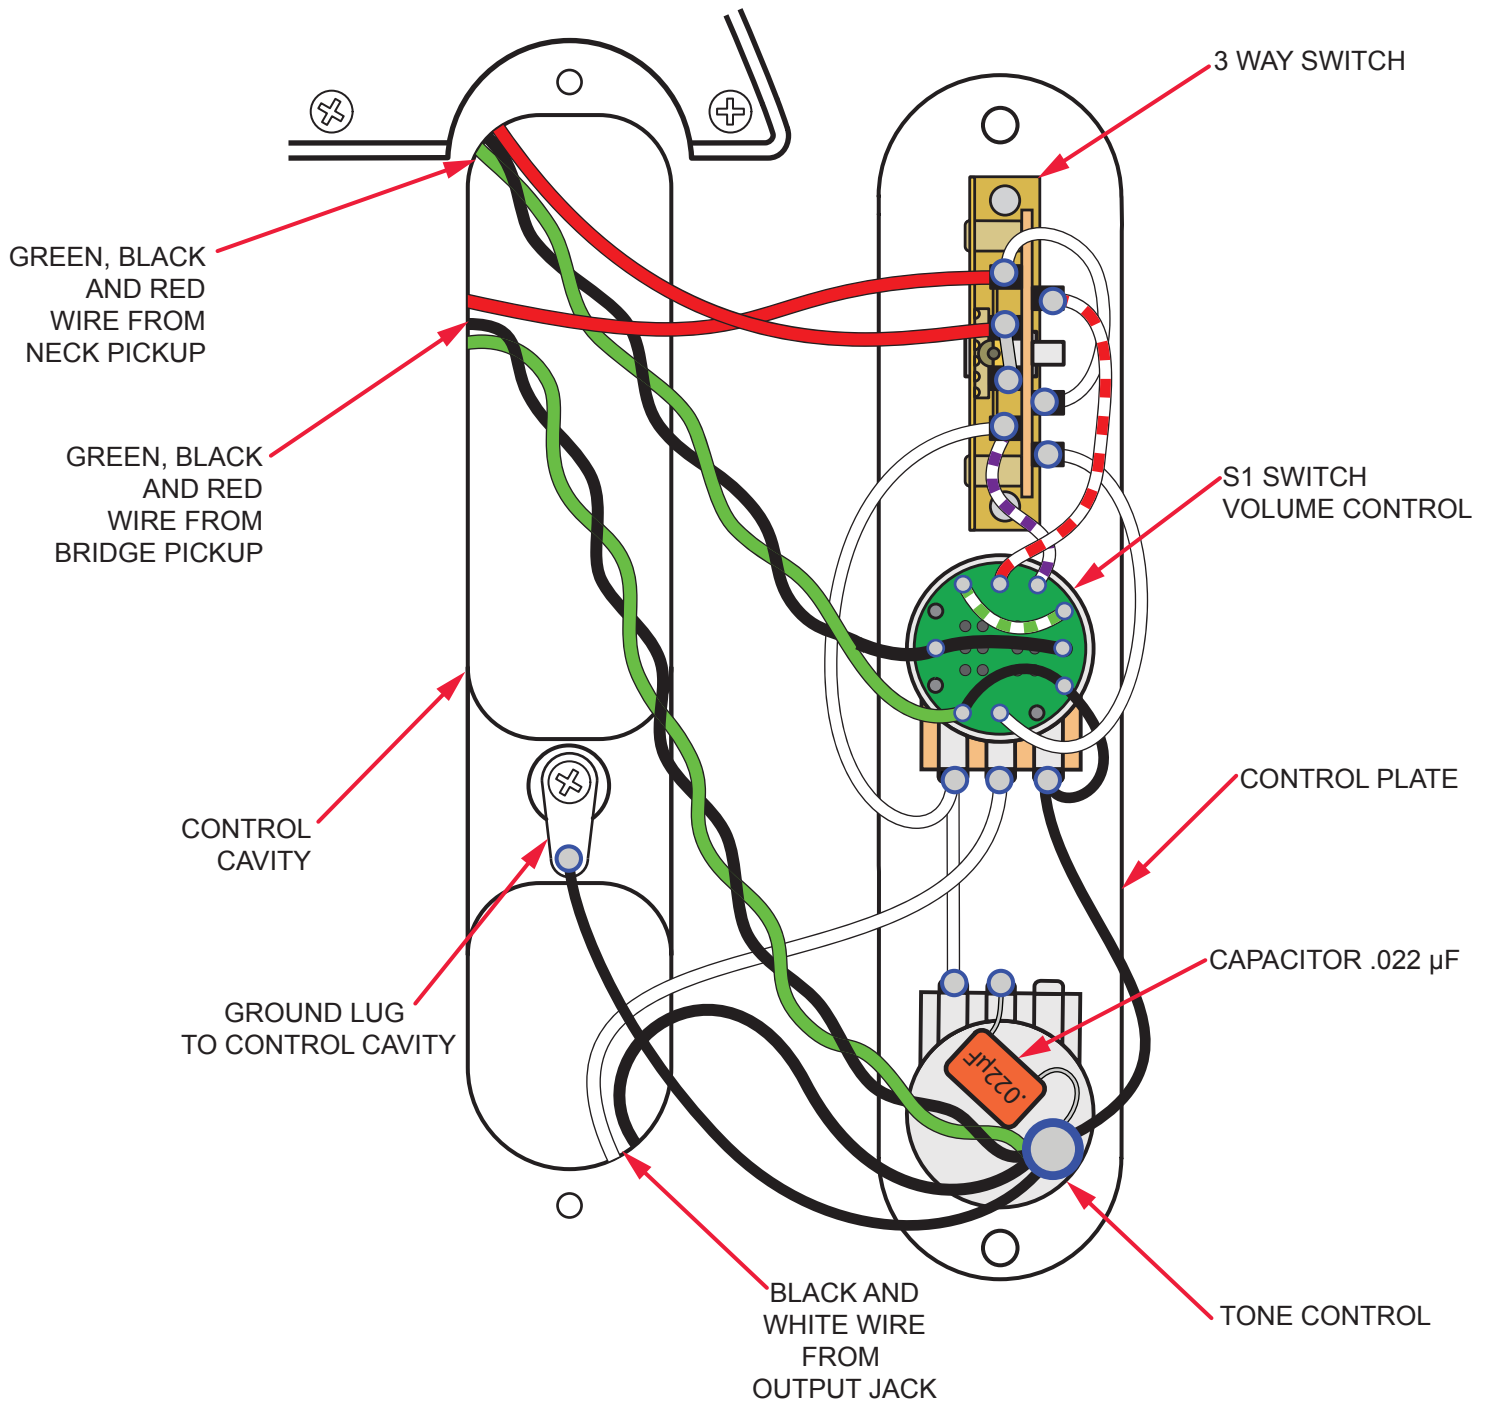

AMERICAN DELUXE ASH TELECASTER® 2013 (0119502XXX)

SWITCH AND CONTROL FUNCTION

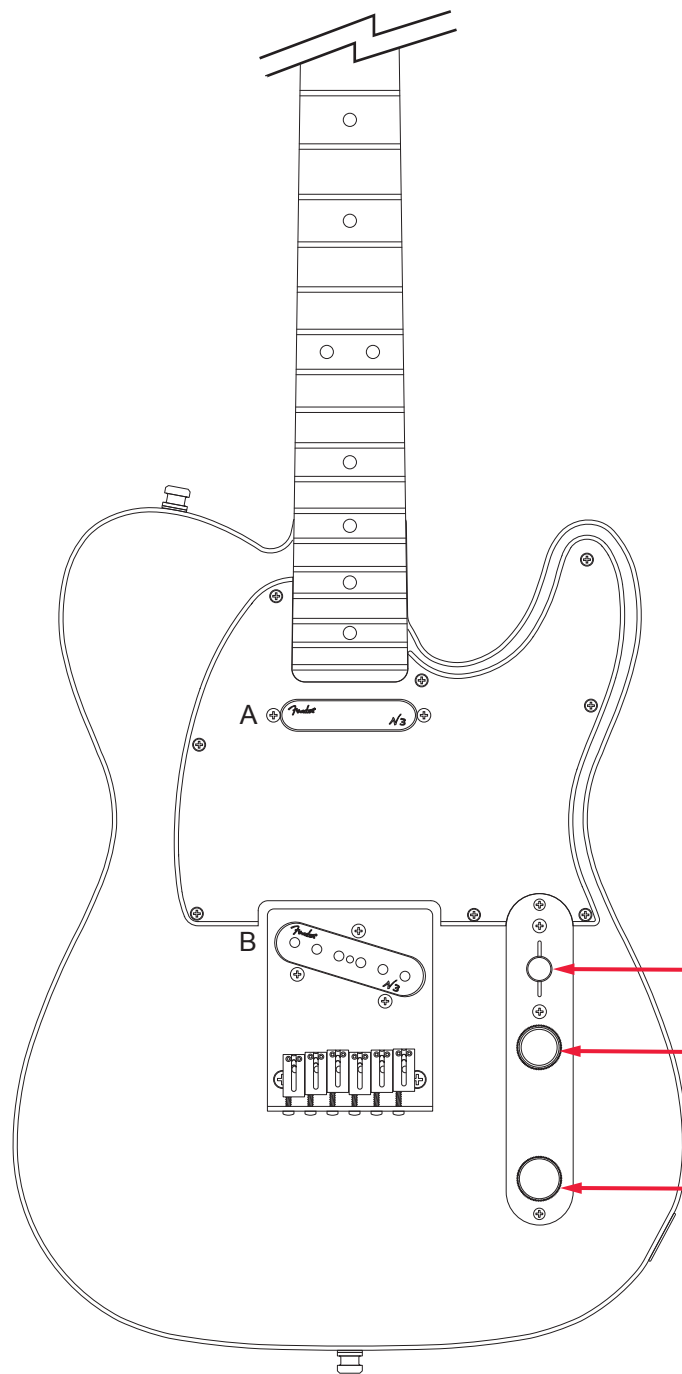

3 WAY SWITCH POSITIONS			
			← 3 WAY SWITCH POSITION
			← NECK PICKUP (A)
			← BRIDGE PICKUP (B)
3 WAY & S1 SWITCH POSITIONS			
	S1 SWITCH FUNCTIONS WORK IN #2 POSITION OF 3 WAY SWITCH <u>ONLY</u>		
			OFF - UP POSITION - S1 SWITCH CONNECTS PICKUPS PARALLEL
			ON - DOWN POSITION - S1 SWITCH CONNECTS PICKUPS IN SERIES
	PICKUP IS ON	 1 INDICATES 3 WAY SWITCH POSITION	
	PICKUP IS OFF		

3 WAY SWITCH

S 1 SWITCH / MASTER VOLUME

MASTER TONE