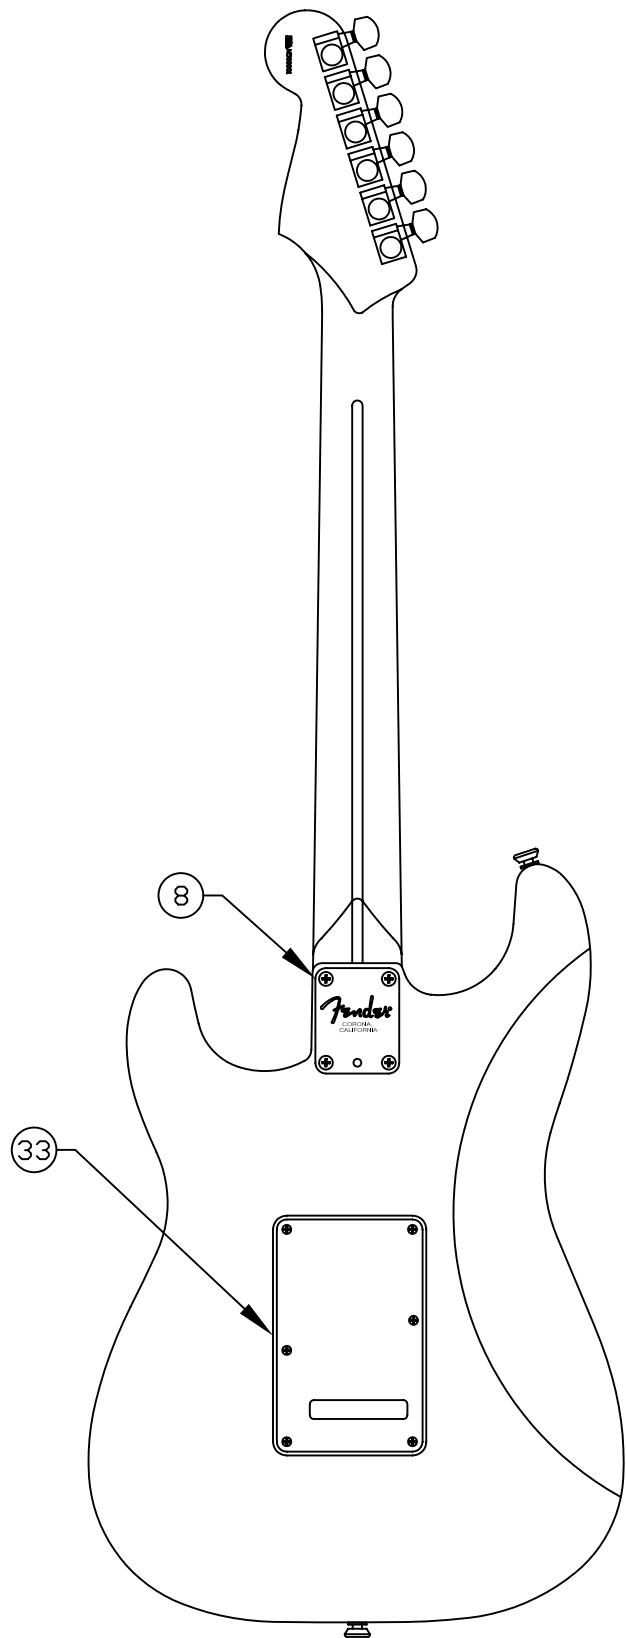
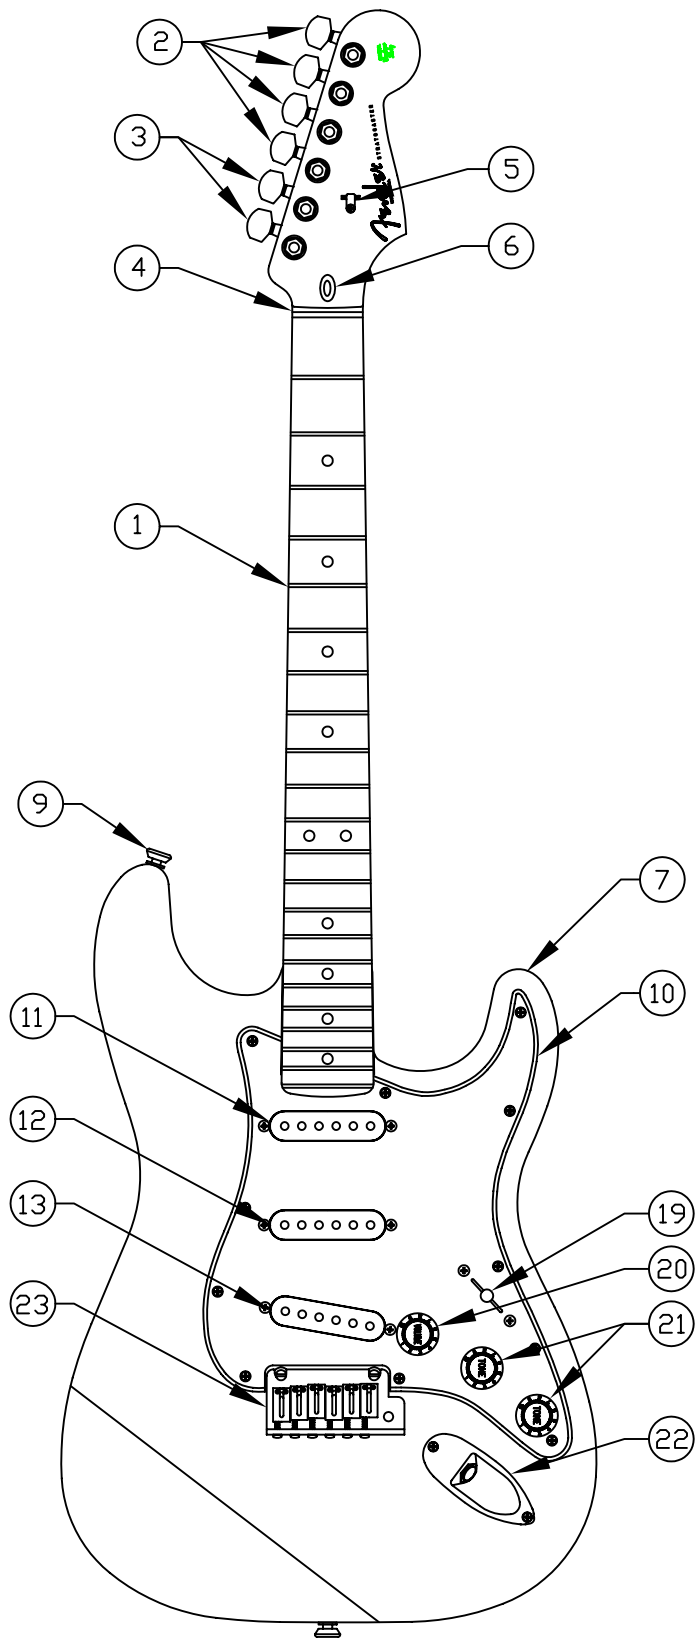


AMERICAN SERIES STRATOCASTER® , 011-7400/02



Fender®

AMERICAN SERIES STRATOCASTER® , 011-7400/02

REF.#	P/N	DESCRIPTION	REF.#	P/N	DESCRIPTION
1	0056215000	Neck, American Strat, RW	22	0021956000	Output Jack
	0075398000	Neck, American Strat, MN		0016352000	Mounting Hex Nut
2	0058142000	Tuning Key, (4)		0016436000	Lock Washer, Intl
	0053107000	Bushing		0010280090	Jack Ferrule, Chrome
	0053106000	Washer		0021407000	Mounting Screw
3	0037429000	Tuning Key (2)	23	0026095000	Bridge Assy, Std Stratocaster
	0053107000	Bushing		0028958000	Insert, Bridge Pivot
	0053106000	Washer		0028957000	Screw, Bridge Pivot
4	0083675000	Bone Nut	24	0026097000	Bridge Plate
5	0021537000	String Guide	25	0026099000	Bridge Section, (6)
	0021405000	Mounting Screw	26	0017031000	Intonation Screw, (6)
6	0023811000	Truss Rod Adjusting Wrench	27	0019395000	Intonation Spring, (2)
7	0054014000	Body, Am Std Strat, (For Sunburst)	28	0019394000	Intonation Spring, (4)
	0056229000	Body, Am Std Strat, (For Solid Colors)	29	0026779000	Height Adjustment Screw, (4)
8	0054038000	Neck Plate, Spaghetti Logo, Tilt	30	0026780000	Height Adjustment Screw, (8)
	0021424000	Mounting Screw	31	0019656000	Plate-to-Bridge Block Mounting Screw
	0031571000	Tilt Adjustment Screw	32	0026098000	Bridge Block
	0023811000	Tilt Adjustment wrench	33	0056212000	Back Cover, Parch/Black/Parch
9	0063267000	Strap Button		0063266000	Back Cover, B/B/B
	0016188000	Mounting Screw		0021407000	Mounting Screw
	0019056000	Felt Washer, Black		0010272100	Tremolo Claw
	0020491000	Felt Washer, White		0018671000	Tremolo Spring
10	0056198000	Pickguard, American Strat, Parch		0015636000	Mounting Screw
	0063401000	Pickguard, American Strat, B/B/B			
	0021407000	Mounting Screw			
11	0056205000	Pickup Assy, Parch, Neck			
	0063413000	Pickup Assy, Black, Neck			
	0048631000	Mounting Screw			
	0036481000	Tubing			
12	0056206000	Pickup Assy, Parch, Mid			
	0063414000	Pickup Assy, Black, Mid			
	0048631000	Mounting Screw			
	0036481000	Tubing			
13	0056207000	Pickup Assy, Parch, Bridge			
	0063416000	Pickup Assy, Black, Bridge			
	0048631000	Mounting Screw			
	0036481000	Tubing			
14	0013446000	Control, 250K, Volume			
	0016352000	Mounting Hex Nut			
	0022384000	Lock Washer, Intl			
15	0013446000	Control, 250K, Tone (T1)			
	0016352000	Mounting Hex Nut			
	0022384000	Lock Washer, Intl			
	0024832000	Capacitor, .022µF 250V			
16	0050666000	Control, 250K, No Load, Tone (T2)			
	0016352000	Mounting Hex Nut			
	0022384000	Lock Washer, Intl			
17	0053291000	Switch, 5 Way Grigsby			
	0021417000	Mounting Screw			
18	0012869000	Solder Lug			
	0015116000	Mounting Screw			
19	0056253000	Switch Knob, Parchment			
	0013267000	Switch Knob, Black			
20	0056254000	Knob, Strat Volume, Parchment			
	0056147000	Knob, Strat Volume, Black			
21	0056255000	Knob, Strat Tone, Parchment			
	0056146000	Knob, Strat Tone, Black			






BODY CHART

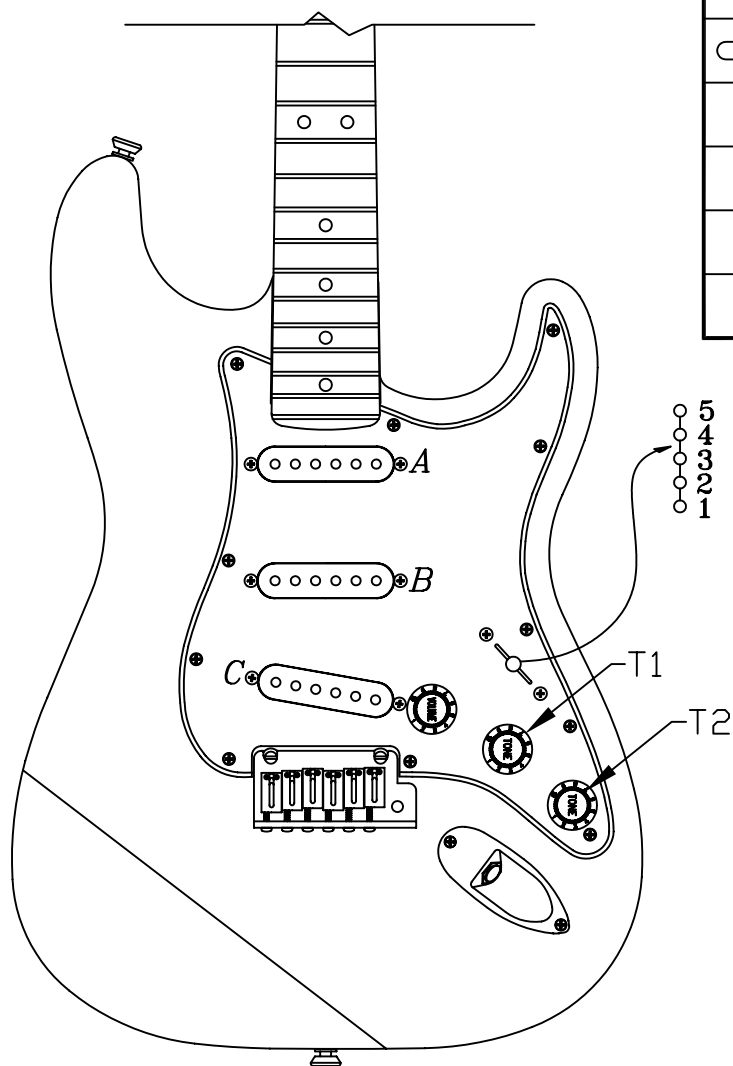
Body	Color
0054014500	3 Color Sunburst
0056229505	Olympic White
0056229506	Black
0056229512	Candy Cola
0054015525	Chrome Red
0056229550	Butterscotch Blonde
0056229569	Charcoal Frost Metallic



AMERICAN SERIES STRATOCASTER® , 011-7400/02

CONTROL FUNCTIONS

5 WAY SWITCH POSITION					
 5	 4	 3	 2	 1	
T1	T1 & T2	T2	T2	T2	
					← NECK PICKUP (A)
					← MIDDLE PICKUP (B)
					← BRIDGE PICKUP (C)
	PICKUP IS ON		 INDICATES POSITION OF 5 WAY SWITCH		
	PICKUP IS OFF				
A	PICKUP (NECK)				
B	PICKUP (MIDDLE)				
C	PICKUP (BRIDGE)				
NT	NO TONE				



Fender®

