


AMERICAN STANDARD TELECASTER / LEFT HAND / 0108422


REF.#	P/N	DESCRIPTION
1	0028189000	Neck, American Standard Telecaster, M/N
2	0022151000	Tuning Key, (1) Set, W/Bushing
3	0083675000	Bone Nut
4	0021537000	String Retainer
	0021405000	Mounting Screw
5	0020810000	Truss Rod Adjustment Nut
	0023811000	Truss Rod Adjusting Wrench
6	0028187xxx	Body, Am. Std. Tele., Solid Paint
	0055222xxx	Body, Am. Std. Tele., Sunburst
7	0054038000	Neck Mounting Plate
	0021424000	Mounting Screw
	0031571000	Tilt Adjustment Screw
	0023811000	Tilt Adjusting Wrench
8	0021453000	Strap Button
	0021422000	Mounting Screw
	0019056000	Felt Washer, Black
	0020491000	Felt Washer, White
9	0028190000	Pickguard, Am. Std. Tele., White/Black/White
	0021407000	Mounting Screw
10	0050890000	Pickup, Neck, Hot, Am. Std. Tele
	0021409000	Mounting Screw
	0039409000	Tubing, Latex Cut
11	0050888000	Pickup, Bridge, Hot, Am. Std. Tele
	0048631000	Mounting Screw
	0036878000	Tubing, Latex Cut
12	0019064000	Control, 250K, Audio, (2)
	0016352000	Mounting Hex Nut
	0016436000	Lock Washer, Intl
13	0013359000	Knob, Knurled (2)
	0028897001	Screw Set
14	0033134060	Control Plate
	0021407000	Mounting Screw
15	0053290000	Switch, Lever 3-Position
	0021413000	Mounting Screw
	0018359000	Knob, Black
16	0024832000	Capacitor, .022uf
17	0021956000	Output Jack
	0016352000	Mounting Hex Nut
	0016436000	Lock Washer, Intl
18	0021452000	Jack Ferrule
19	0028192000	Bridge Assembly, Telecaster
	0021373000	Mounting Screw
20	0028193000	Bridge Plate
21	0026111000	Bridge Section, (6)
22	0031913000	Intonation Screw, 5&6
	0029095000	Intonation Spring, 5&6
	0017031000	Intonation Screw, 1- 4
	0029094000	Intonation Spring, 1- 4
23	0026780000	Height Adjustment Screw, 1&6
	0018027000	Height Adjustment Screw, 2-5
	0018531000	Adjusting Wrench, Saddle Height
24	0021429000	Ferrule, String Retainer

Body Part Number	
0055222500	3 Color Sunburst
0028187505	Olympic White
0028187506	Black
0028187593	Purple Metallic


AMERICAN STANDARD TELECASTER / LEFT HAND / 0108422

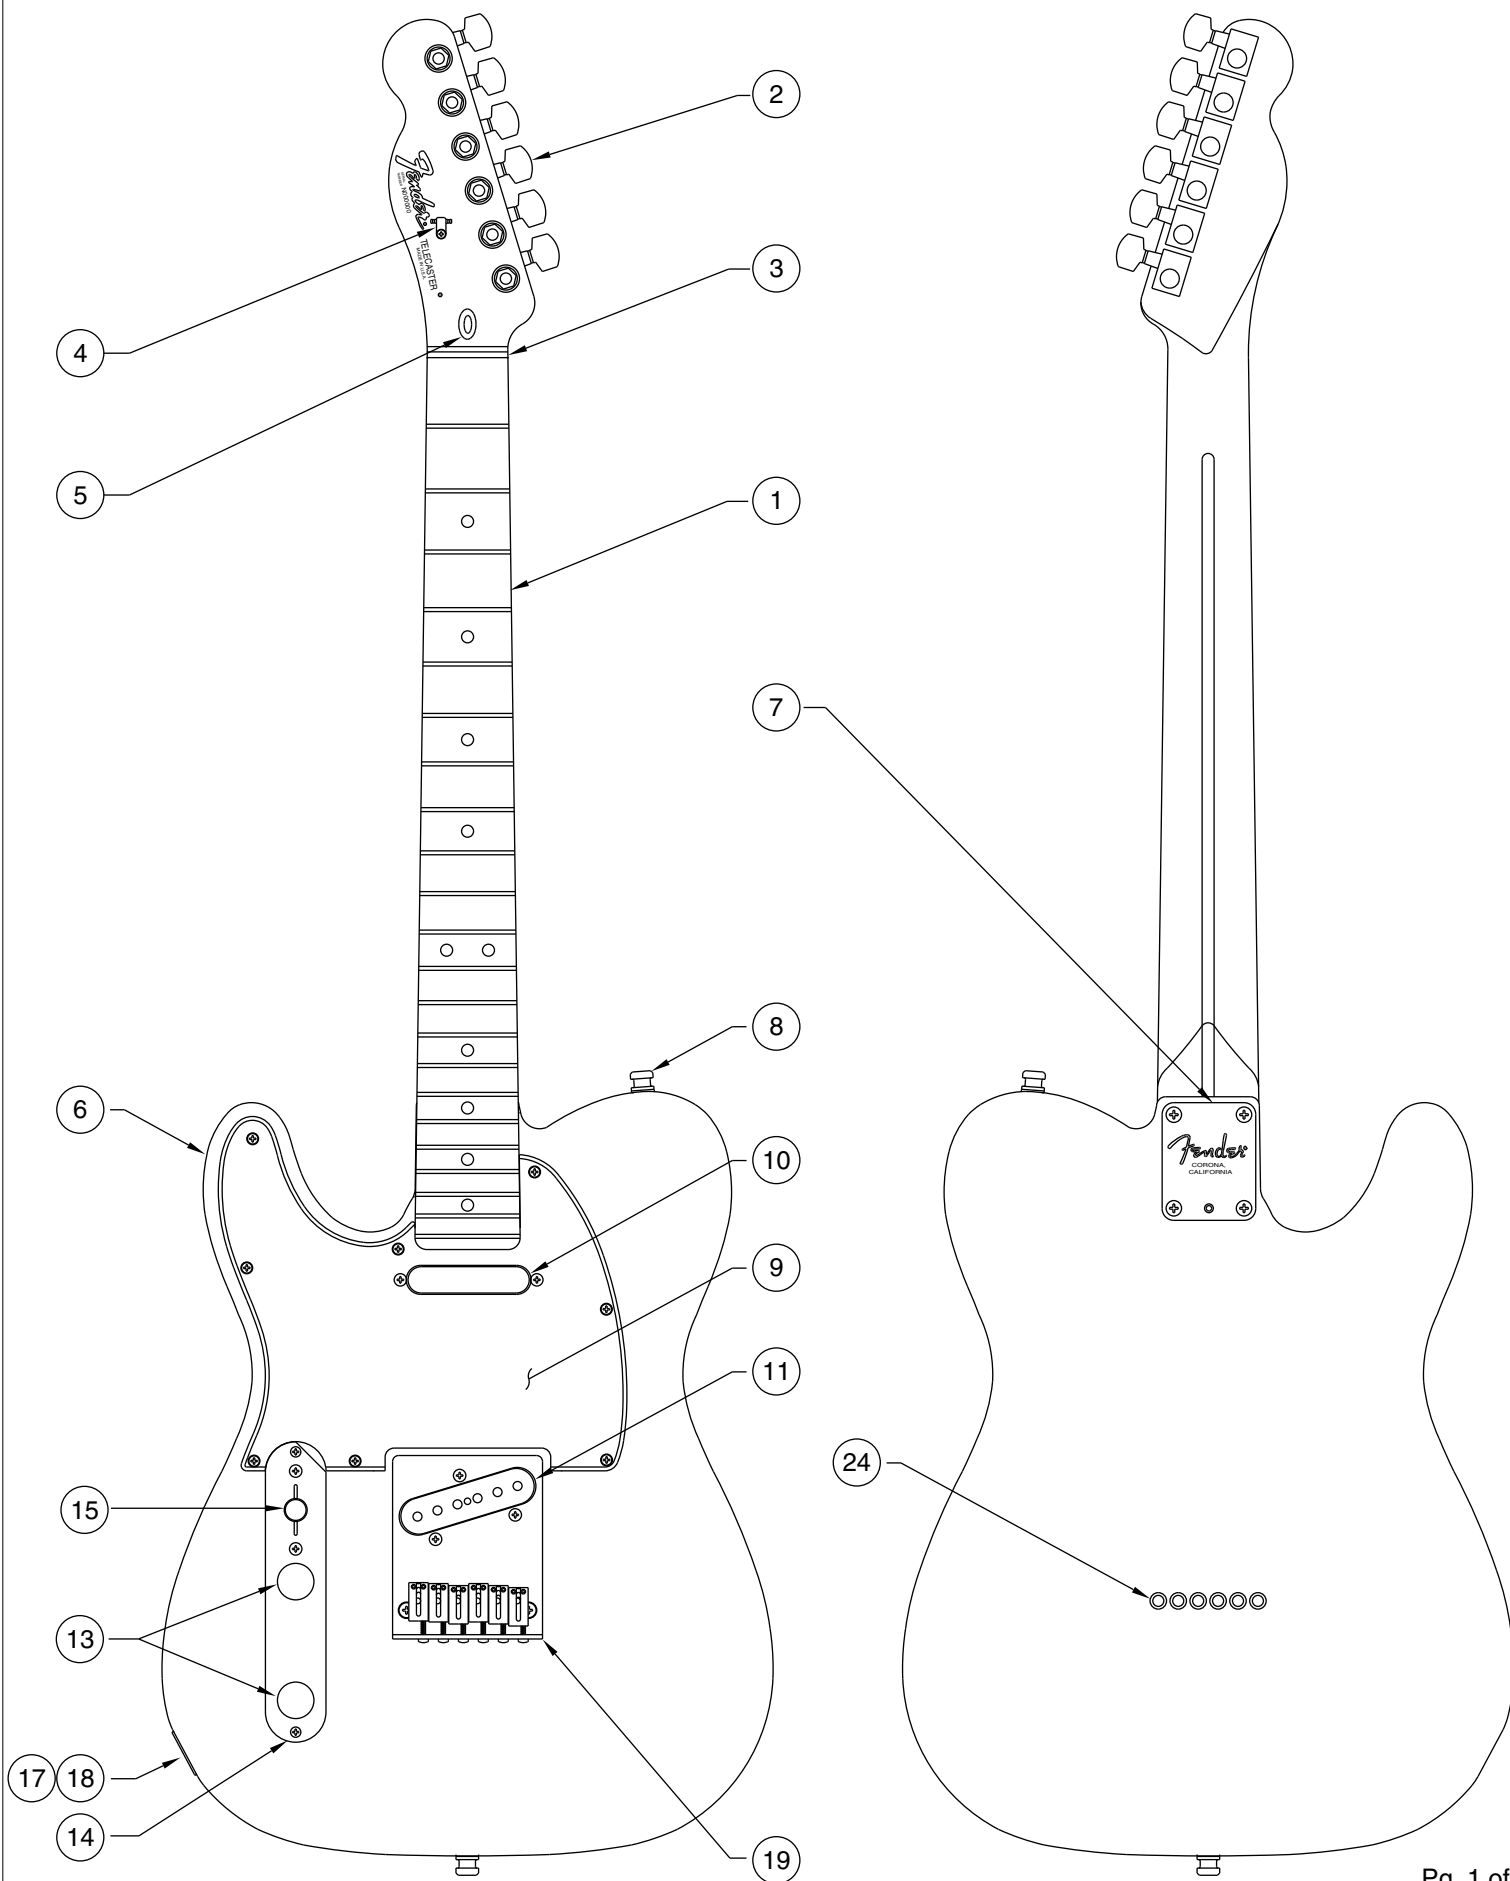

CONTROL ASSEMBLY

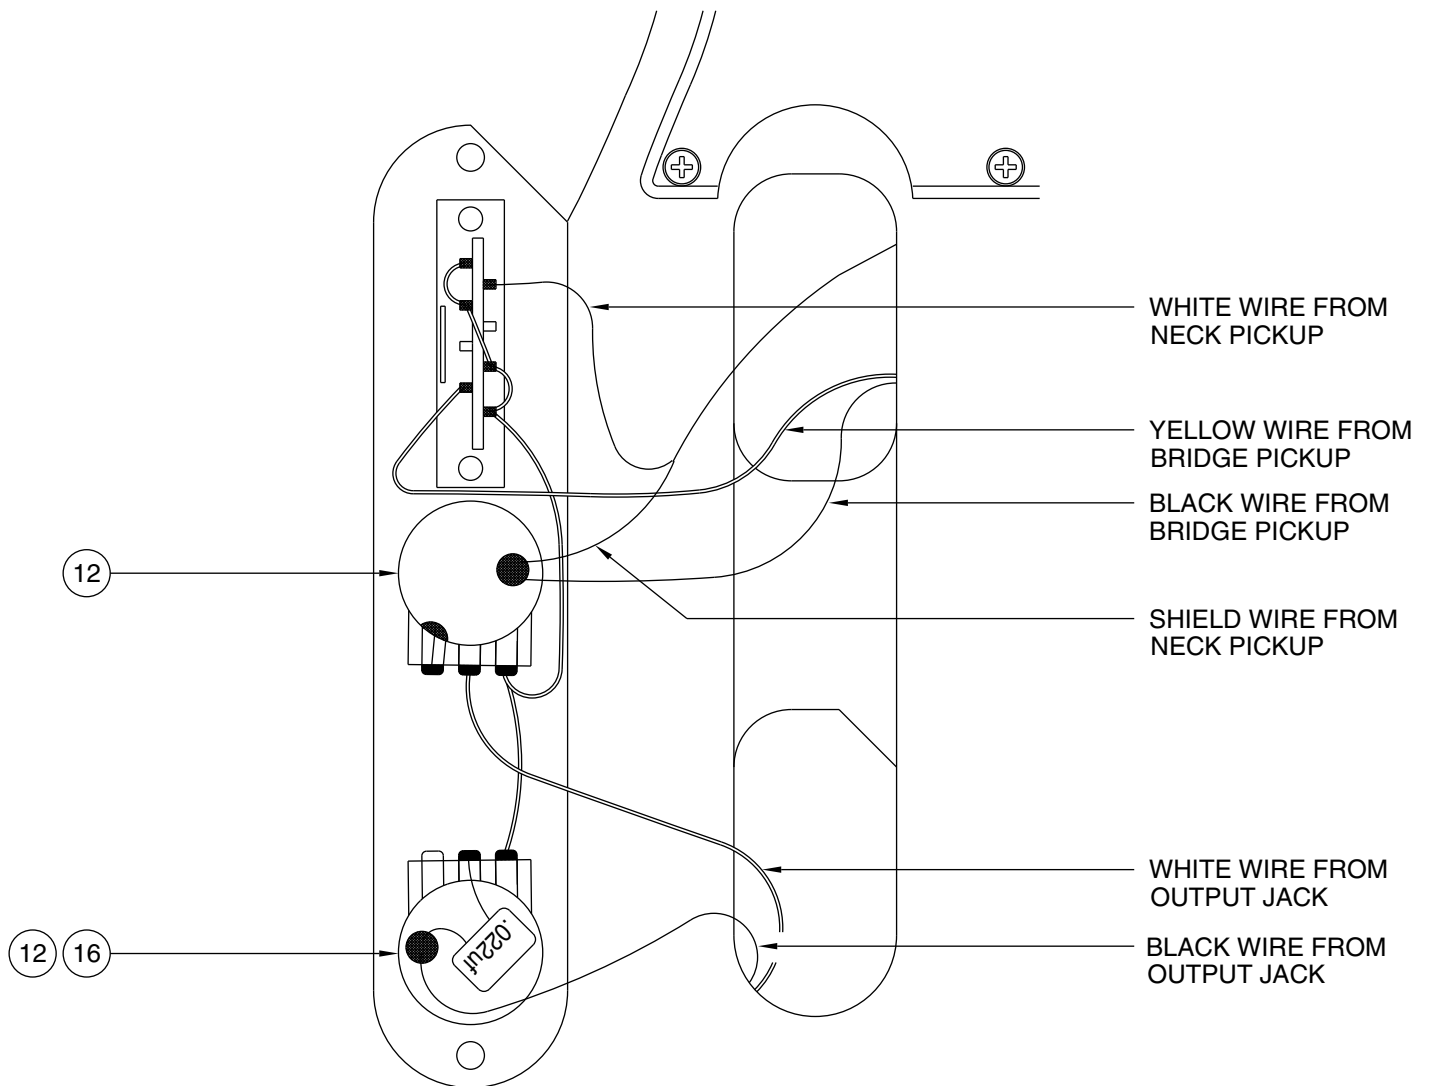


BRIDGE ASSEMBLY

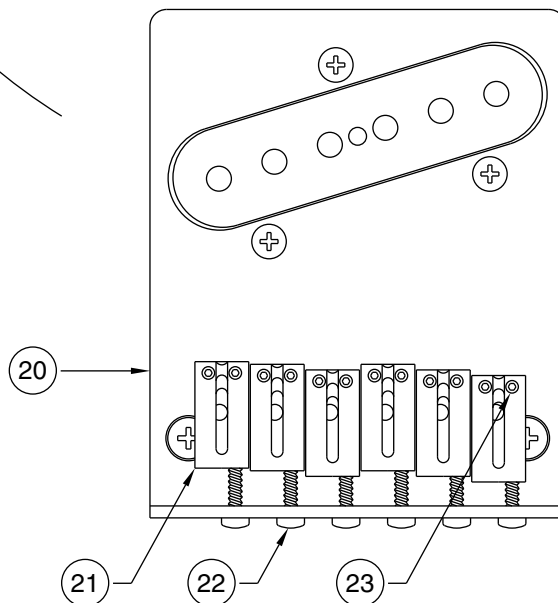

SWITCH & CONTROL FUNCTION

3 WAY SWITCH POSITION			
 3	 2	 1	← 3 WAY SWITCH POSITION
T1	T1	T1	← TONE CONTROL
			← NECK PICKUP
			← BRIDGE PICKUP
 PICKUP IS ON			 PICKUP IS OFF

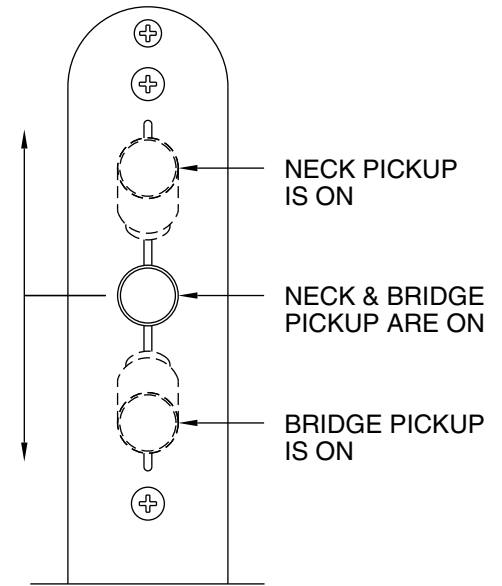

DETAIL
3 WAY SWITCH

