


CABRONITA TELECASTER® (0170148XXX)

PARTS LAYOUT

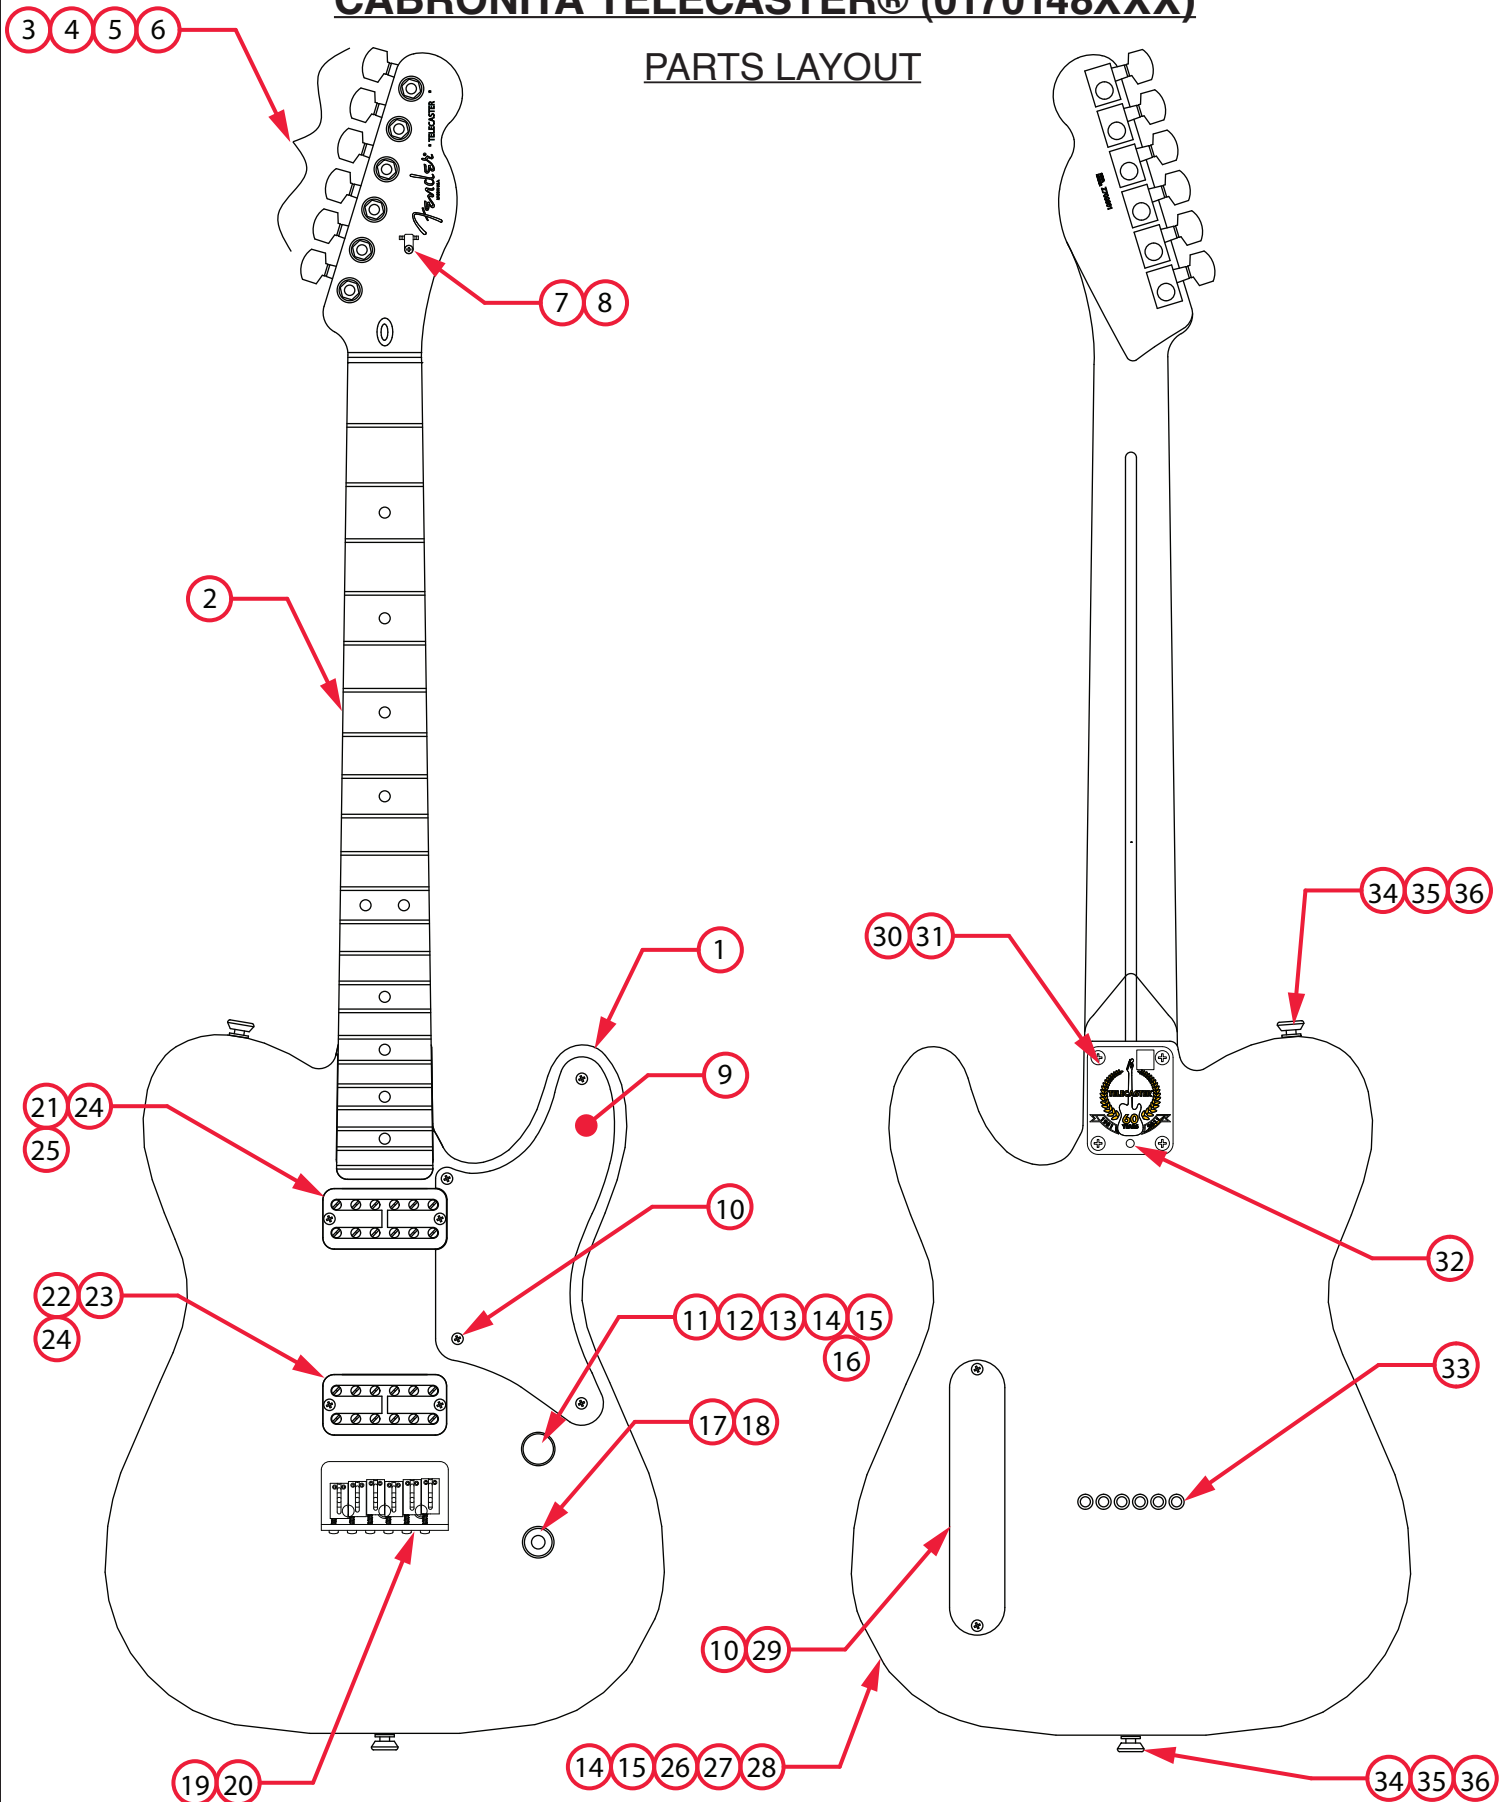

CABRONITA TELECASTER® (0170148XXX)

PARTS LIST

REF#	DESCRIPTION	PART NUMBER
1	BODY CABRONITA TELE 2TSB	0090780503
1	BODY CABRONITA TELE BLACK	0090780506
2	NECK AM TELE MPL	0075403000
3	KEY GTR DUAL PIN MTG	0037429000
4	KEY GTR 2 PIN MTG SHORT	0058142000
5	WASHER KEY	0053106049
6	BUSHING KEY	0058820049
7	STRING TREE GUIDE AM STD	0994911000
8	SCREW SMAB 3 X 3/8 RHP ZA CHR	0021405049
9	PICKGUARD CABRONITA TELE WHITE	0091112040
9	PICKGUARD CABRONITA TELE BLACK	0091112020
10	SCREW SMAB 4 X 1/2 HP ZA CHROME	0994923000
11	KNOB KNURLED CHROME	0991366000
12	SCREW ST 8-32 X 3/16	0994922000
13	WASHER FLAT 3/8 X .614 NI	0031153049
14	NUT HEX 3/8-32 X 3/32 TK NI	0016352049
15	WASHER LOCK INTL 3/8 X .687	0016436049
16	CONTROL 500K AUDIO 20% SOLID	0990835000
17	TOGGLE SWITCH 3-WAY CHROME	3511045338
18	WASHER INT TOOTH .500 X .815 X .04 	0036891000
19	BRIDGE ASSY AM STD NON TREMOLO	0032909000
19A	BRIDGE PLATE NON TREMOLO	0032911000
19B	BRIDGE SECTION AS STRAT/TELE	0990840000
19C	SCREW HEIGHT ADJ 1/4	0023779049
19D	SCREW HEIGHT ADJ 5/16	0026780049
19E	SPRING BRIDGE 4 COIL 3/8 BLACK	0019394049
19F	SPRING BRIDGE 3 COIL 1/4 BLACK	0019395049
19G	SCREW M 4-40 X 5/8 PHP BLACK	0017031049
20	SCREW SMA 8 X 1 OHP ZA CHROME	0021373049
21	PICKUP TVCB CHR BRG W/O EARS	0091091000
22	PICKUP TVCB CHR NECK W/O EARS	0091092000
23	WEATHER-STRIP 9/16 X 1/2 OP CL NEOP	0018556049
24	WOOD SCREW 3 X 1-1/2 OHP	0059185000
25	WEATHER-STRIP 3/8 X 3/8 OPN CL RUBBER	0017333049
26	JACK OPEN CIRCUIT 11	0021956049
27	FERRULE JACK STD TELE CHROME	0021452000

* = NOT PICTURED IN DIAGRAM




PARTS LIST

* = NOT PICTURED IN DIAGRAM

CABRONITA TELECASTER® (0170148XXX)

WIRING ASSEMBLY

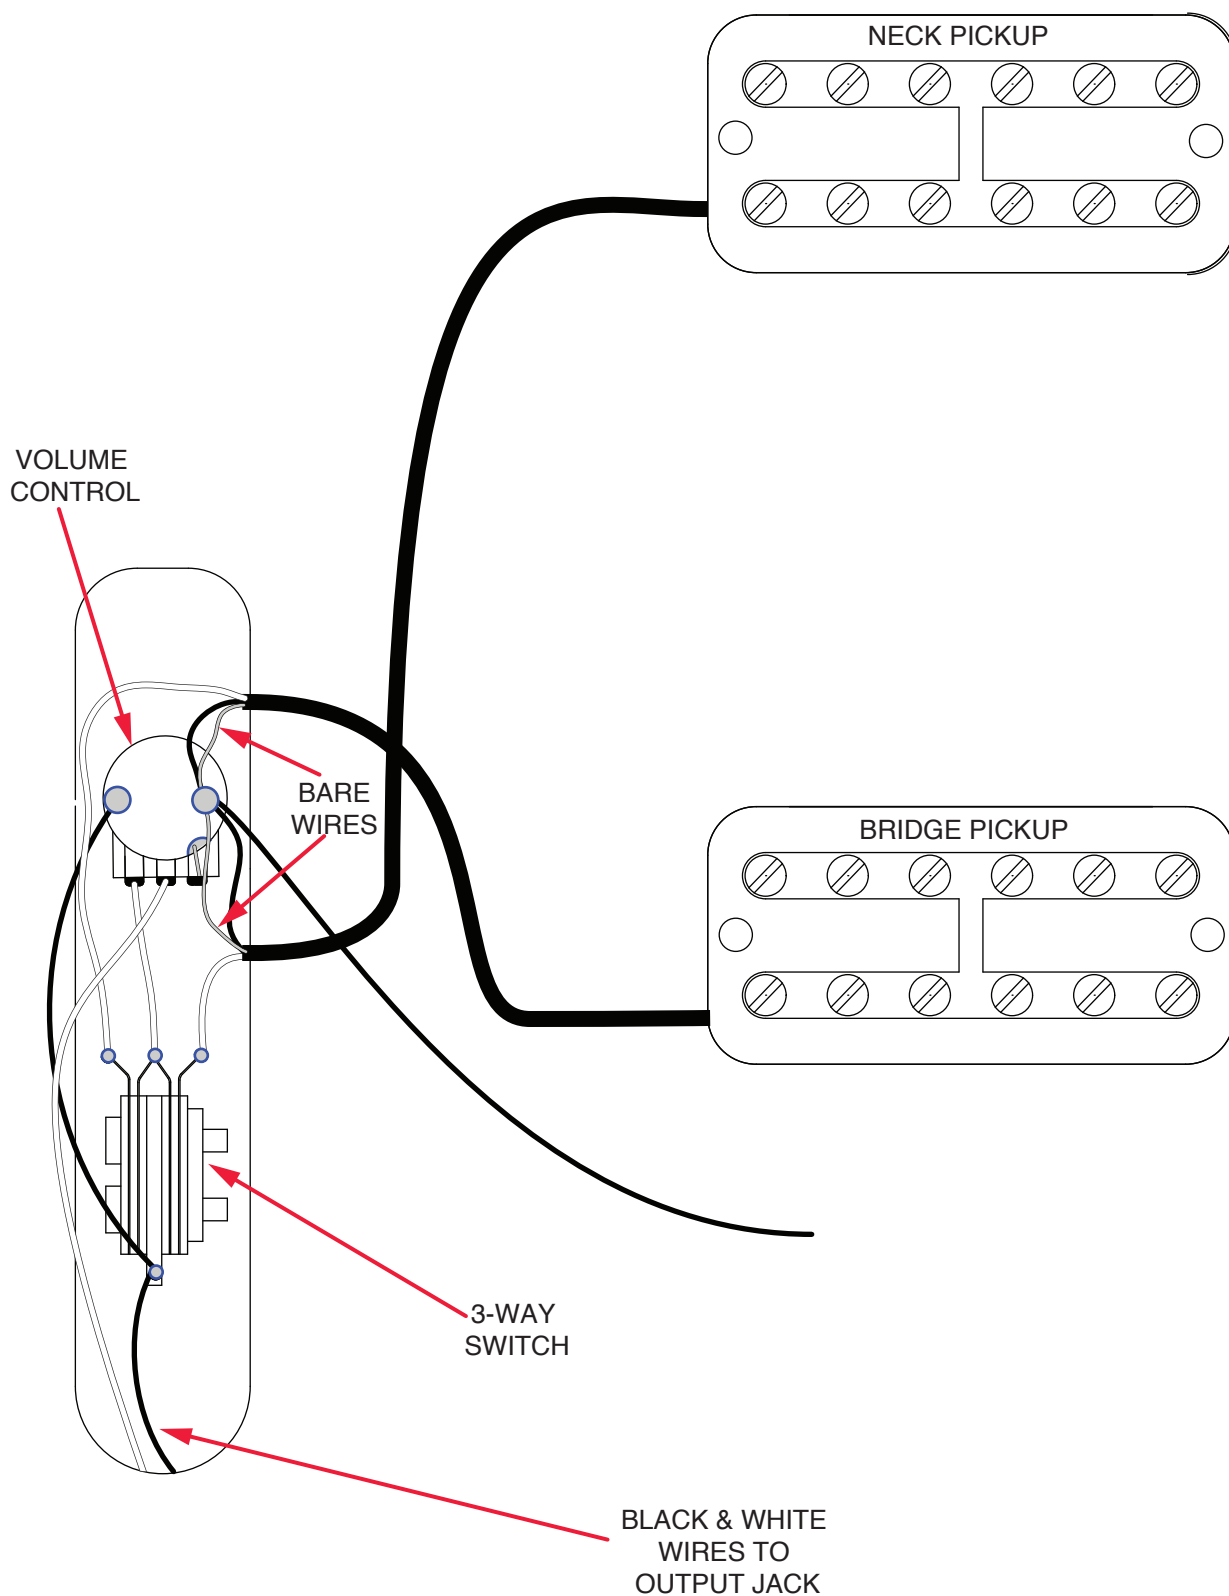

CABRONITA TELECASTER® (0170148XXX)

SWITCH AND CONTROL FUNCTION

3 WAY SWITCH POSITION			
			← 3 WAY SWITCH POSITION
Vol	Vol	Vol	← CONTROL
			← NECK PICKUP
			← BRIDGE PICKUP

