


EMPRESS TELECASTER® (0170143XXX)

PARTS LAYOUT

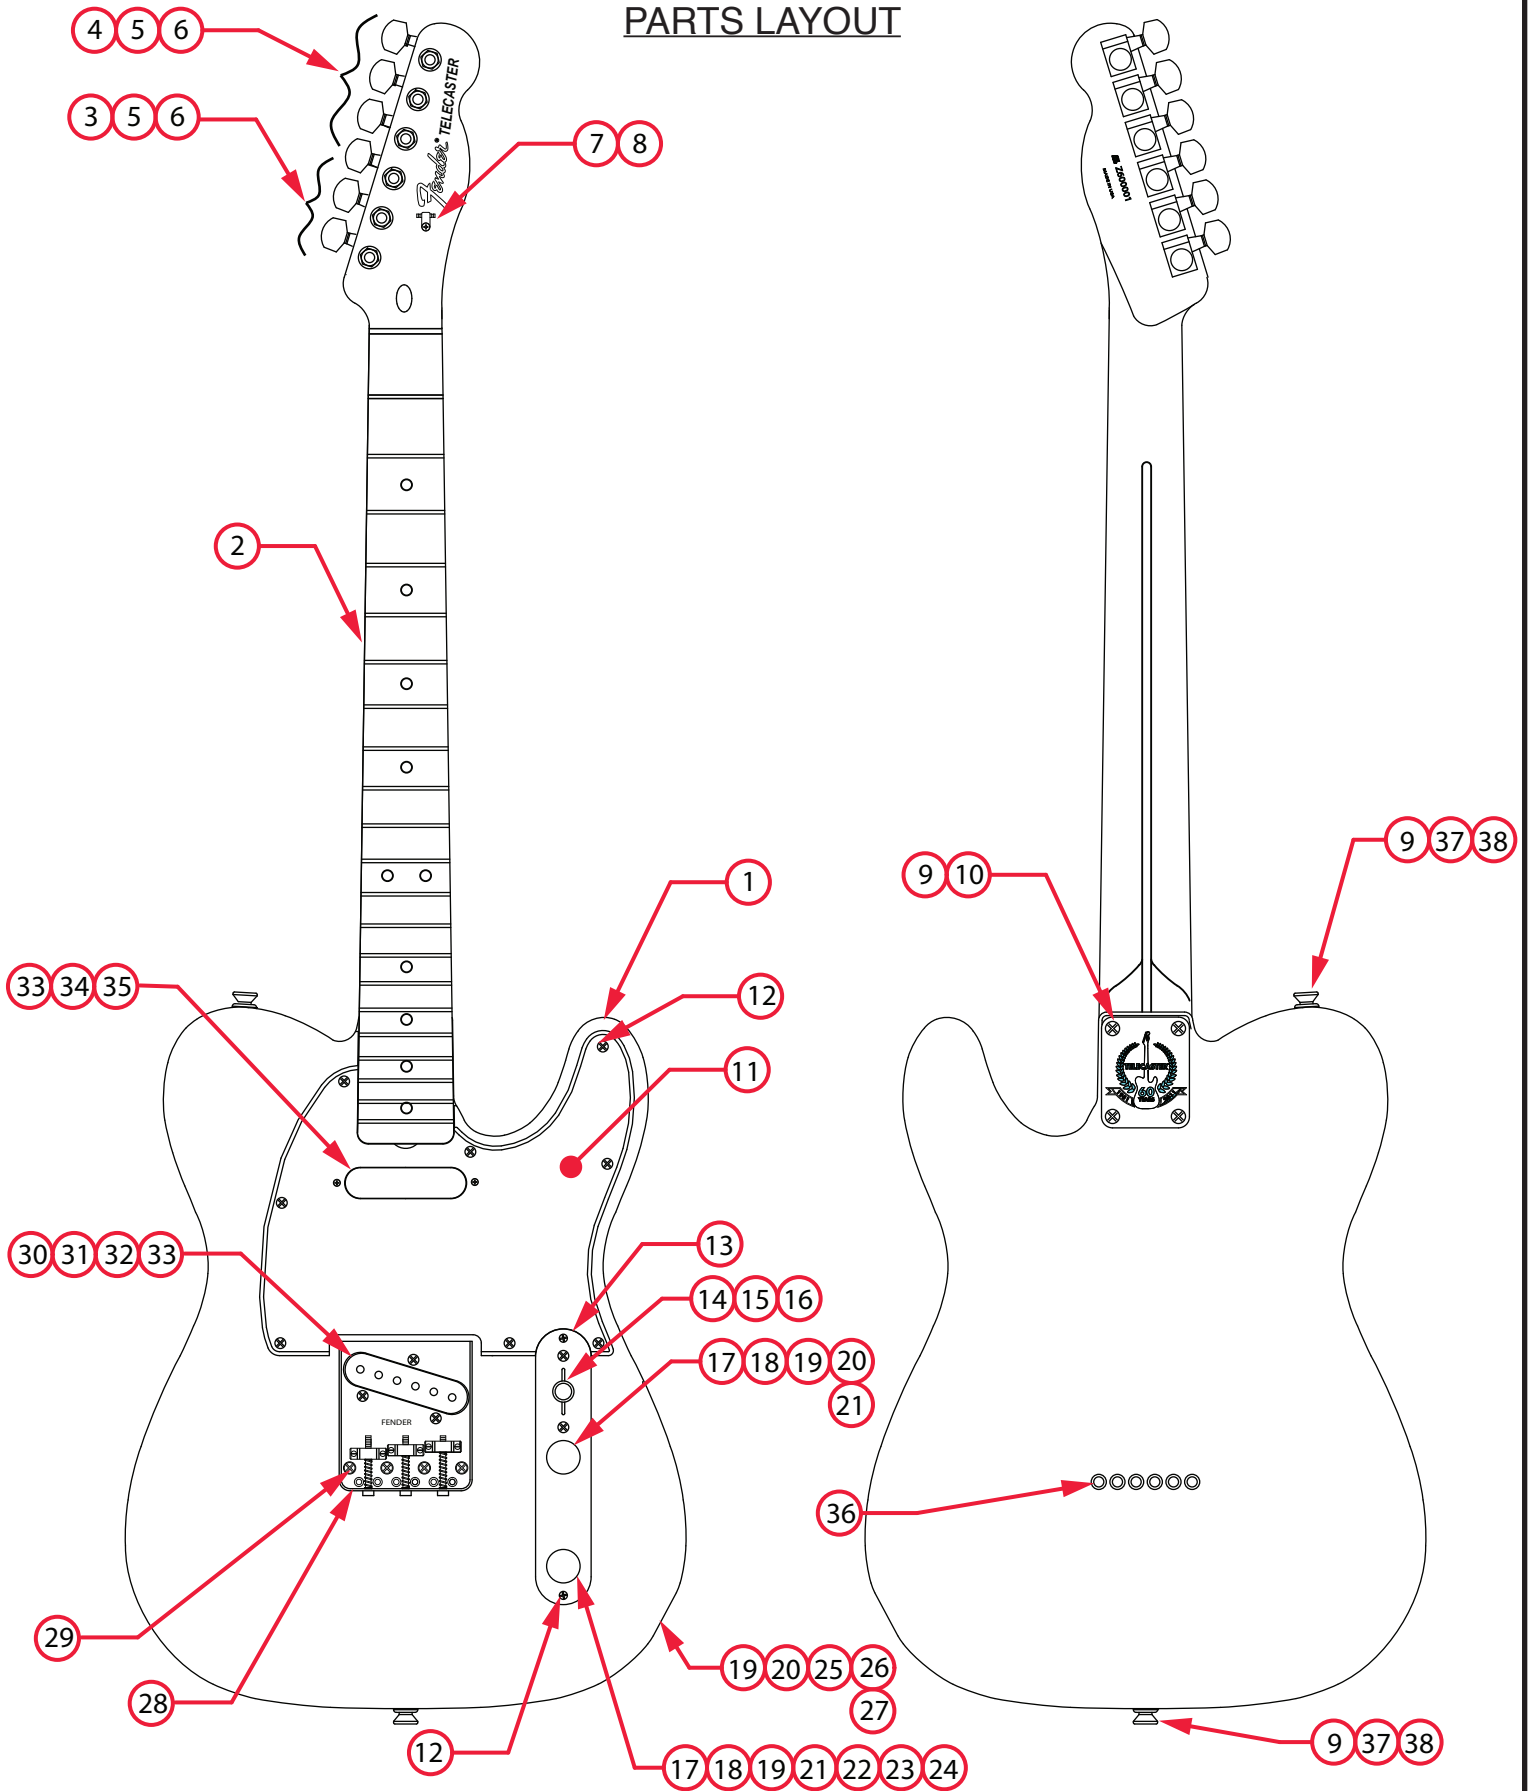

EMPRESS TELECASTER® (0170143XXX)

PARTS LIST

REF#	DESCRIPTION	PART NUMBER
1	BODY EMRESS TELE VINTAGE WHITE	0090770541
1	BODY EMPRESS TELE HONEY BURST	0090770542
2	NECK AM SERIES TELE MPL	0075403000
3	KEY GTR DUAL PIN MTG	0037429000
4	KEY GTR 2 PIN MTG SHORT	0058142000
5	WASHER KEY	0053106049
6	BUSHING KEY	0058820049
7	STRING GUIDE TREE AM STD	0994911000
8	SCREW SMAB 3 X 3/8 RHP ZA CHROME	0021405049
9	NECK PLATE 60TH ANNIV TELE CHROME NO HOLE	0090943000
10	SCREW SMA 8 X 1-3/4 OHP NI	0015636049
11	PICKGUARD TELE M/M/M	0064033000
11	PICKGUARD TELE PARCH	0063258000
12	SCREW SMA #4 X 3/4 OHP NI	0015591000
13	CONTROL PLATE TELE	0992058000
14	SWITCH 3-WAY LVR	0992041000
15	KNOB SWITCH VINTAGE TELE	0994936000
16	SCREW MA 6-32 X 5/8 RH ZARTAN	0994925000
17	CONTROL KNOB VINTAGE TELE	0992056000
18	SCREW ST 8-32 X 3/16	0994922000
19	NUT HEX 3/8-32 X 3/32 TK NI	0016352049
20	WASHER LOCK INTL 3/8 X .687	0016436049
21	CONTROL 250K 10%	0990831000
22	CAPACITOR CERAMIC DISC .1 μ F 50V	0068939000
23	CAPACITOR CERAMIC DISC .2 μ F 50V	0069010000
24	RESISTOR CF 4.7K Ω 1/4W	0069011001
25	JACK PHONE OPEN CIRCUIT 11	0021956049
26	WASHER FLAT 3/8 X .641 NI	0031153049
27	FERRULE JACK RECESS FOOTBALL CHROME	0050100000
28	BRIDGE ASSY HWY 1 TELE CHROME NO P/U	0060070000
29	SCREW WOOD 6 X 1 OHP NI	0016188049
30	PICKUP ASSY BRIDGE HWY1 TELE	0072998000
31	SCREW 6-32 X 3/4 RHP ZA	0048631049
32	WASHER FLAT #6 ZINC	0067275000
33	TUBING SIL RUBBER CUT RED .500	0063398000
34	PICKUP ASSY HWY 1 TELE NECK	0072997000

* = NOT PICTURED IN DIAGRAM




PARTS LIST

* = NOT PICTURED IN DIAGRAM


EMPRESS TELECASTER® (0170143XXX)

WIRING ASSEMBLY

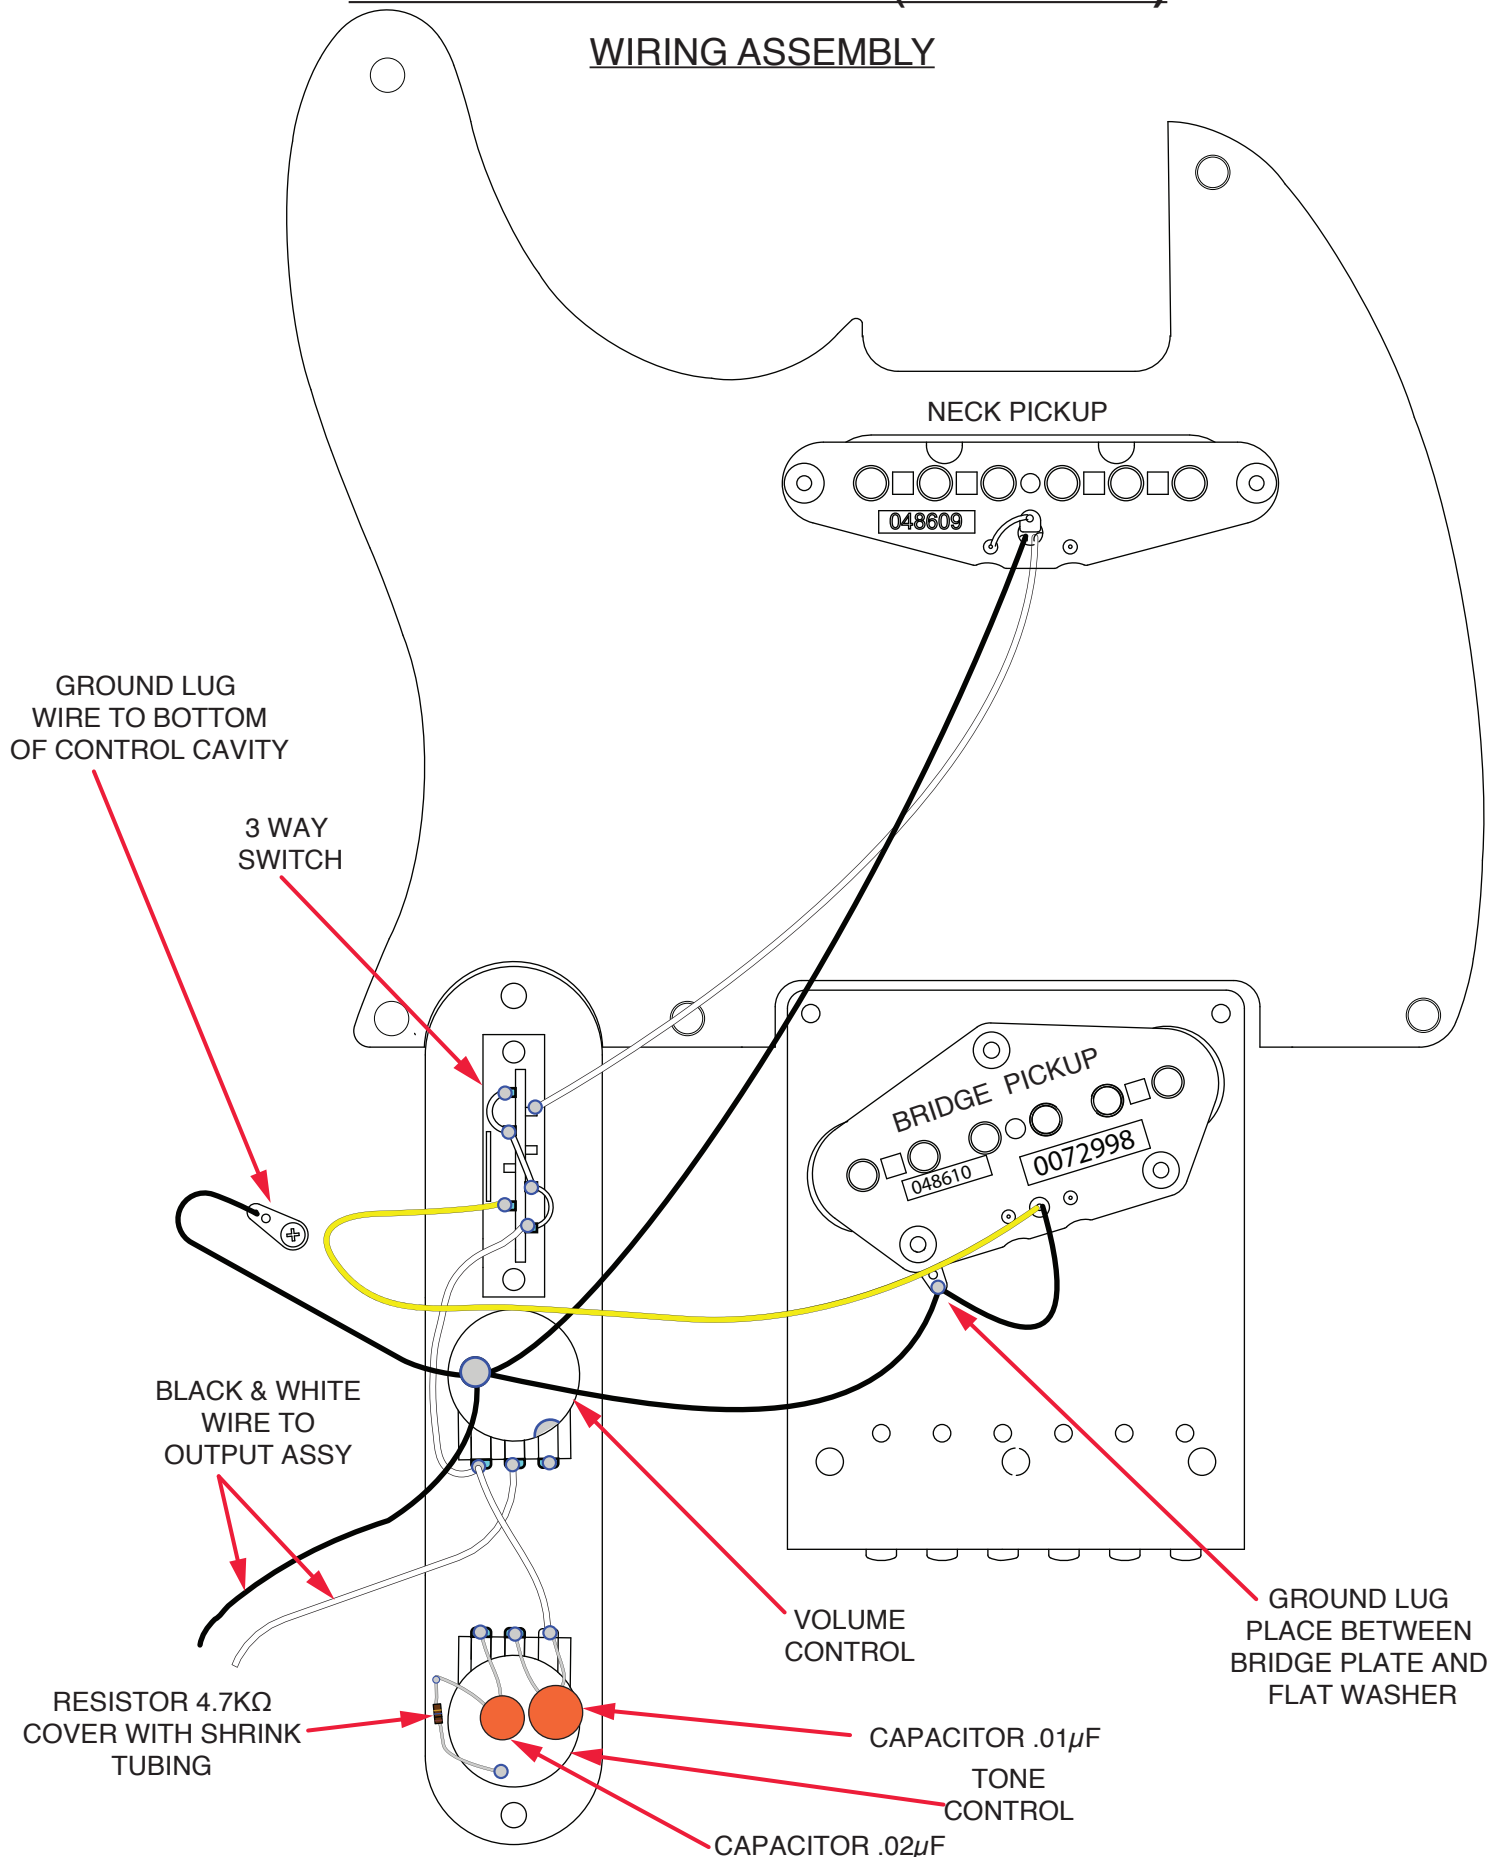

EMPRESS TELECASTER® (0170143XXX)

SWITCH AND CONTROL FUNCTION

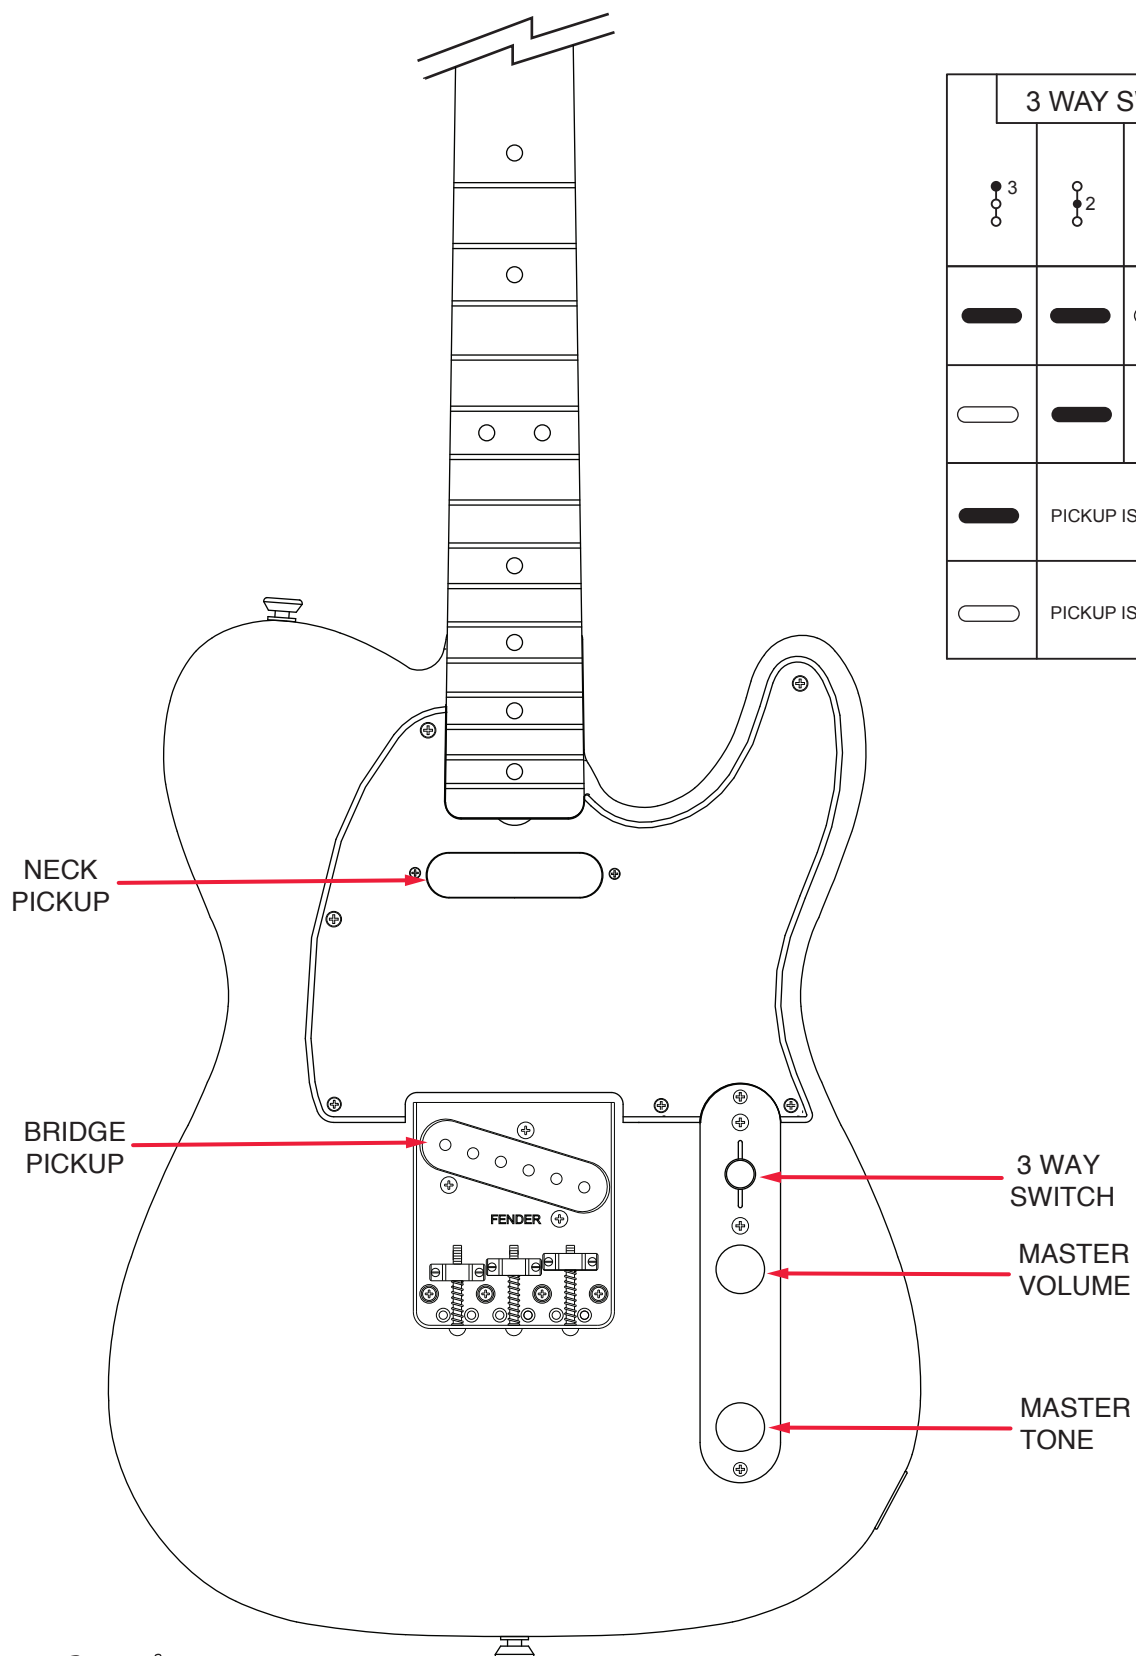

3 WAY SWITCH POSITION			
 3	 2	 1	← 3 WAY SWITCH POSITION
			← NECK PICKUP
			← BRIDGE PICKUP
	PICKUP IS ON		INDICATES POSITION OF 3 WAY SWITCH  1
	PICKUP IS OFF		