


AMERICAN STANDARD STRATOCASTER® OILED ASH LTD ED

(0171501721)
PARTS LAYOUT

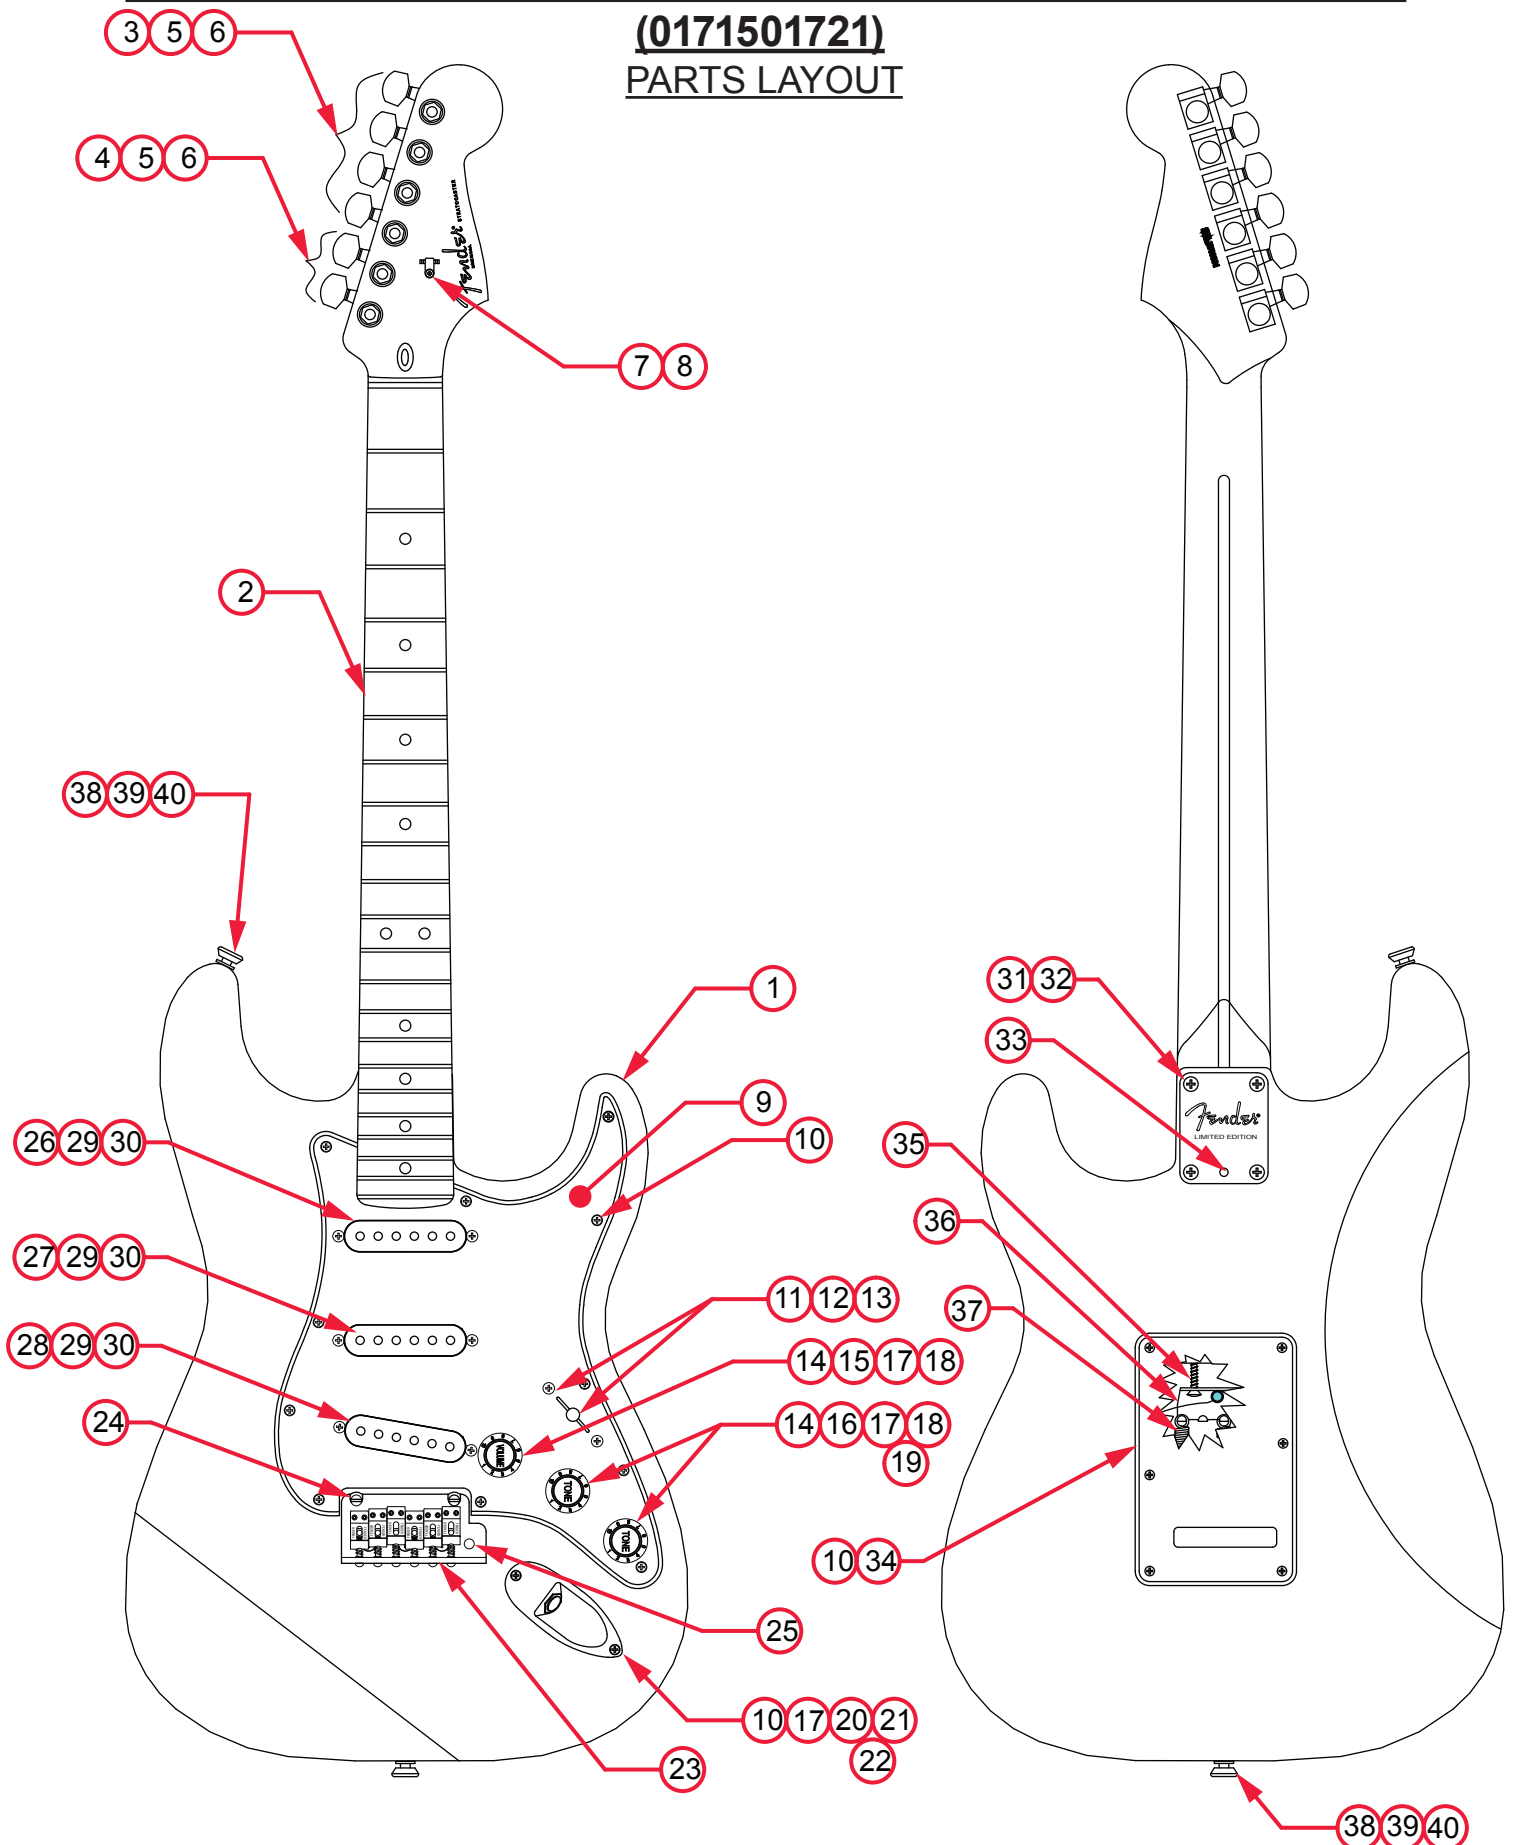

AMERICAN STANDARD STRATOCASTER® OILED ASH LTD ED

(0171501721)

PARTS LIST

REF#	DESCRIPTION	PART NUMBER
1	BODY AM STD STRAT OILED ASH	7707576521
2	NECK ASSY AM STD STRAT MAPLE	0075399000
3	KEY GTR 2 PIN MTG SHORT	0058142000
4	KEY GTR DUAL PIN MNT	0990820100
5	WASHER KEY	0053106049
6	BUSHING KEY	0058820049
7	STRING GUIDE TREE AM STD	0021537000
8	SCREW SMAB 3 X 3/8 RHP ZA CHROME	0021405049
9	PICKGUARD AM STD STRAT RH B/W/B	0991374000
10	SCREW SMAB 4 X 1/2 OHP ZA CHR	0994923000
11	SWITCH 5 WAY LEVER W/METAL	0991367000
12	SCREW 6-32 X 5/8 ZARTAN	0994925000
13	KNOB P/U SWITCH VINT AGED WHT	0994938000
14	KNOBS STRAT 1 VOL 2 TONE AGED WHT	0991369000
*15	CONTROL 250K SPLIT SHFT NO LOAD	0990832000
*16	CONTROL 250K 10% TPR SPLIT	0990830000
*17	NUT HEX 3/8-32 X 3/32 TK NI	0016352049
*18	WASHER LCK INTL 3/8 X .500 X .020 NI	0022384049
*19	CAPACITOR MPF RDL .022µF 250V 10%	0024832049
20	FERRULE JACK CHROME	0991940100
21	WASHER LOCK INTL 3/8 X .687	0016436049
22	JACK PHONE OPEN CIRCT 11	0021956049
23	BRIDGE ASSY AM SRS STRAT	0075091000
23A	BRIDGE PLATE AM SRS STRAT RH CHROME	0075089000
23B	TREMOLO BLOCK AS STRAT RH	0074349000
23C	BRIDGE SECTION ASSY NI AS STRAT TALL	0075123102
23D	BRIDGE SECTION ASSY NI AS STRAT SHORT	0075123101
23E	SCREW M4-40 X 5/8 RHP NI	0015693049
23F	SCREW M8-32 X 3/8 FHP NI	0019656049
23G	SPRING BRIDGE #1932	0019281049
23H	SPRING BRIDGE #1933	0019273049
24	PIVOT POST ASSY	0093273000

*= NOT PICTURED IN DIAGRAM



AMERICAN STANDARD STRATOCASTER® OILED ASH LTD ED
(0171501721)
 PARTS LIST


[illegible]

*= NOT PICTURED IN DIAGRAM

AMERICAN STANDARD STRATOCASTER® OILED ASH LTD ED

(0171501721)

WIRING ASSEMBLY

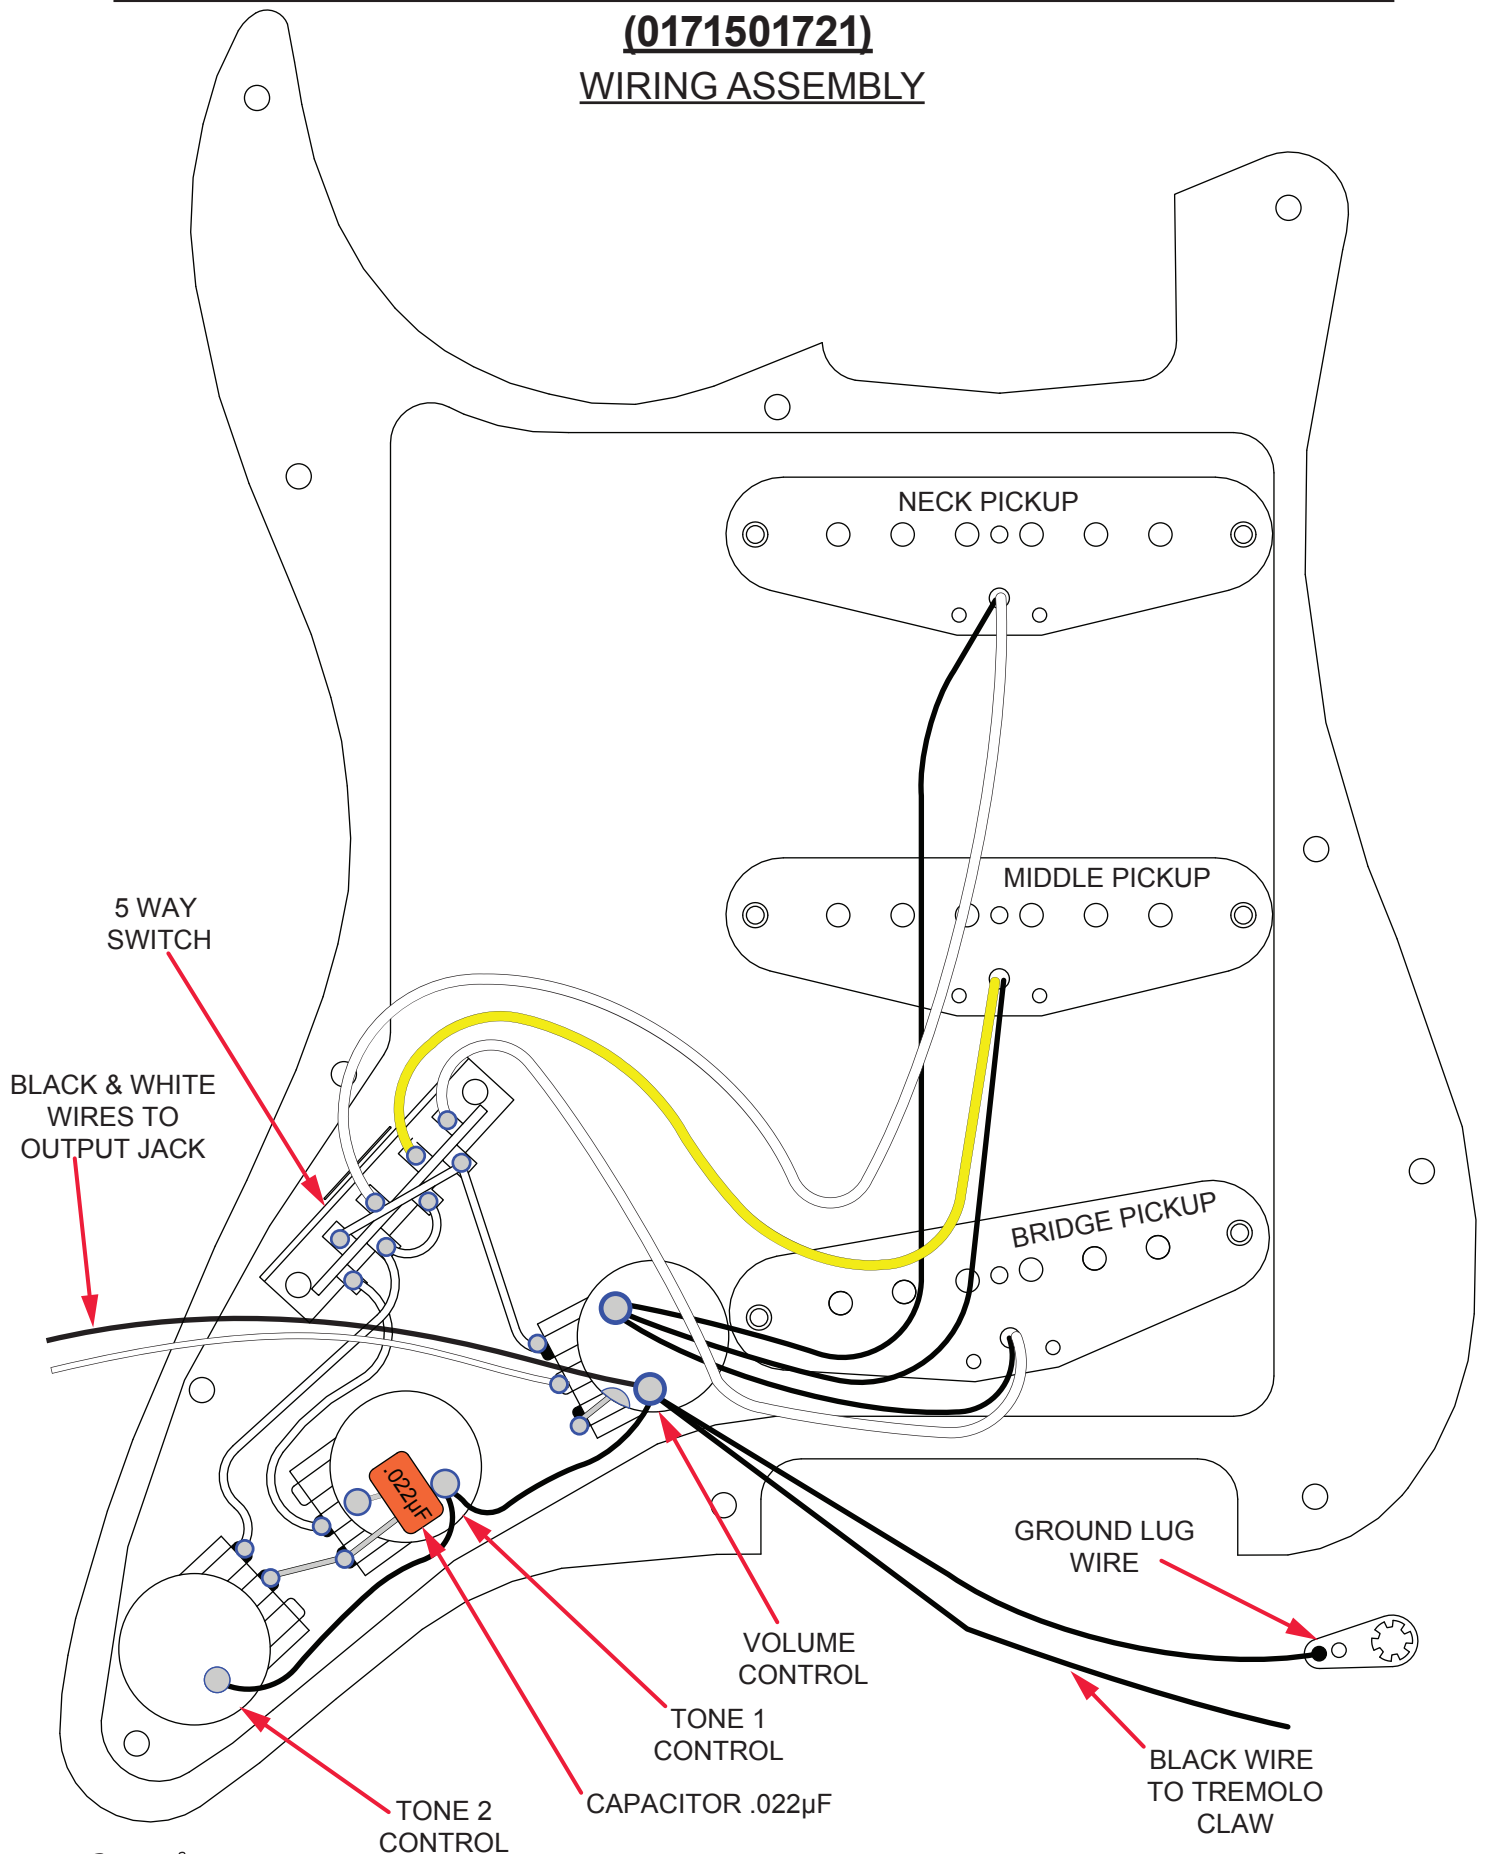


AMERICAN STANDARD STRATOCASTER® OILED ASH LTD ED

(0171501721)

SWITCH AND CONTROL FUNCTION

5 WAY SWITCH POSITION					
					SWITCH POSITION
T1	T1 & T2	T2	T2	T2	← CONTROL
					← NECK PICKUP
					← MIDDLE PICKUP
					← BRIDGE PICKUP
PICKUP IS ON					
PICKUP IS OFF					

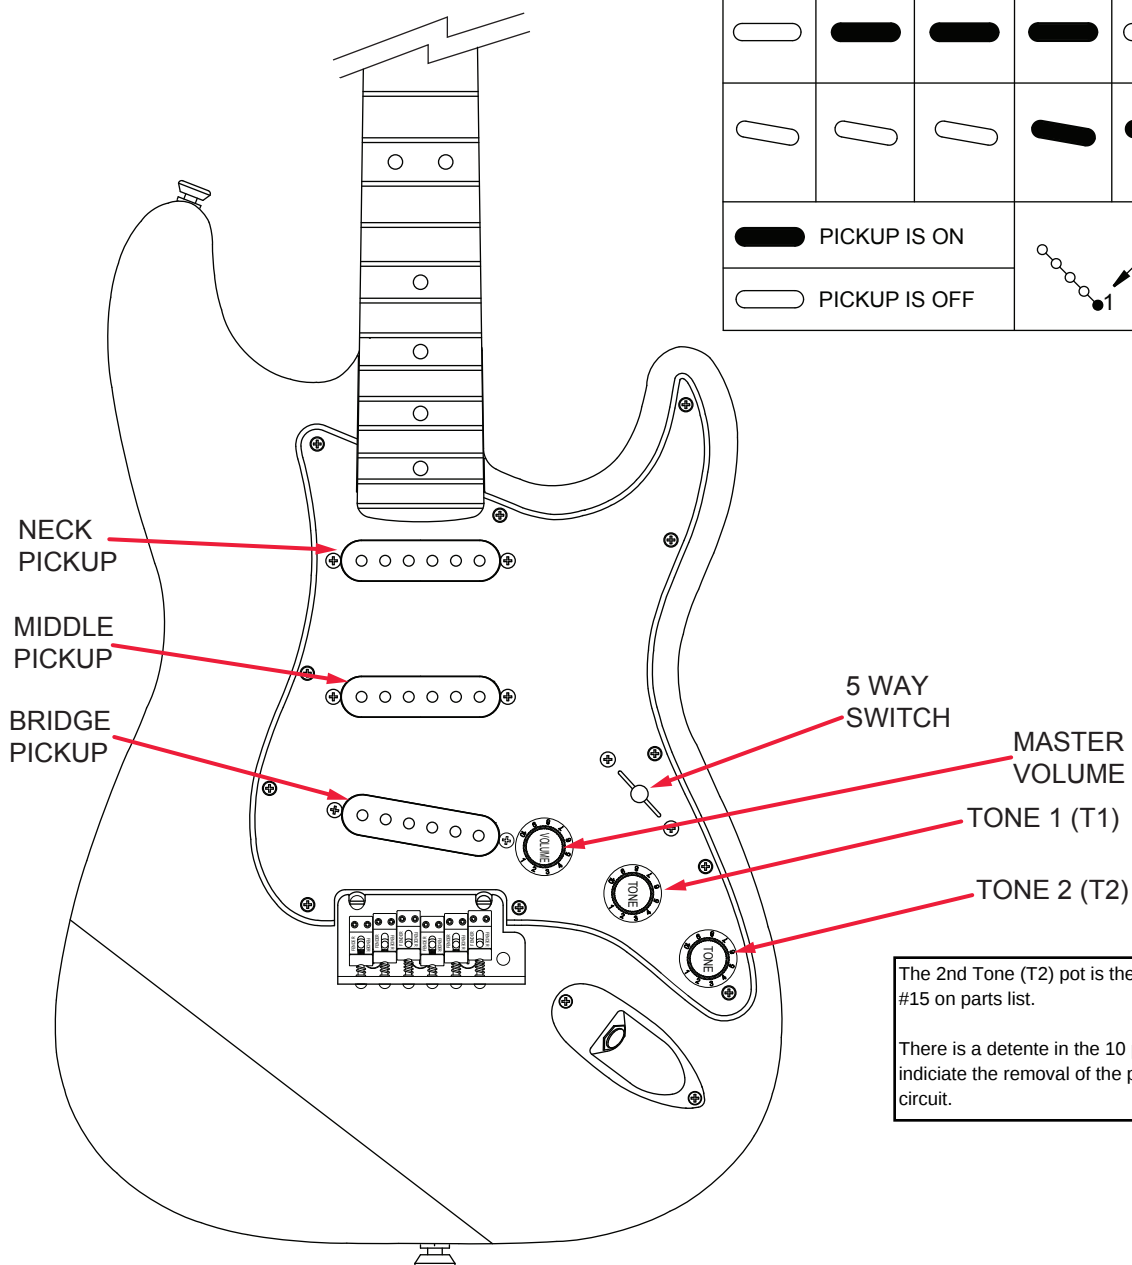

The 2nd Tone (T2) pot is the "No-Load" Pot. #15 on parts list.

There is a detente in the 10 position to indicate the removal of the pot from the circuit.