


FENDER SELECT TELECASTER® CHAMBERED HH (0170315821)

PARTS LAYOUT

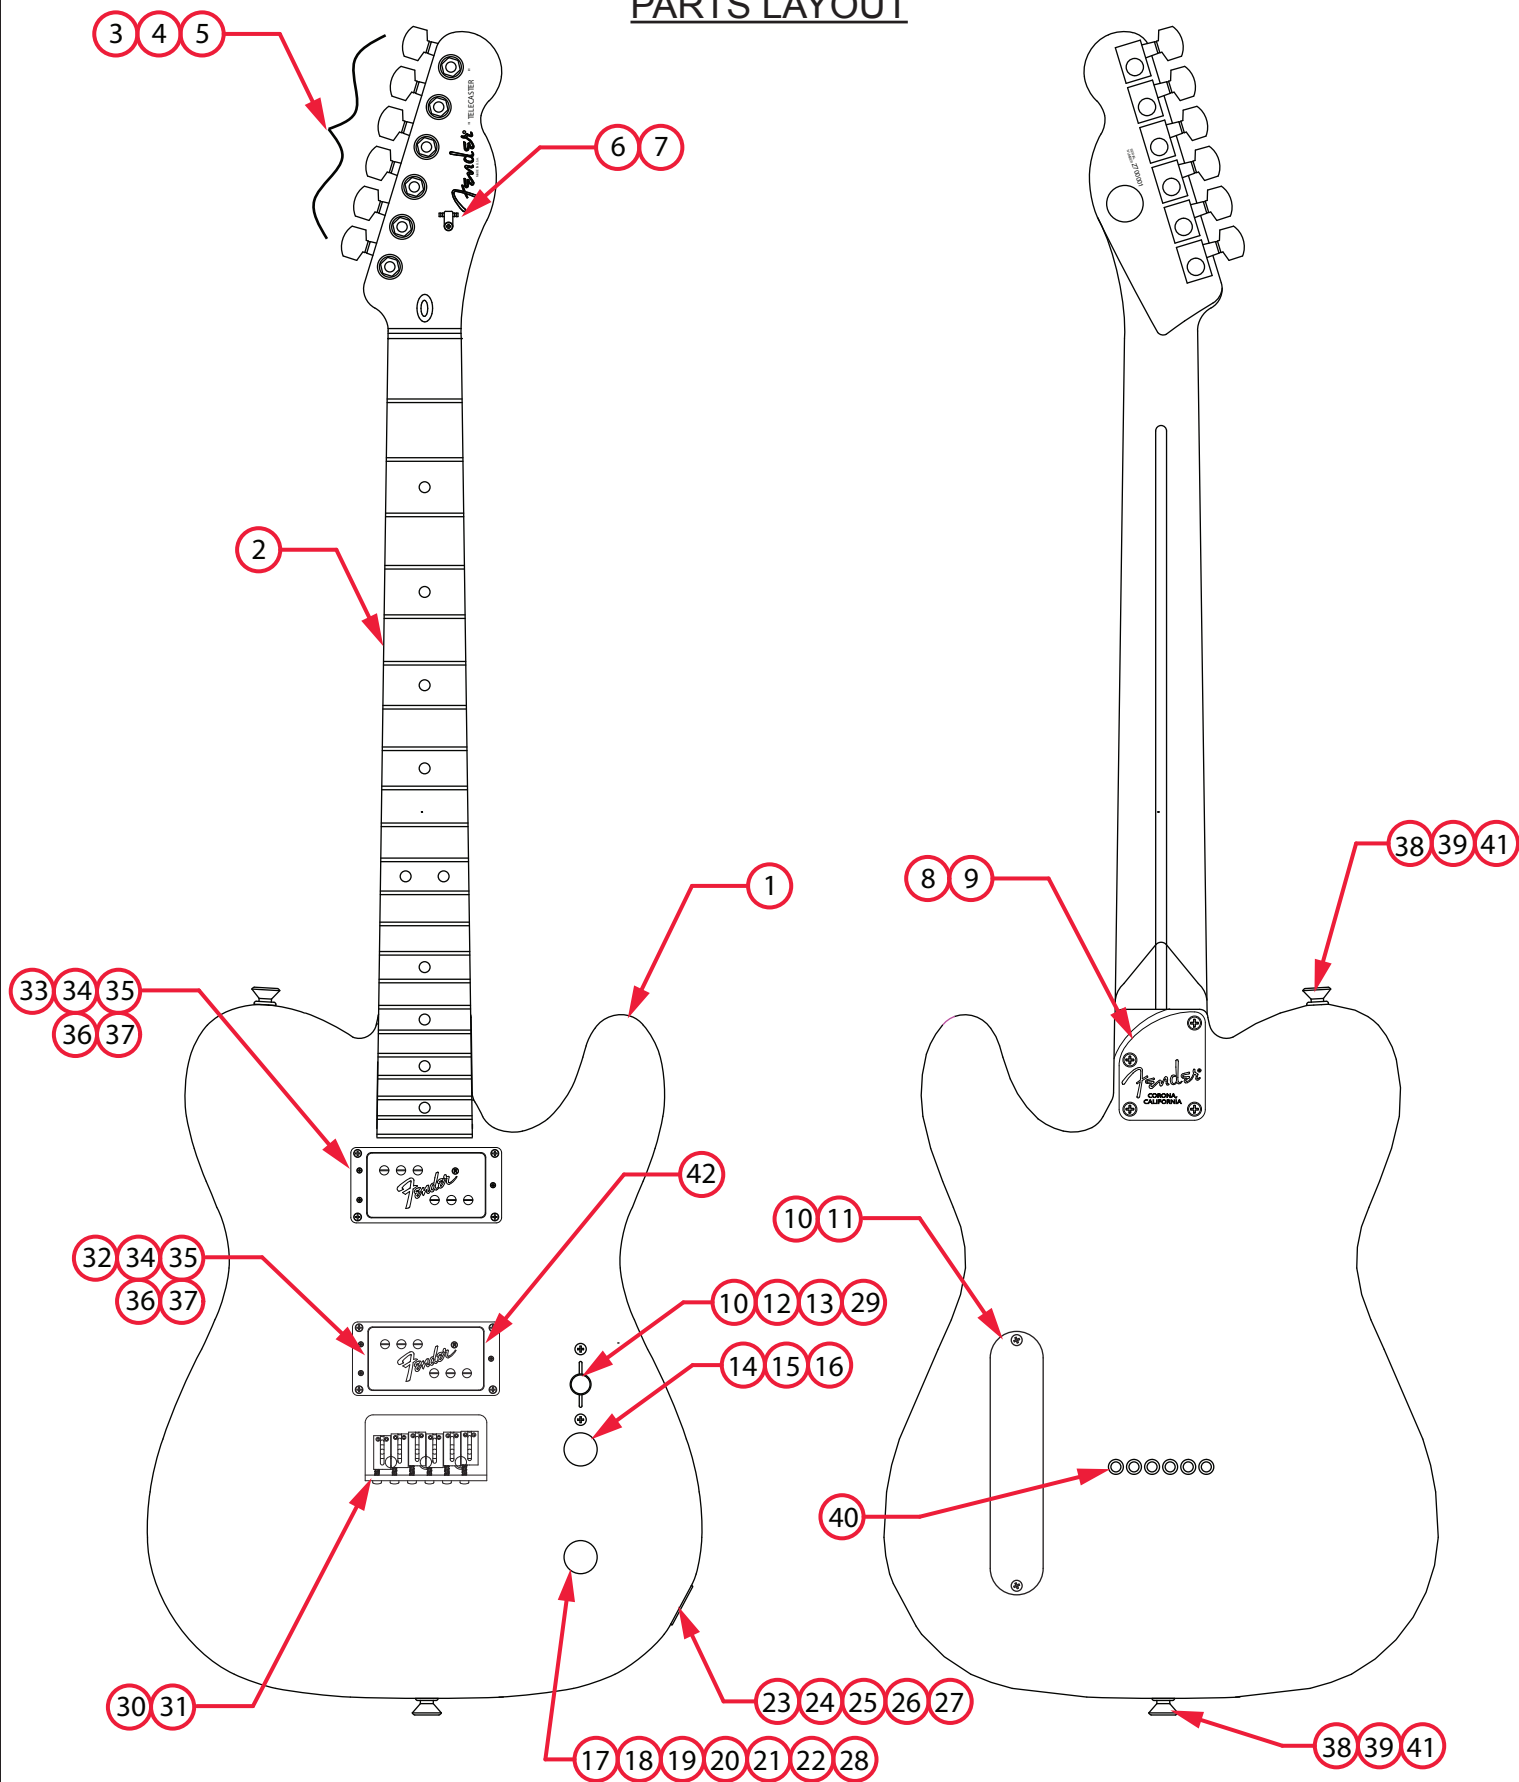

FENDER SELECT TELECASTER® CHAMBERED HH (0170315821)

PARTS LIST

REF#	DESCRIPTION	PART NUMBER
1	BODY FENDER SELECT TELE CHAMBERED NAT	0096386521
2	NECK FENDER SELECT TELE BE MPL	0096440000
3	FENDER LOCKING TUNERS CHROME	0990818100
4	WASHER KEY	0053106049
5	BUSHING KEYS	0058820049
6	STRING GUIDE TREE AM STD	0994911000
7	SCREW SMAB 3 X 3/8 RHP ZA CHROME	0021405049
8	NECK PLATE AM DLX NON TILT CHROME	0092954000
9	SCREW SMA 8 X 1-3/4 OHPH ZARTAN	0021424049
10	SCREW SMAB 4 X 1/2 OHP ZA CHROME	0994923000
11	COVER PLATE CABRONITA TELE BLK	0091113020
12	3-WAY LEVER SWITCH	0992041000
13	SWITCH KNOB VINT TELE BAKELITE	0093602000
14	KNOB HEAVY KNURLED CHROME	0096227000
15	CONTROL 500K 20% SOLID W/HDWR	0990835000
16	CAPACITOR .022µF 250V 10%	0024832000
17	KNOB TELE S1 SW HEAVY KNURL CHROME	0096224000
18	SW CAP TELE CHROME	0059270000
19	COUPLING SLEEVE SOSH NYL	0059278000
20	SW/POT ASSY S-1 500K SOSH 3/8"	0096866010
21	CAPACITOR MPF RDL .1µF 250V 10%	0021022049
22	RESISTOR 1/4W 1.5K 5%	0024969001
23	JACK PHONE OPEN CIRCUIT 11	0021956049
24	WASHER LOCKING INTL 3/8 X .687 X .065 NI	0016436049
25	NUT HEX 3/8 X-32 X 3/32 TK NI	0016352049
26	RETAINER JACK NI PLT	0010355060
27	FERRULE JACK STD TELE CHROME	0021452000
28	WASHER LOCK 3/8 ID W/GND LUG	0050161000
29	GND LUG TINNED	0012869000
30	BRIDGE ASSY AM STD NON TREMOLO	0032909000
30A	BRIDGE PLATE NON TREMOLO	0032911000
30B	BRIDGE SECTION AS STRAT/TELE	0990840000
30C	SPRING BRIDGE 4 COIL 3/8 BLACK	0019394049
30D	SPRING BRIDGE 3 COIL 1/4 BLACK	0019395049
30E	SCREW HEIGHT ADJ 1/4	0026779049
30F	SCREW HEIGHT ADJ 5/16	0026780049

*= NOT PICTURED IN DIAGRAM



FENDER SELECT TELECASTER® CHAMBERED HH (0170315821)


PARTS LIST

[illegible]

*= NOT PICTURED IN DIAGRAM


FENDER SELECT TELECASTER® CHAMBERED HH (0170315821)


WIRING ASSEMBLY

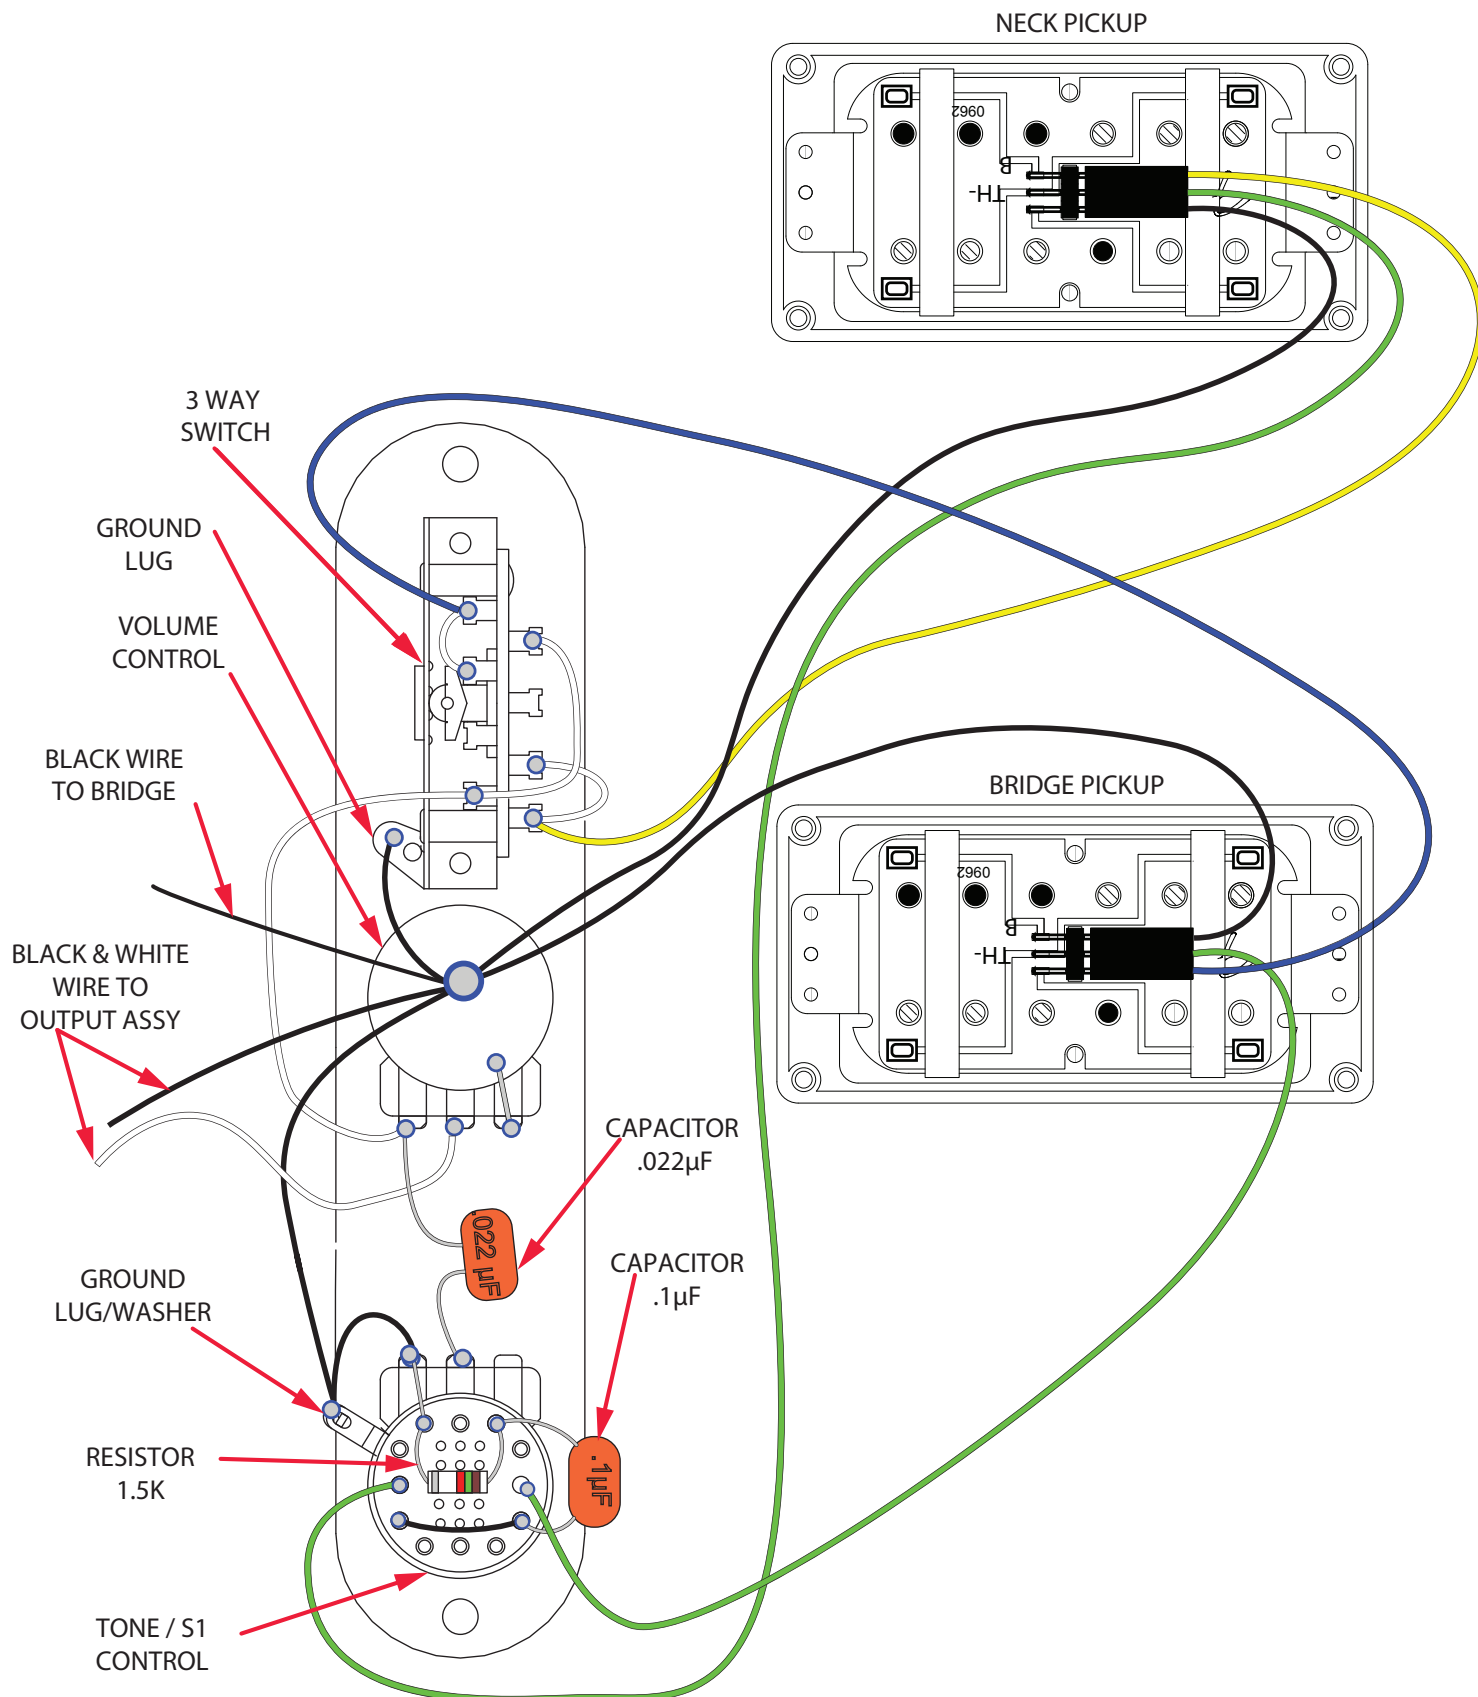

FENDER SELECT TELECASTER® CHAMBERED HH (0170315821)

SWITCH AND CONTROL FUNCTION

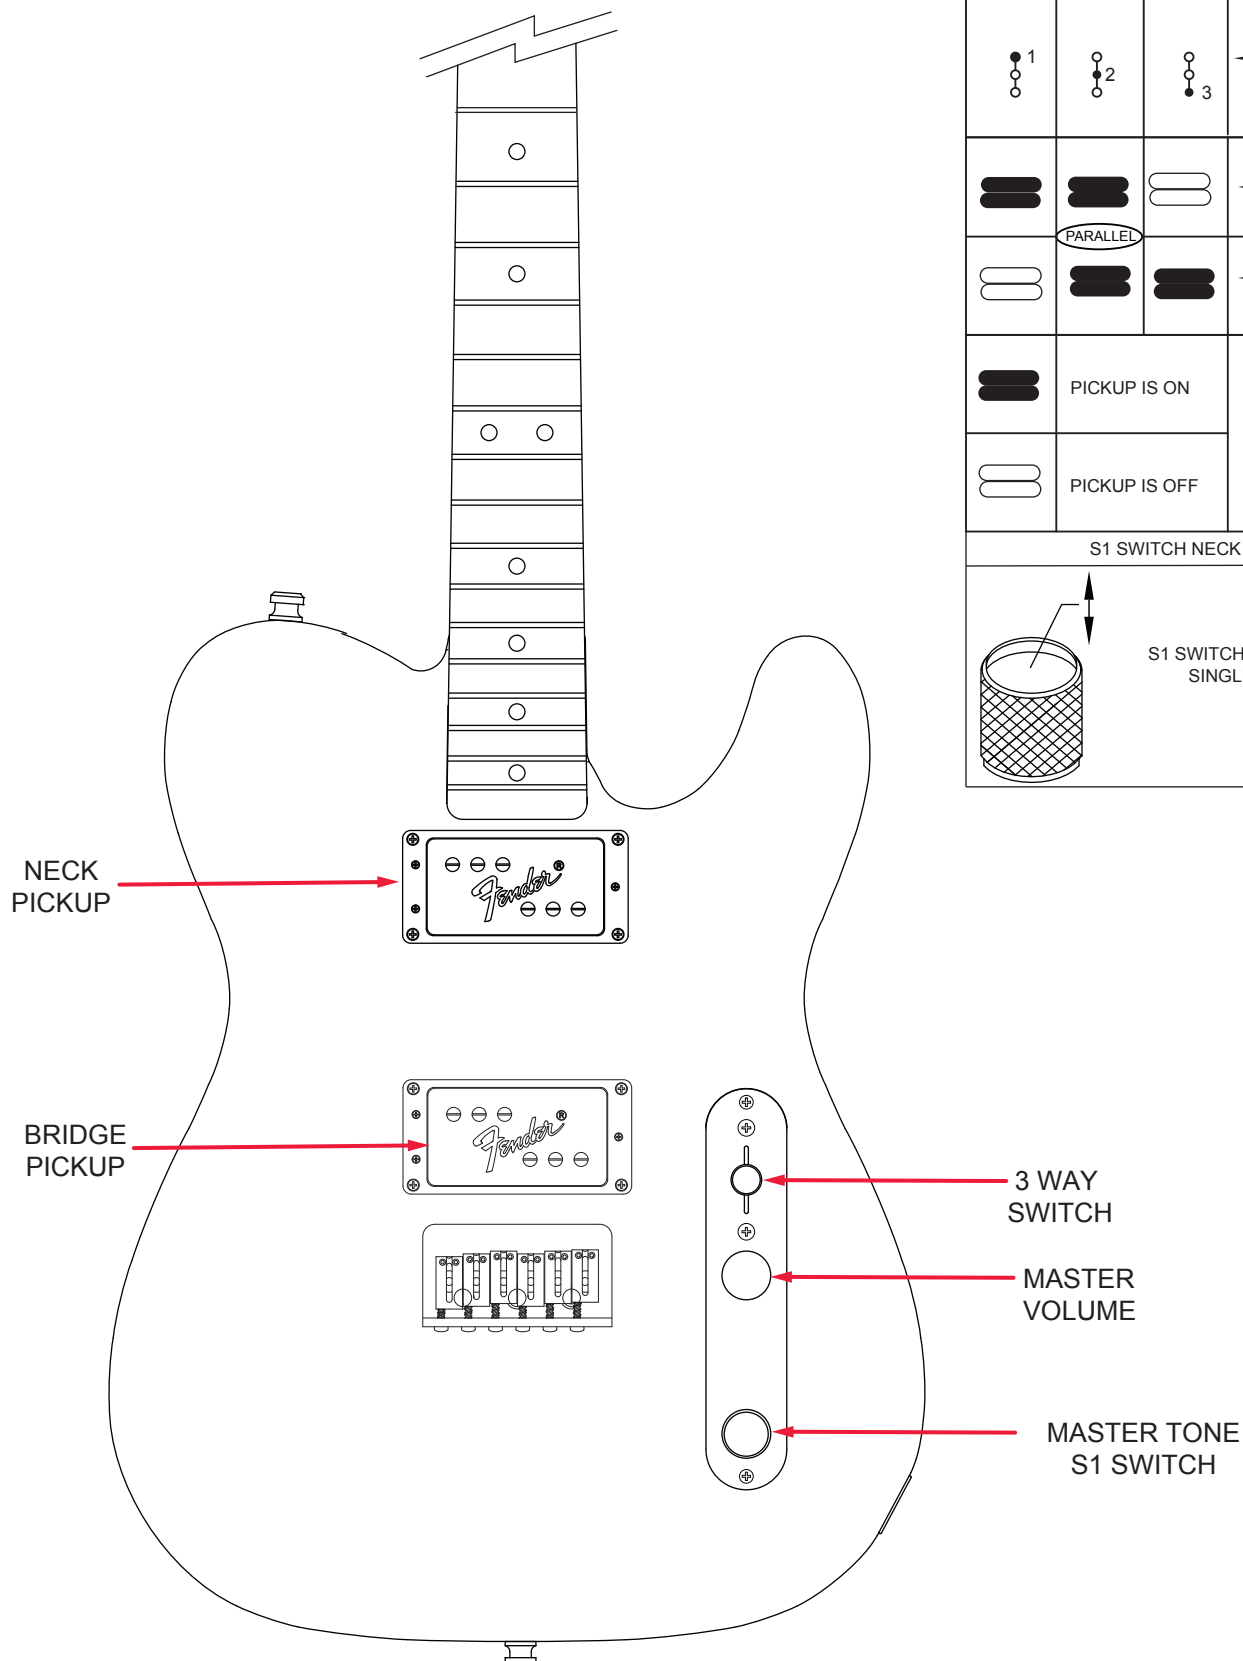

3 WAY SWITCH POSITION			
 1	 2	 3	← 3 WAY SWITCH POSITION
			← NECK PICKUP
			← BRIDGE PICKUP
	PICKUP IS ON		INDICATES POSITION OF 3 WAY SWITCH  1
	PICKUP IS OFF		
S1 SWITCH NECK & BRIDGE PICKUP			
 S1 SWITCH DOWN SIMULATES SINGLE COIL PICKUP			