


FENDER SELECT TELECASTER® GOLD HDWR (0170313733)

PARTS LAYOUT

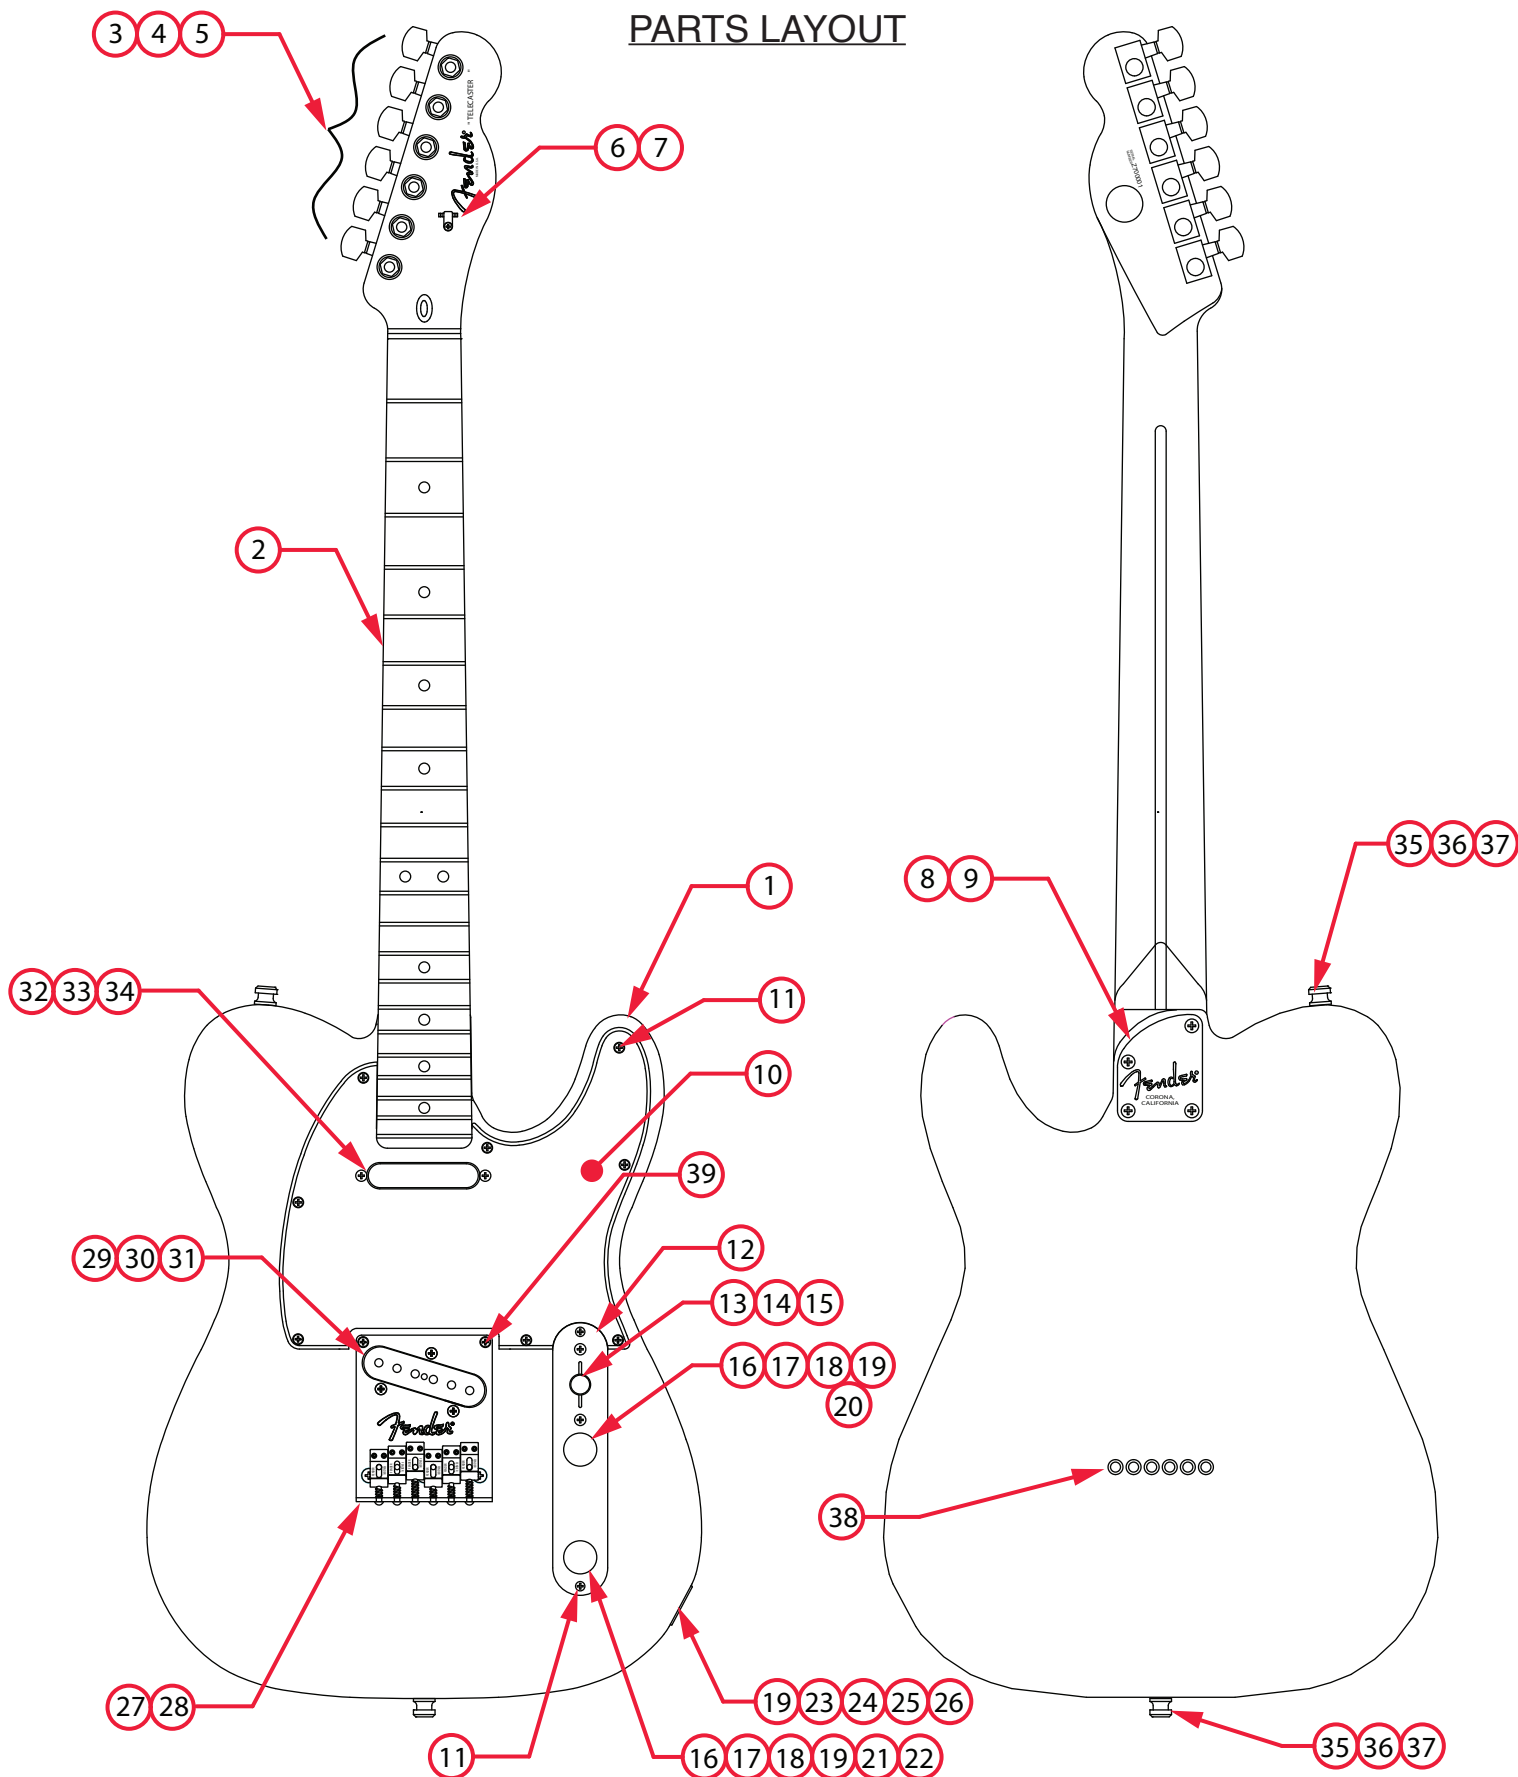

FENDER SELECT TELECASTER® GOLD HDWR (0170313733)

PARTS LIST


REF#	DESCRIPTION	PART NUMBER
1	BODY FENDER SELECT TELE CHAMBERED VIOLIN BURST	0091794533
2	NECK FENDER SELECT TELE BIRDSEYE MPL	0091808000
3	FENDER LOCKING TUNERS GOLD	0021942000
4	WASHER KEY GOLD	0058816049
5	BUSHING KEYS GOLD	0058821049
6	STRING GUIDE TREE AS GOLD	0039475049
7	SCREW SMAB 3 X 3/8 RHP GOLD	0018823049
8	NECK PLATE DLX SERIES NO TILT RH GOLD	0071998000
9	SCREW SMA 8 X 1-3/4 OHP GOLD	0018785049
10	PICKGUARD TELE AM SERIES RH P/B/P	0991375000
11	SCREW SMAB 4 X 1/2 OHP GOLD	0994924000
12	CONTROL PLATE TELE GOLD	0992058200
13	3-WAY LEVER SWITCH	0992041000
14	SCREW MA 6-32 X 5/8 GOLD	0994926000
15	SWITCH KNOB VINT TELE	0994936000
16	KNOB CONTROL BURTON GOLD	0036811000
17	SCREW ST 8-32 X 3/16 GOLD	0028897000
18	NUT HEX 3/8-32 X 3/32 TK NI	0016352049
19	WASHER LOCK INTL 3/8 X .670	0016436049
20	CONTROL 250K 10%	0990831000
21	CONTROL 250K SOLID SHFT NO LOAD	0990833000
22	CAPACITOR MPF RDL .022µF 250V 10%	0024832049
23	JACK PHONE OPEN CIRCUIT 11	0021956049
24	RETAINER JACK NI PLT TELE	0010355069
25	FERRULE JACK STD TELE GOLD	0991941200
26	NUT HEX 3/8-32 X 3/32 GOLD	0018824049
27	BRIDGE ASSY FENDER SELECT TELE GOLD	0092742000
27A	BRIDGE PLATE AM SRS TELE RH GOLD	0090825000
27B	BRIDGE SECTION ASSY NI AS TELE SHORT GOLD	0075123143
27C	BRIDGE SECTION ASSY NI AS TELE TALL GOLD	0075123144
27D	SPRING INTONATION .115 X 5/8 BLK	0029095049
27E	SPRING INTONATION .115 X 1/2 BLK	0029094049
27F	SCREW M 4-40 X 3/4 PHP BLX	0031913049
28	SCREW SMA 8 X 1 OHP ZA GOLD	0021373040
29	PICKUP ASSY SELECT SERIES TELE BRIDGE	0092668000
30	SCREW 6-32 X 3/4 RHP TAP GOLD	0049728000

* = NOT PICTURED IN DIAGRAM




FENDER SELECT TELECASTER® GOLD HDWR (0170313733)

WIRING ASSEMBLY NON PCB

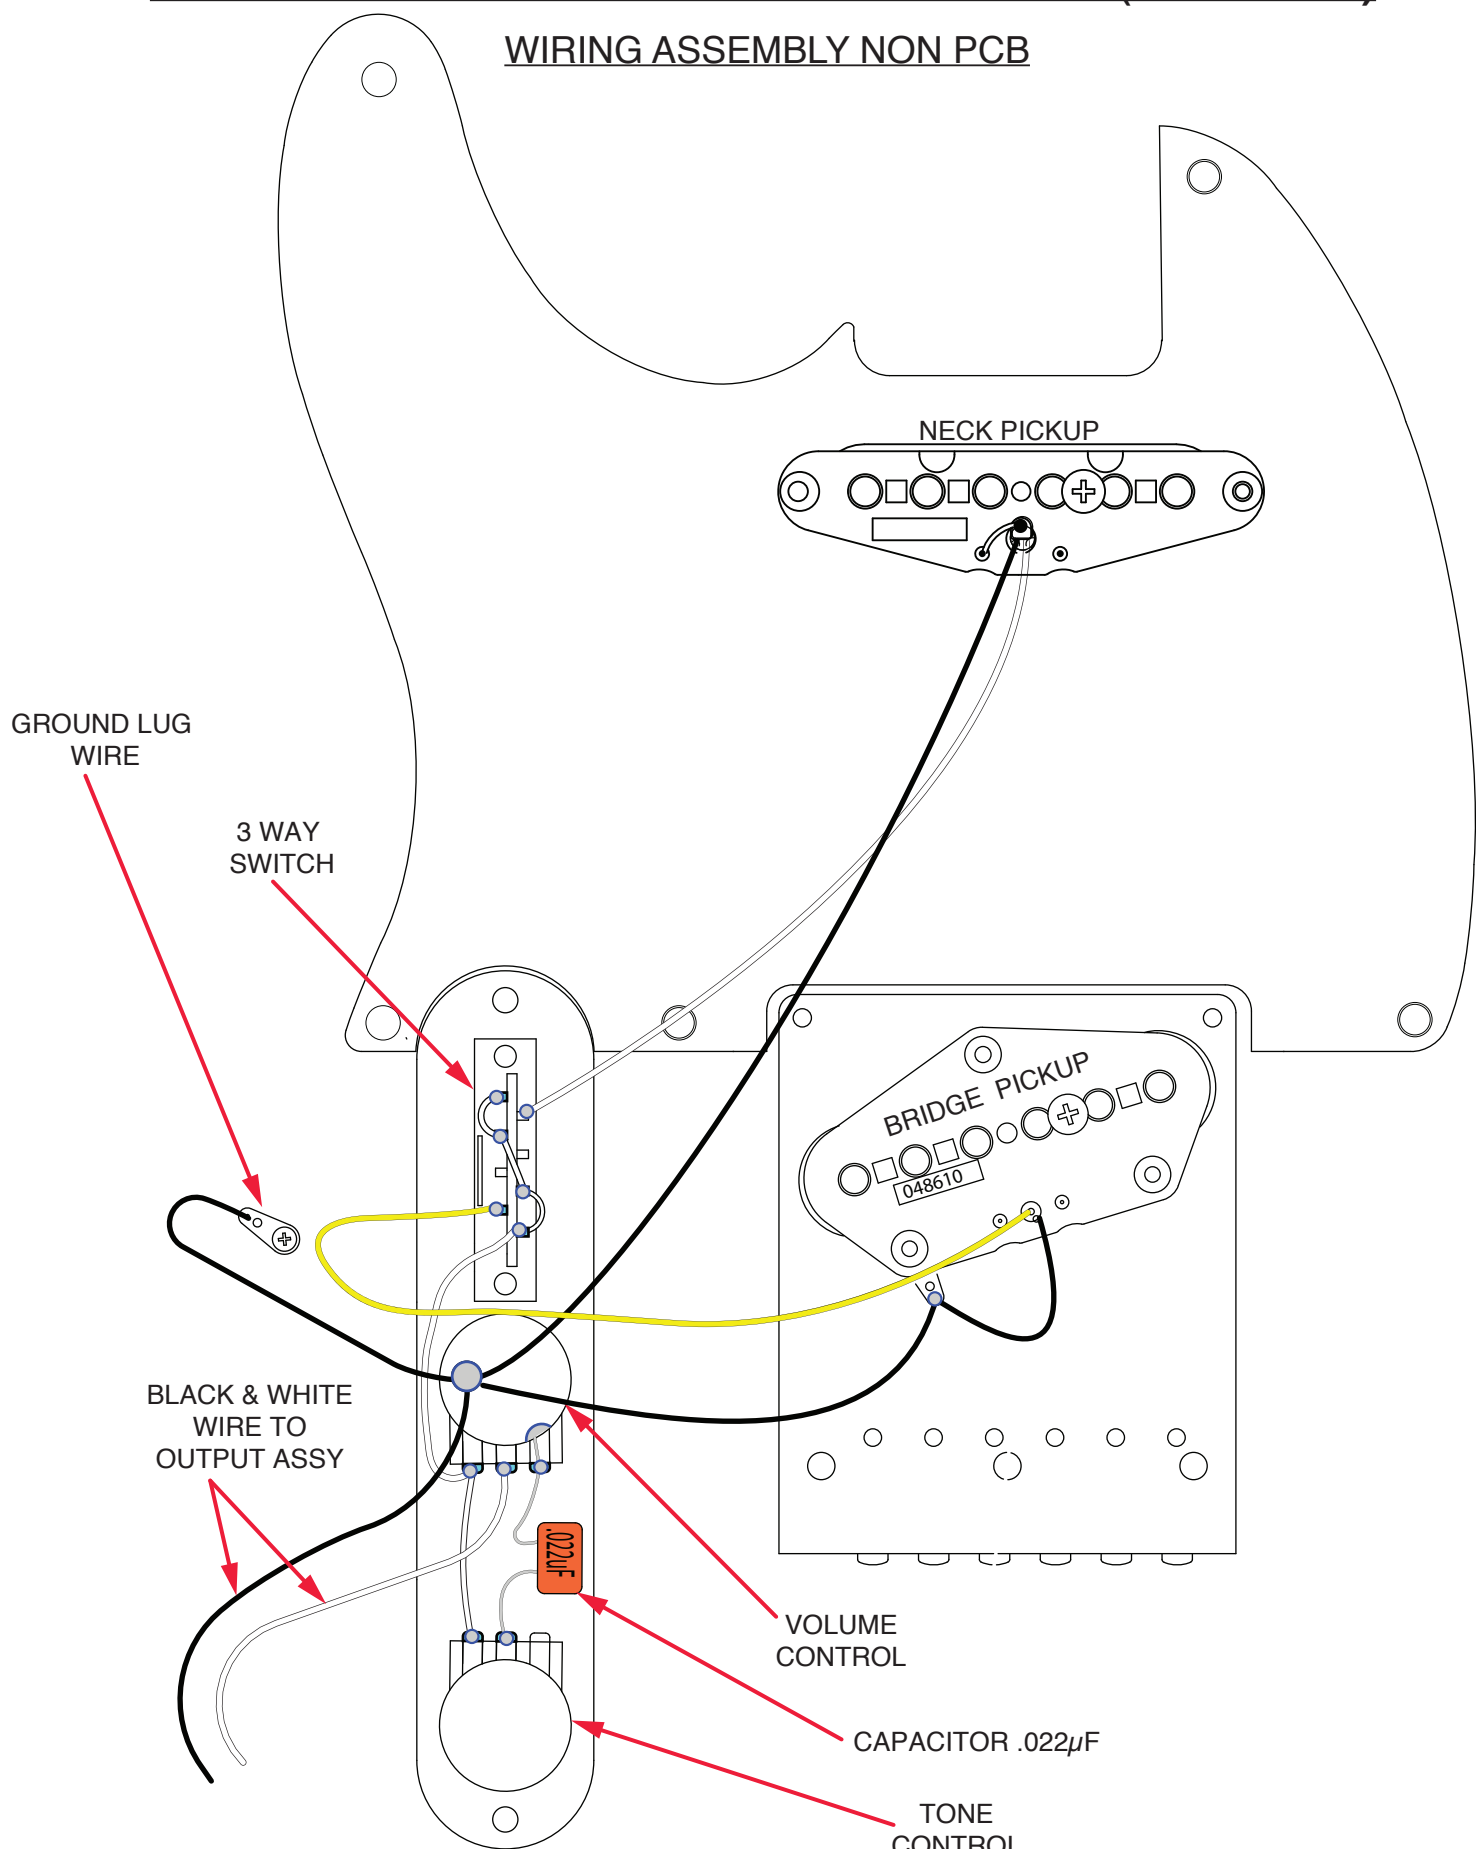

FENDER SELECT TELECASTER® GOLD HDWR (0170313733)

WIRING ASSEMBLY W/PCB

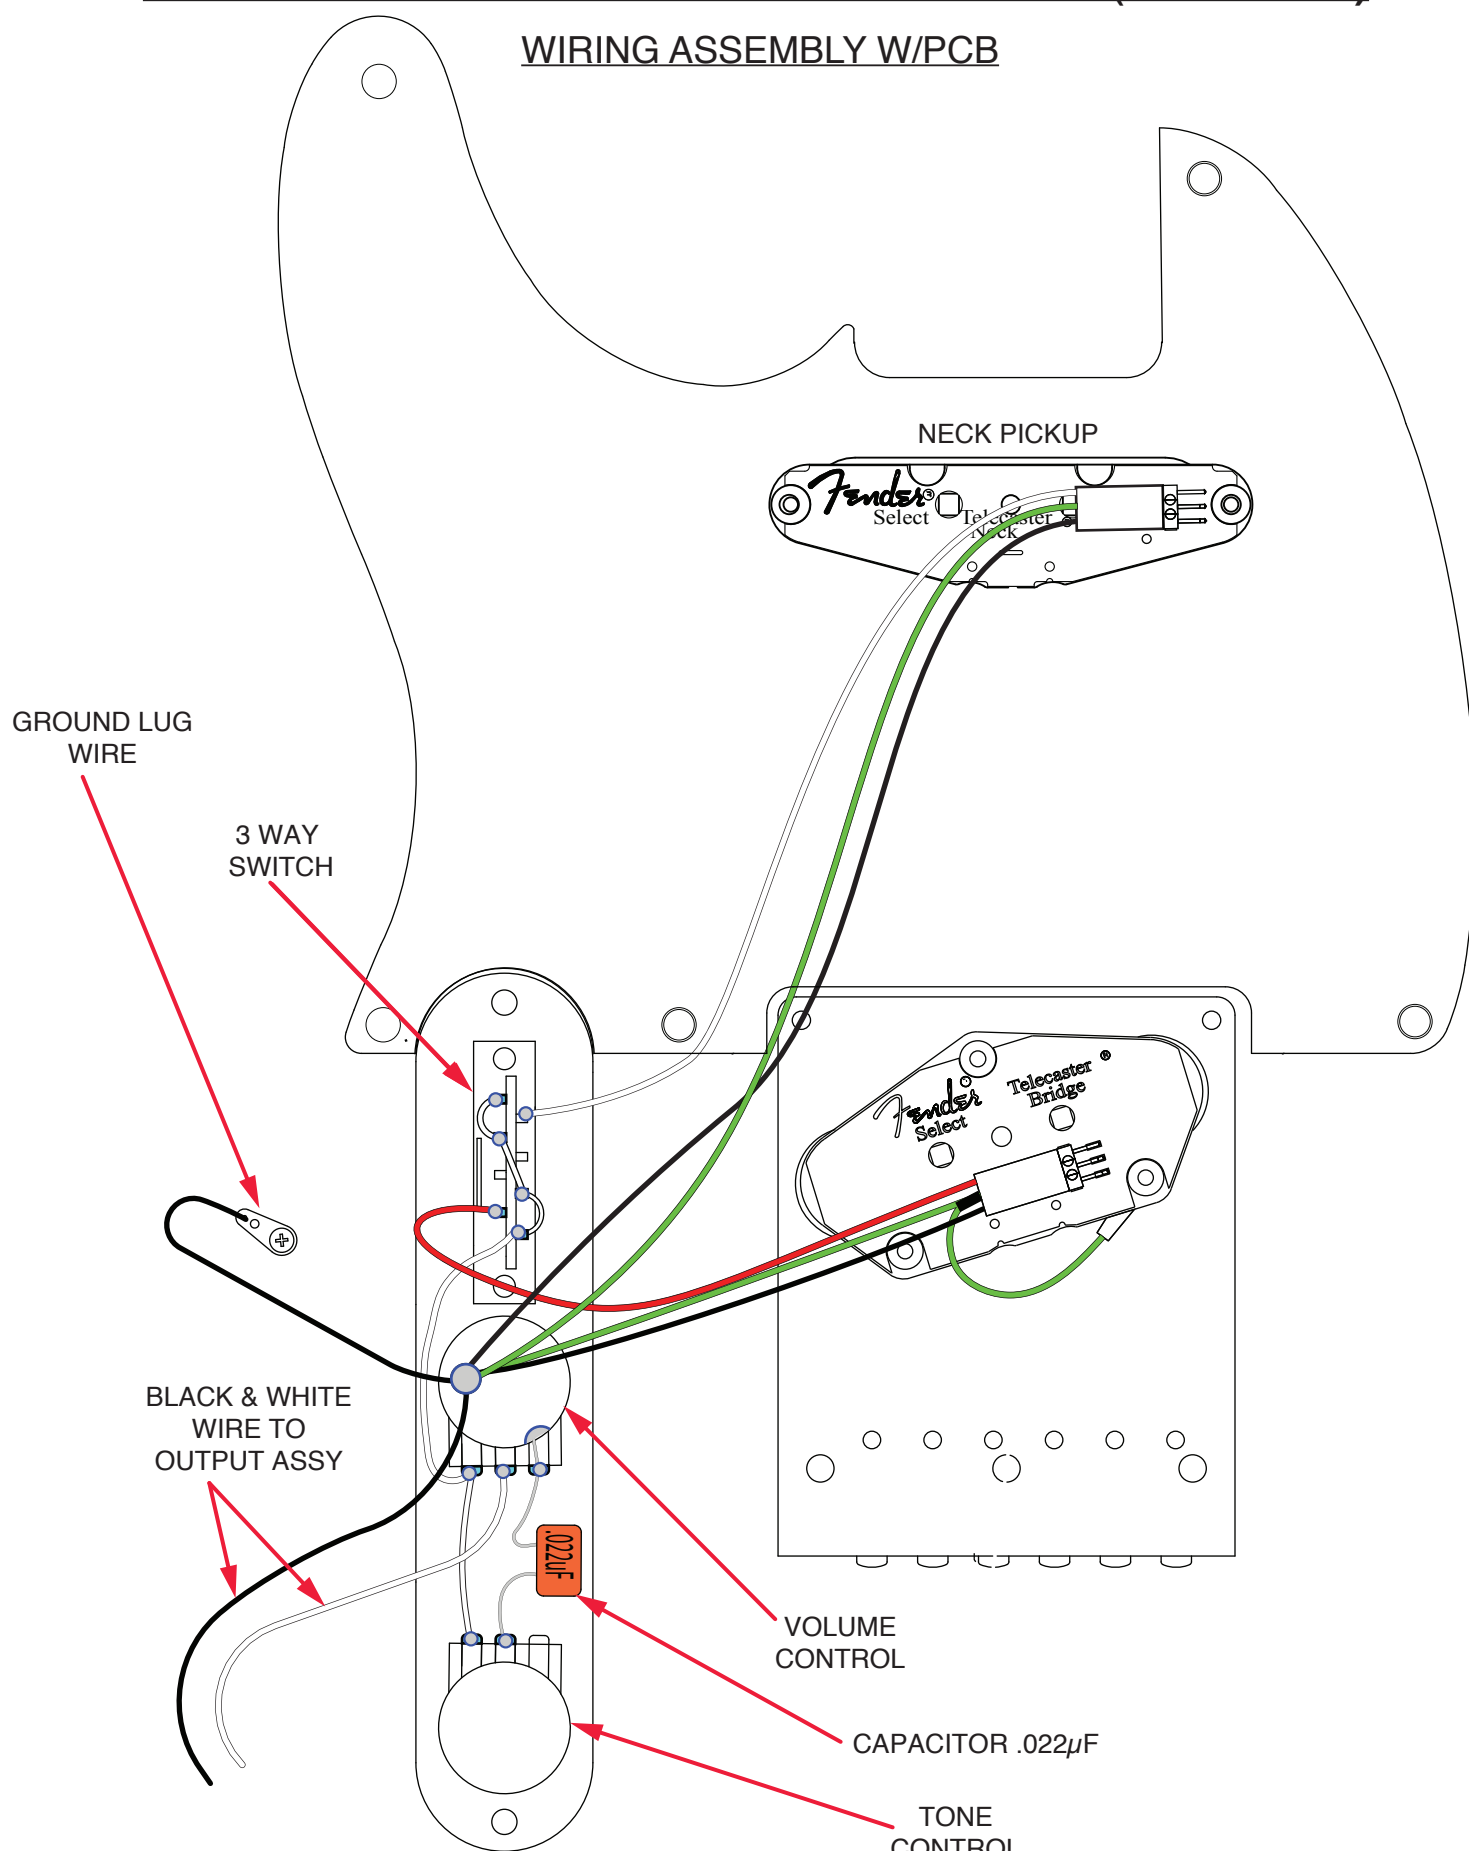

FENDER SELECT TELECASTER® GOLD HDWR (0170313733)

SWITCH AND CONTROL FUNCTION

