


FENDER SELECT TELECASTER® THINLINE CHROME H/W (0170316833)

PARTS LAYOUT

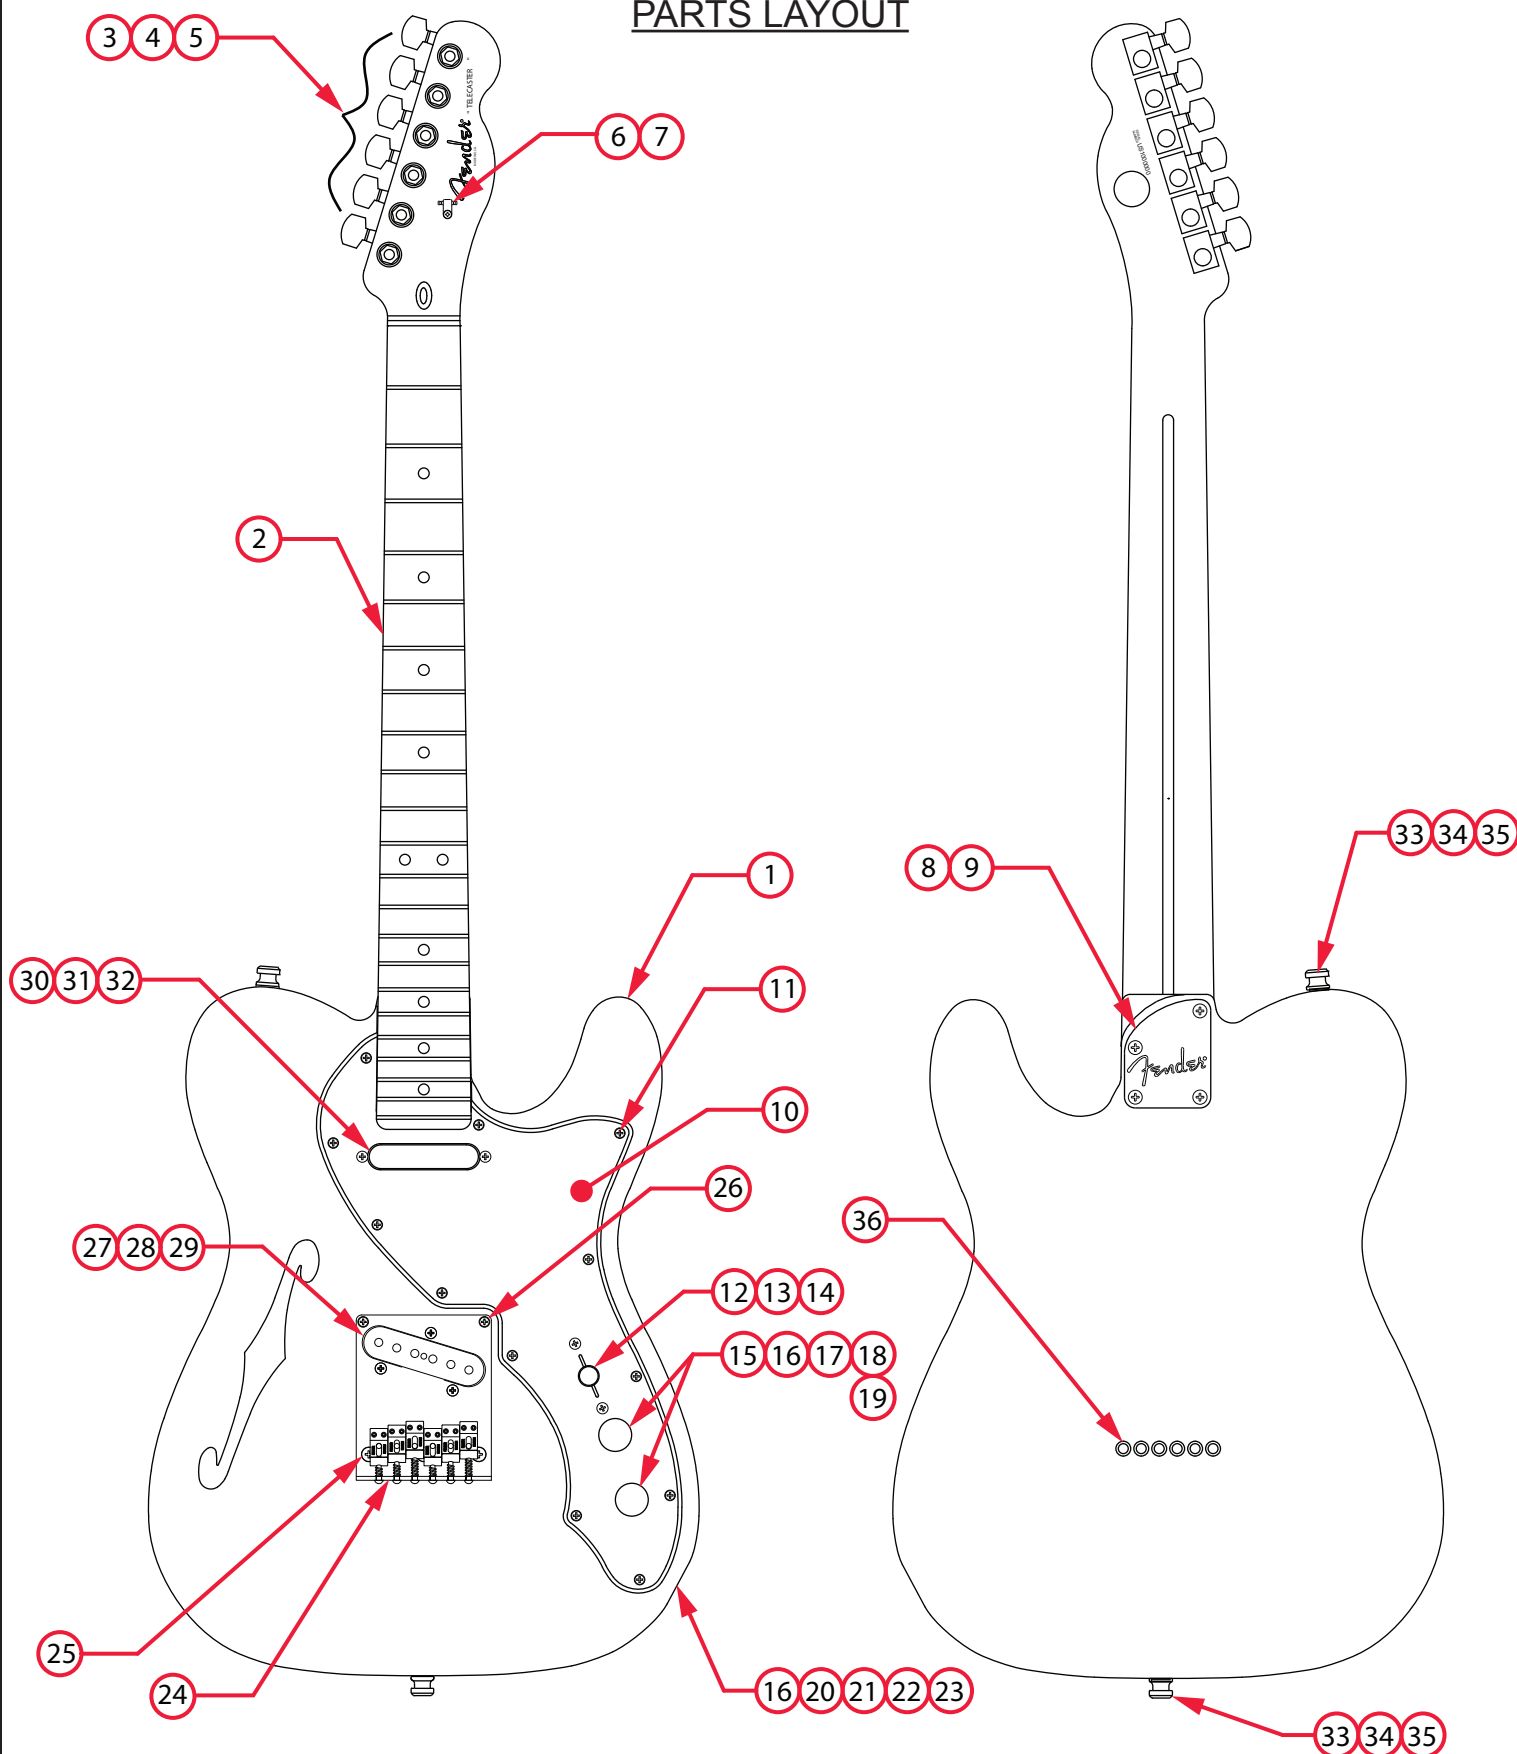

FENDER SELECT TELECASTER® THINLINE CHROME H/W (0170316833)

PARTS LIST

REF#	DESCRIPTION	PART NUMBER
1	BODY FENDER SELECT TELE THINLINE VIB	0096495533
2	NECK ASSY FENDER SELECT TELE BE MPL	0096440000
3	FENDER LOCKING TUNERS CHROME SET W/HDW	0990818100
4	WASHER KEY	0053106049
5	BUSHING KEY	0058820049
6	STRING GUIDE TREE AM STD	0994911000
7	SCREW SMAB 3 X 3/8 RHP ZA CHROME	0021405049
8	NECK PLATE DLX SERIES NO TILT RH CHROME	0092954000
9	SCREW SMA 8 X 1-3/4 OHP NI	0015636049
10	PICKGUARD TELE THINLIN AGED WHITE PEARL	0050581000
11	SCREW SMAB 4 X 1/2 OHP ZA CHROME	0994923000
12	SWITCH 3-WAY LVR	0992041000
13	KNOB SWITCH VINTAGE TELE BAKELITE	0093602000
14	SCREW MA 6-32 X 5/8 RH ZARTAN	0994925000
15	KNOB HEAVY KNURLED CHROME W/SCREW	0096227000
16	NUT HEX 3/8-32 X 3/32 TK NI	0016352049
17	WASHER LOCK INTL 3/8 X .500 X .020 NI	0022384049
18	CONTROL 250K 10%	0990831000
19	CAPACITOR CD 100V 20% .05µF	0015552049
20	JACK PHONE OPEN CIRCUIT 11	0021956049
21	RETAINER JACK NI PLT TELE	0010355069
22	FERRULE JACK STD TELE	0021452000
23	WASHER LOCK INTL 3/8 X .687	0016436049
24	BRIDGE ASSY FENDER SELECT TELE	0092324000
24A	BRIDGE PLATE AM SRS TELE RH CHROME	0075106000
24B	BRIDGE SECTION ASSY NI AS TELE SHORT	0075123103
24C	BRIDGE SECTION ASSY NI AS TELE TALL	0075123104
24D	SPRING INTONATION ADJ 6 COIL NI	0056138000
24E	SPRING INTONATION ADJ 7 COIL NI	0056139000
24F	SCREW M 4-40 X 3/4 RHP NI	0076245000
25	SCREW SMA 8 X 1 OHP ZA CROME	0021373049
26	SCREW SMA 3 X 1/2 OHP	0027956049
27	PICKUP ASSY SELECT SERIES TELE BRIDGE	0092668000
28	SCREW 6-32 X 3/4 RHP TAP ZA	0048631049
29	TUBING LATEX CUT .375 X 1/8 ID X 1/4 OD	0036878000

*= NOT PICTURED IN DIAGRAM




FENDER SELECT TELECASTER® THINLINE CHROME H/W (0170316833)[illegible]

*= NOT PICTURED IN DIAGRAM


FENDER SELECT TELECASTER® THINLINE CHROME H/W (0170316833)


WIRING ASSEMBLY

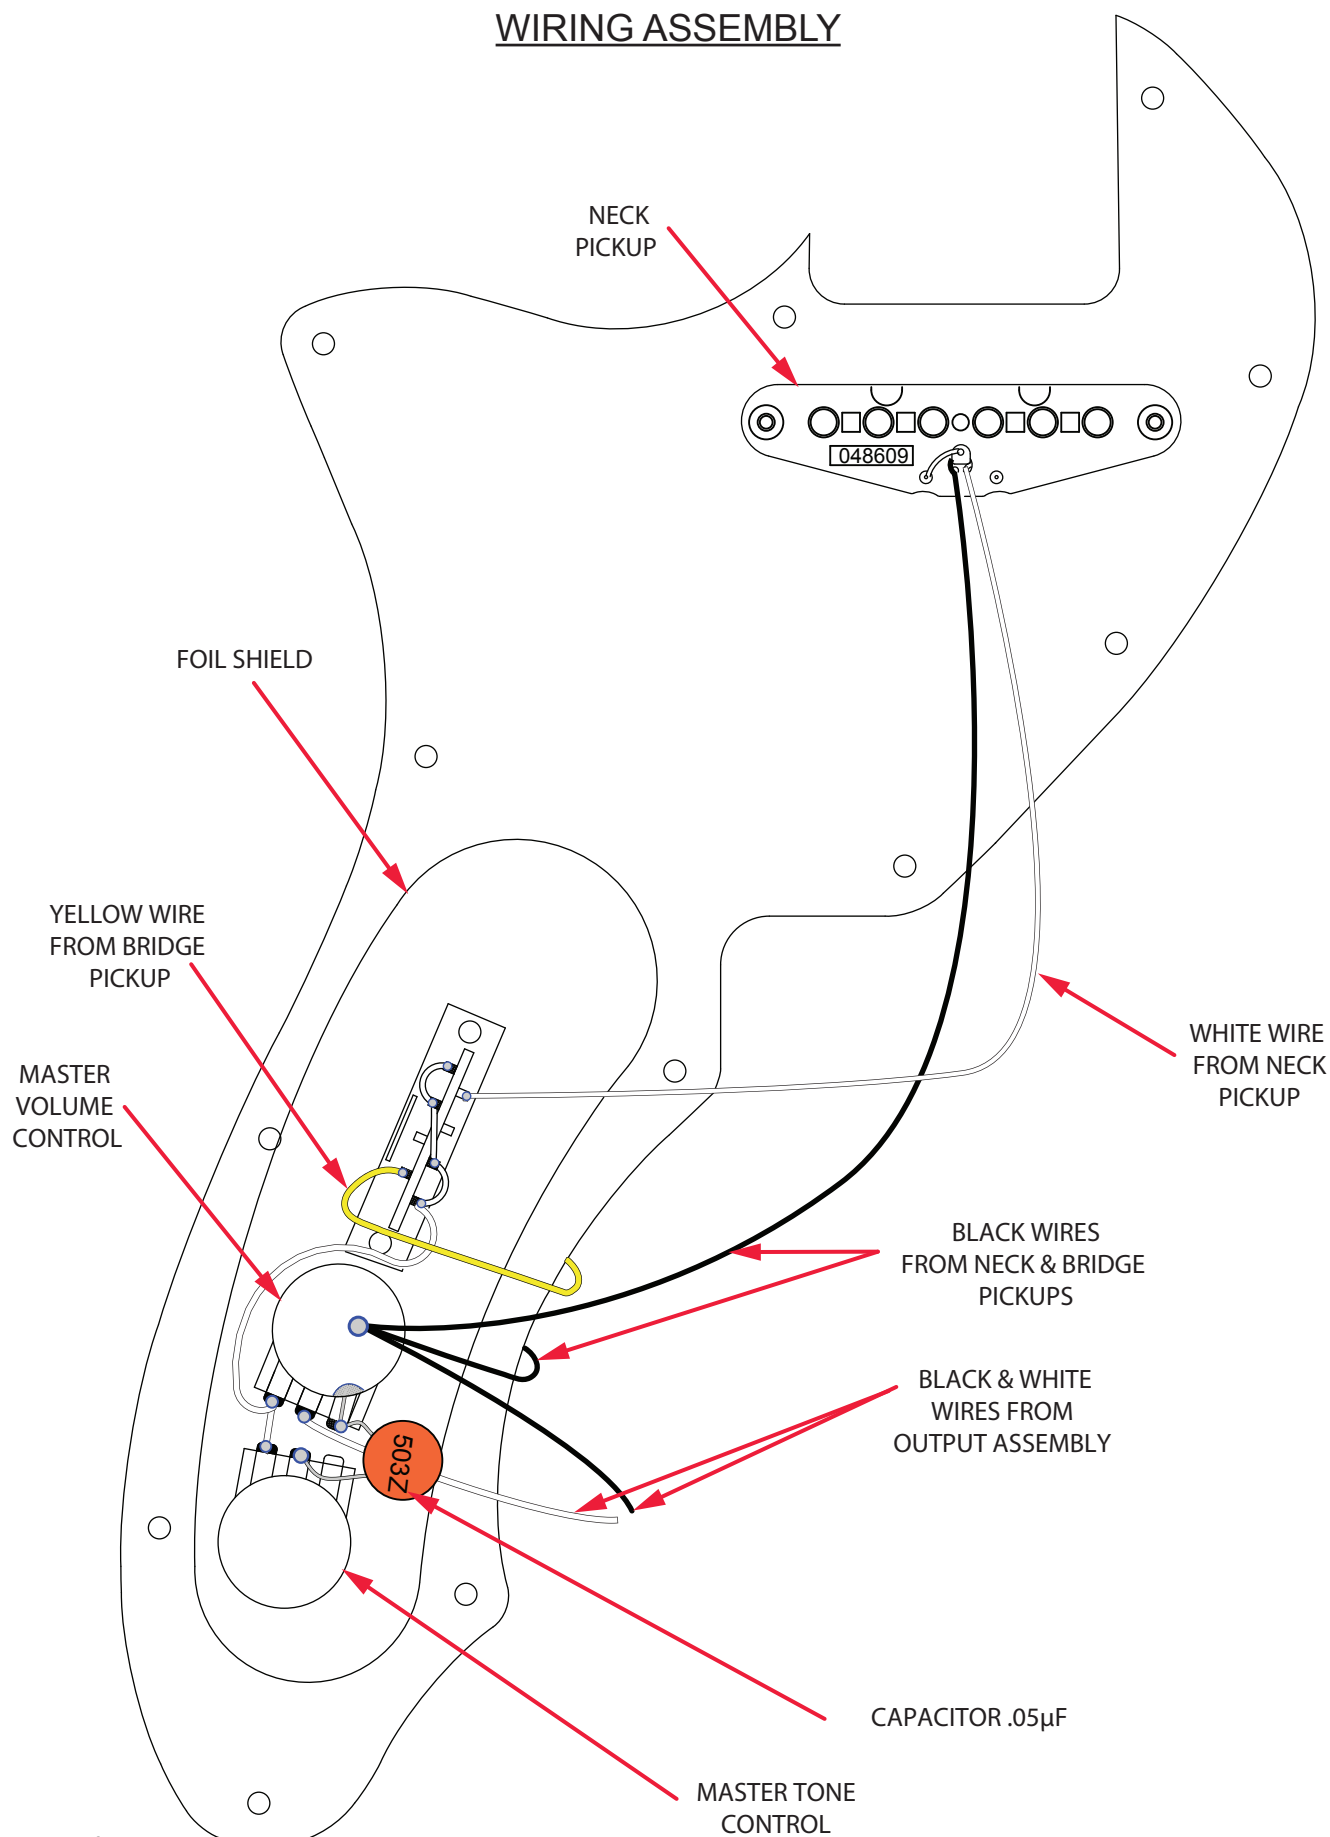

FENDER SELECT TELECASTER® THINLINE CHROME H/W (0170316833)

SWITCH AND CONTROL FUNCTION

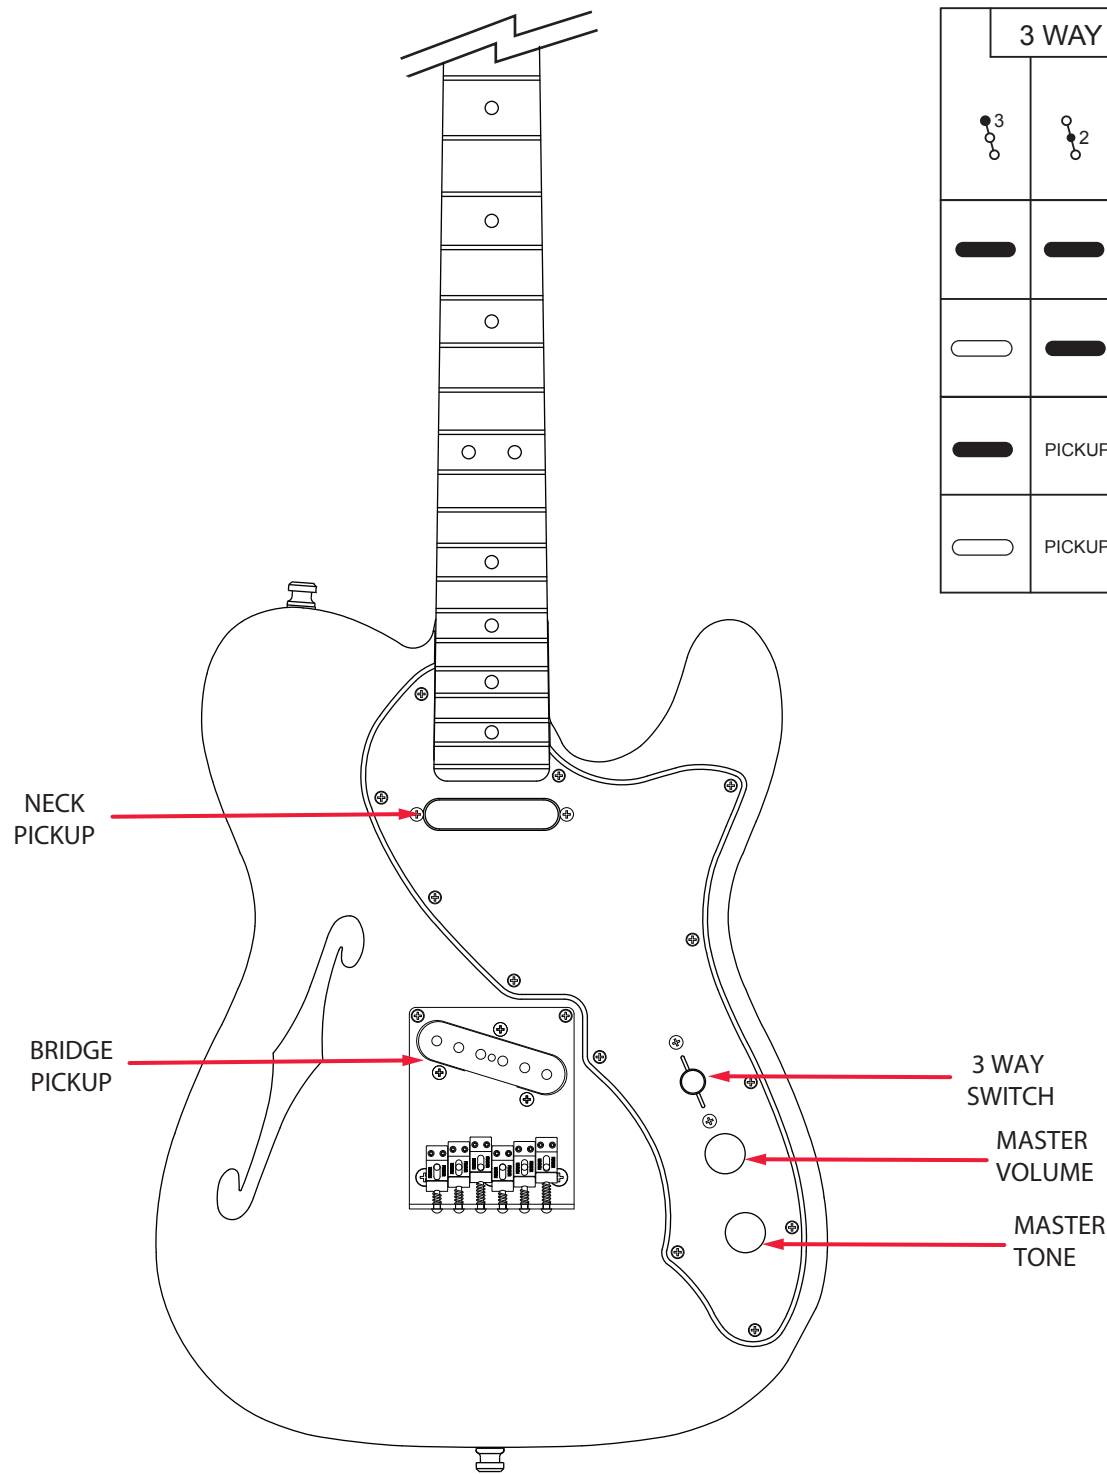

3 WAY SWITCH POSITION			
			← 3 WAY SWITCH POSITION
			← NECK PICKUP
			← BRIDGE PICKUP
	PICKUP IS ON		INDICATES POSITION OF 3 WAY SWITCH 
	PICKUP IS OFF		