


STANDARD FAT STRAT 0134700/4702

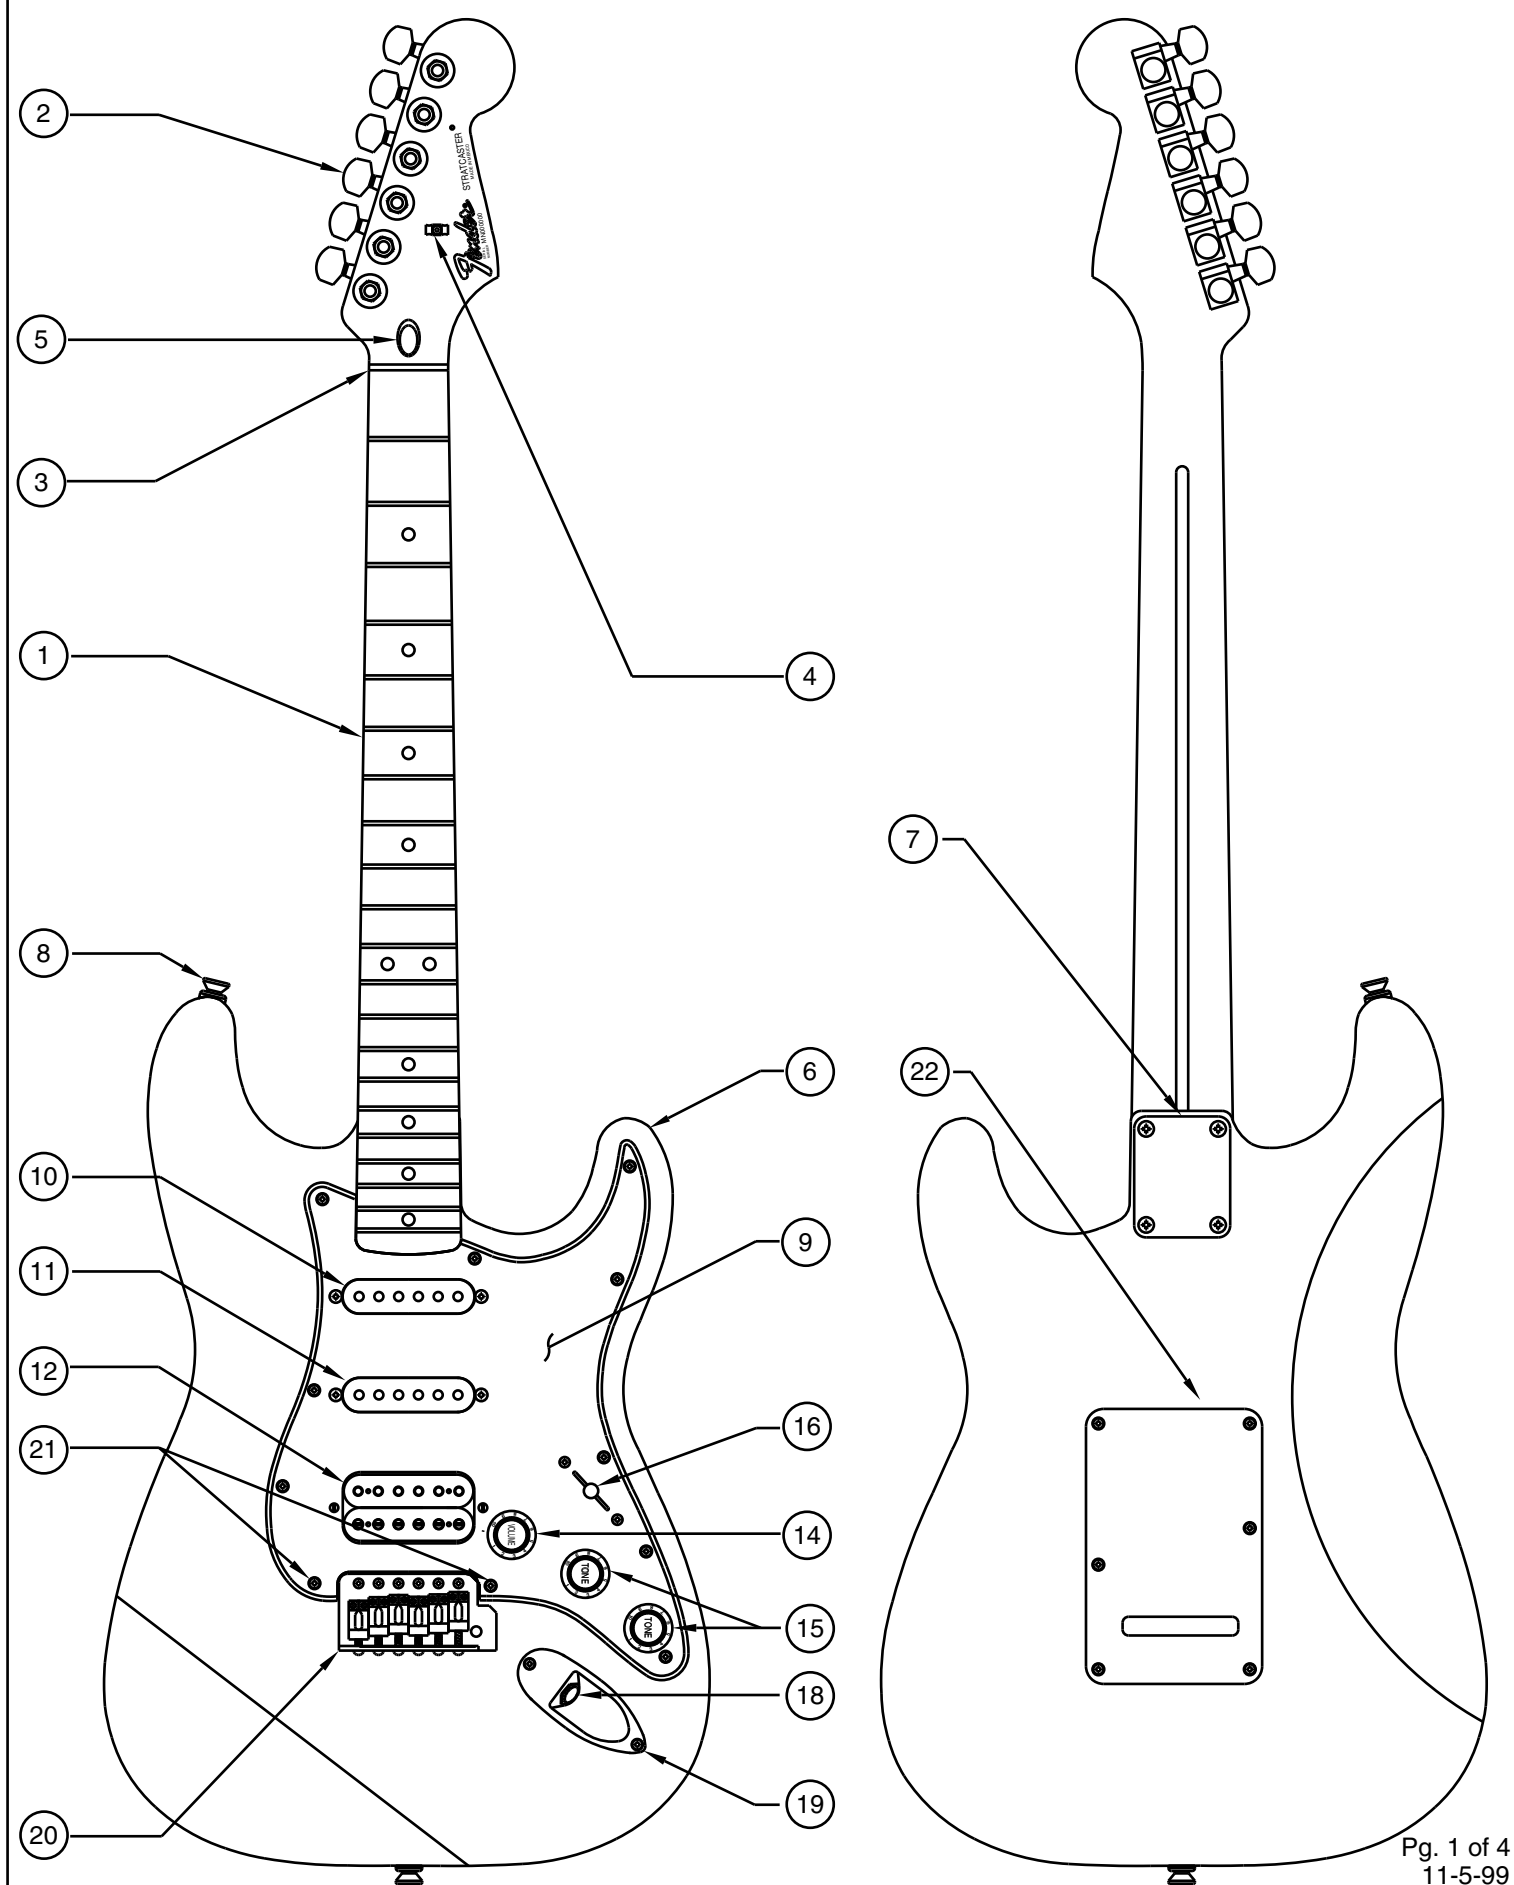

STANDARD FAT STRATOCASTER® , 013-4700/4702


REF.#	P/N	DESCRIPTION
1	0029549000	Neck, Squier Strat, RW 
	0029548000	Neck, Squier Strat, MN 
2	0037429000	Tuning Key, (1) Set 
	0053107000	Bushing Key, Ping
	0053106000	Washer, Key Ping
3	0083675000	Bone Nut
4	0010389000	String Retainer
	0011357000	Mounting Screw
5	0038454000	Truss Rod Adjustment Nut
	0038467000	Truss Rod Adjusting Wrench
6	0040862xxx	Body, Squier Strat, Sunburst
	0029547xxx	Body, Squier Strat, Solid Color
7	0033024000	Neck Mounting Plate
	0015636000	Mounting Screw
8	0012344000	Strap Button
	0020491000	Felt Washer, White
	0015610000	Mounting Screw
9	0050671000	Pickguard, Strat Special, White/Black/White
	0015578000	Mounting Screw
10	0053206000	Pickup, Neck, Strat Mexico
	0048631000	Mounting Screw
	0036481000	Tubing
11	0053207000	Pickup, Middle, Strat Mexico
	0048631000	Mounting Screw
	0036481000	Tubing
12	0050950000	Pickup, Bridge, Humbucker Std, Wide White
	0050166000	Mounting Screw
	0050167000	Spring, Humbucker, Mtg 3/4"
13	0013446000	Control, 250K (3)
	0016352000	Mounting Hex Nut
	0022384000	Washer, Lock Intl.
14	0056149000	Knob, Volume, Strat, White
15	0056148000	Knob, Tone, Strat, White (2)
16	0053291000	Switch, Lever 5-Position
	0019554000	Knob, Pickup, Select Switch, White
	0021417000	Mounting Screw
17	0024832000	Capacitor, .022uf
18	0047329000	Output Jack
	0016352000	Mounting Hex Nut
	0016436000	Washer, Lock Intl.
19	0033023000	Ferrule, Jack
	0015578000	Mounting Screw
20	0071014000	Bridge Assy, Mexico Strat
	0021421000	Mounting Screw
	0054620000	Arm, Tremolo
	0050920000	Knob, Tremolo Arm White
	0050918000	Claw, Tremolo
	0050922000	Spring, Tremolo
	0050919000	Adjusting Wrench, Saddle Height
21	0012869000	Solder Lug
	0015116000	Mounting Screw
22	0040824002	Back Plate, Tremolo White
	0015578000	Mounting Screw

Body Part Number	
0040862532	Brown Sunburst
0029547506	Black
0029547525	Chrome Red
0029547575	Midnight Wine
0029547580	Arctic White
0029547587	Cobalt Blue Metallic




SWITCH & CONTROL FUNCTION


5 WAY SWITCH POSITION					
 5	 4	 3	 2	 1	
T1	T1&T2	T2	T2	NT	
					← NECK PICKUP (A)
					← MIDDLE PICKUP (B)
					← BRIDGE PICKUP (C)
					← BRIDGE PICKUP (D)
	PICKUP IS ON		INDICATES POSITION OF 5 WAY SWITCH 		
	PICKUP IS OFF				
A	PICKUP (NECK)	T1	TONE 1		
B	PICKUP (MIDDLE)	T2	TONE 2		
C & D	PICKUP (BRIDGE)	NT	NO TONE		

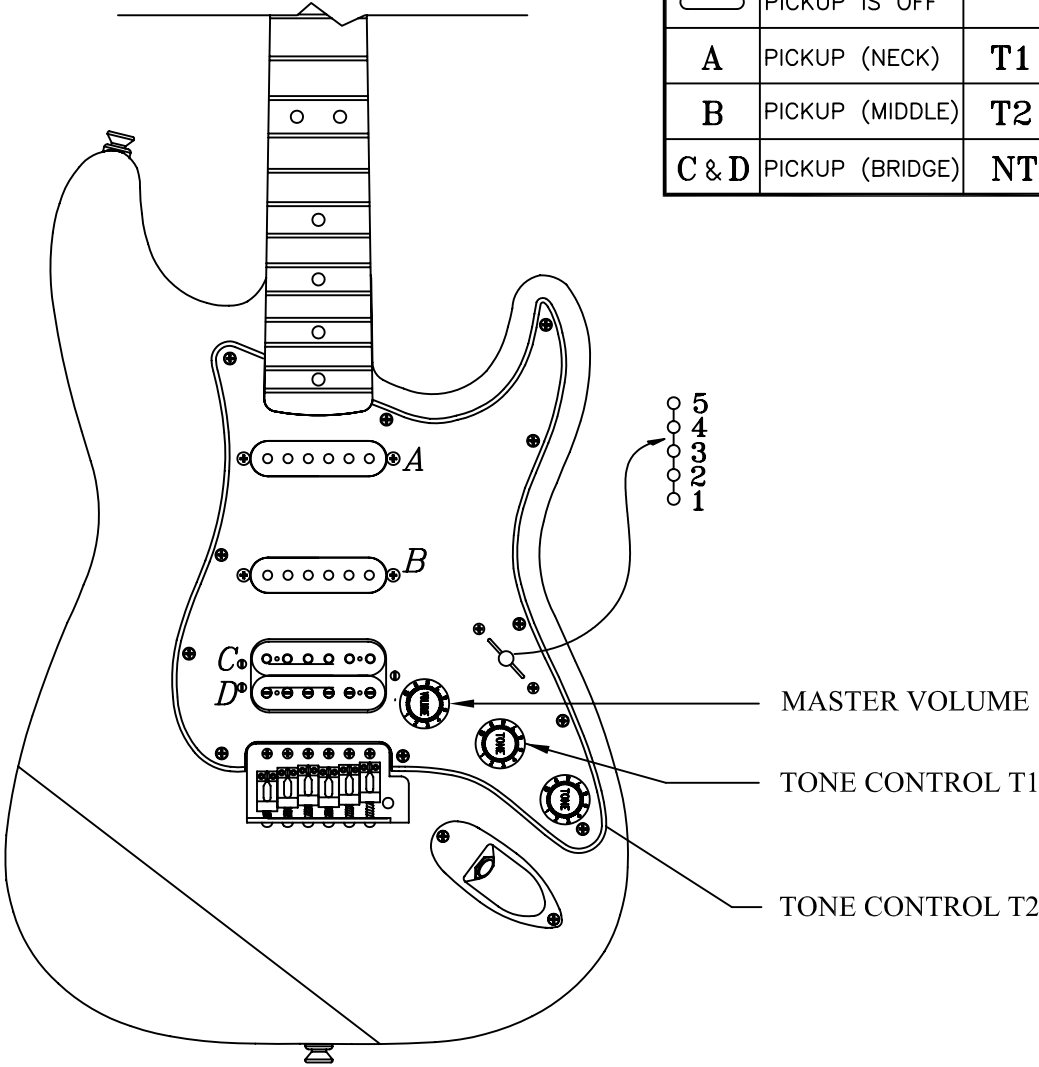

WIRING ASSEMBLY

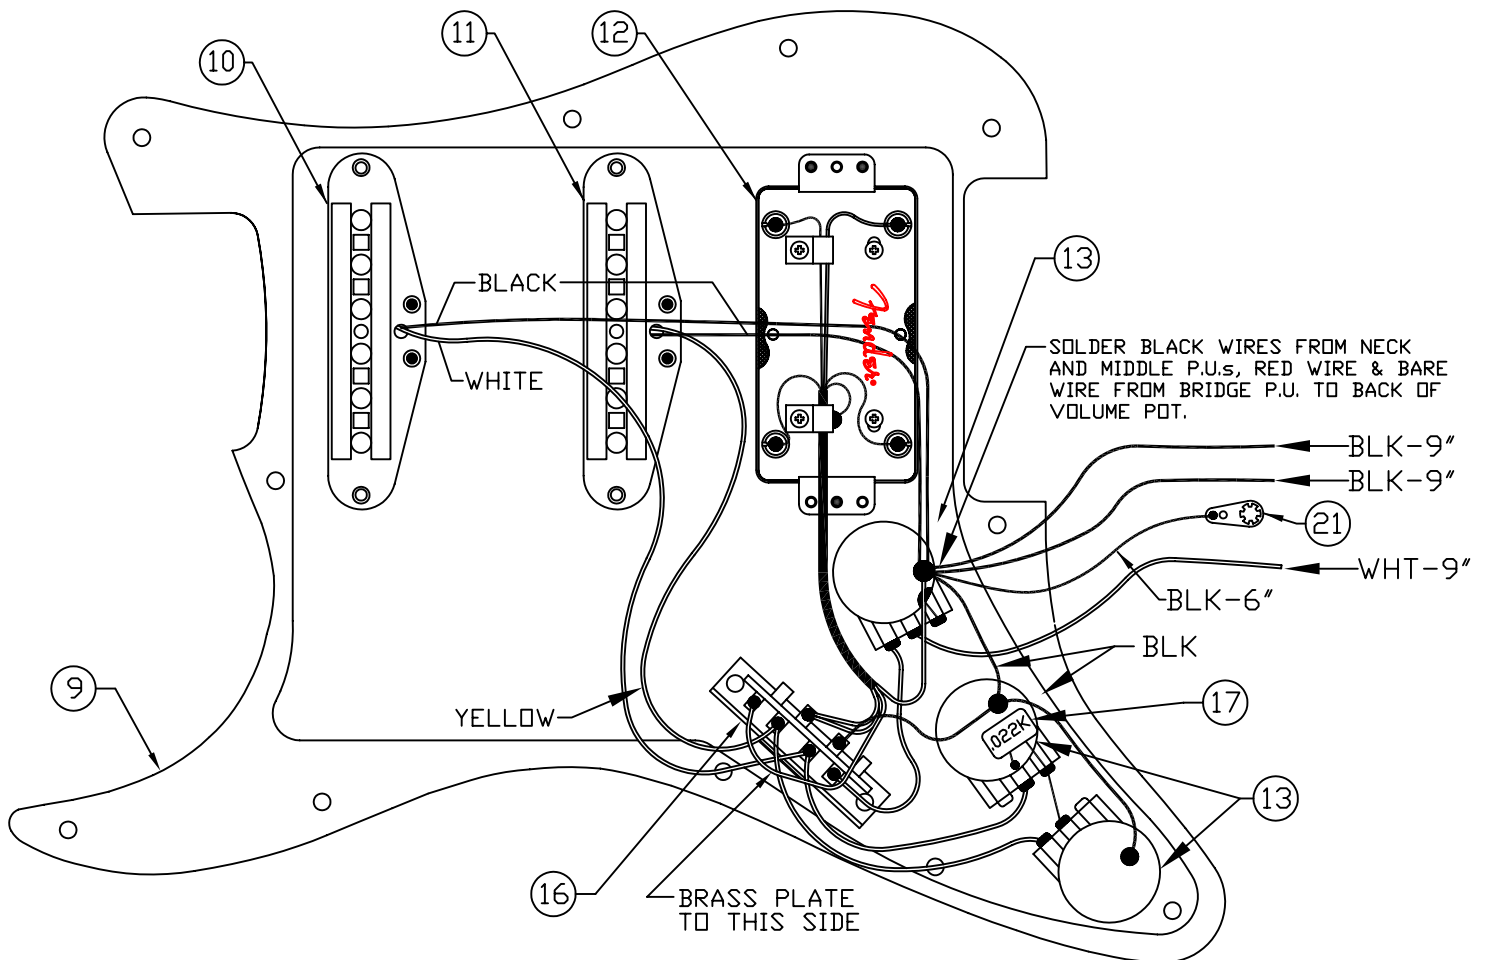

SWITCH WIRING

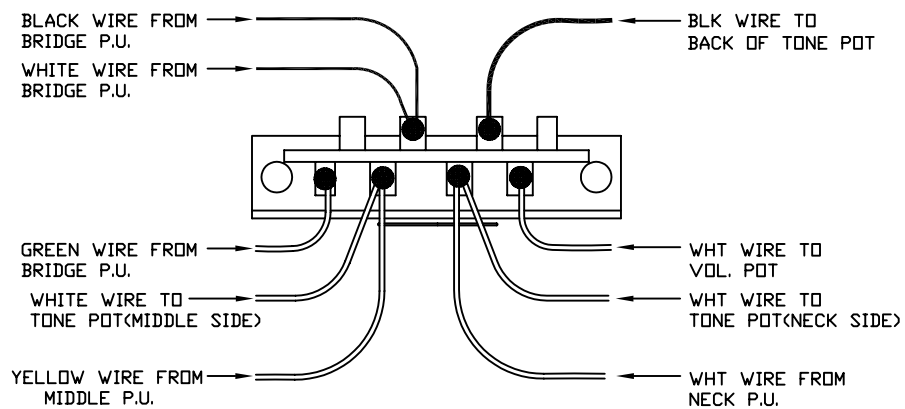

Fender®