
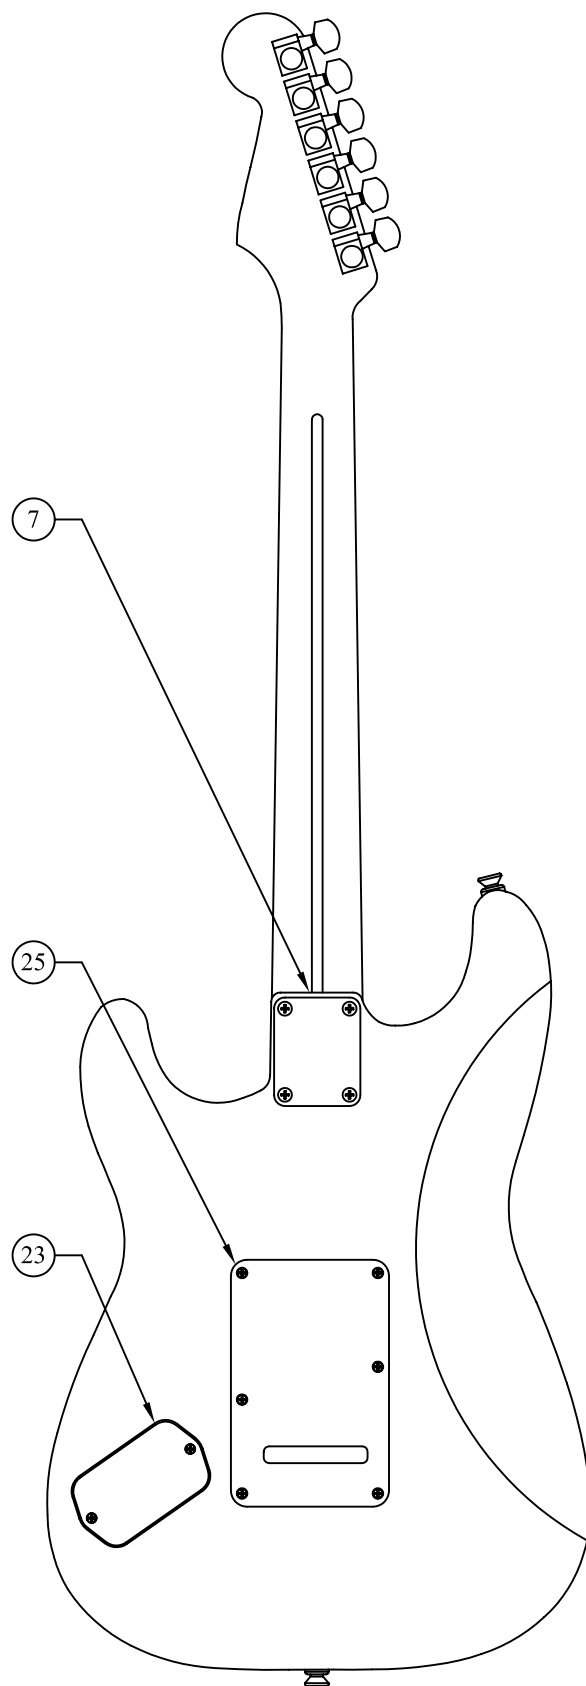


ROLAND®- READY STRATOCASTER, 013-4660

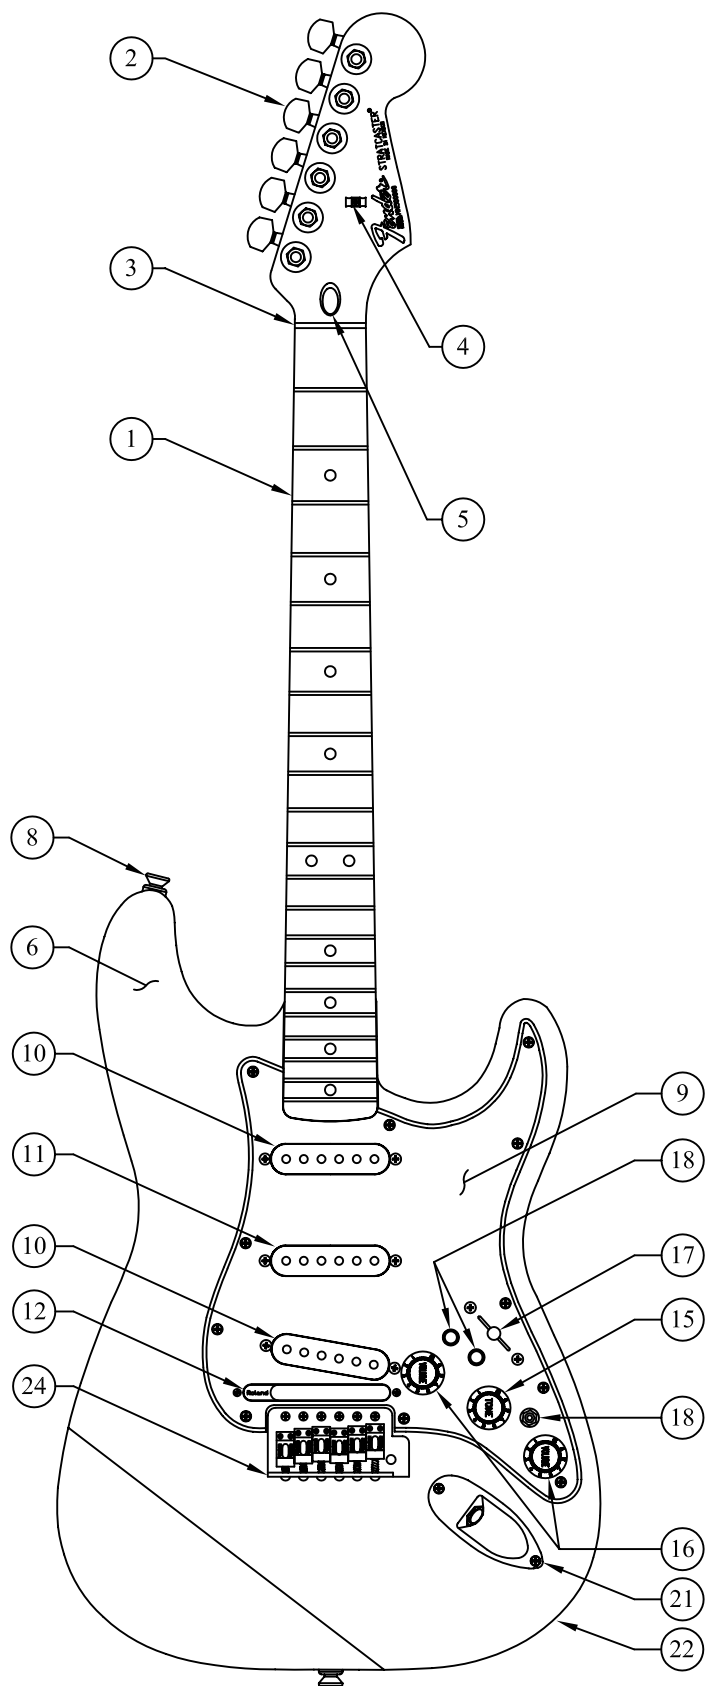


ROLAND®- READY STRATOCASTER, 013-4660

REF.#	P/N	DESCRIPTION	REF.#	P/N	DESCRIPTION
1	0029549000	Neck, Squier Strat, R/W	24	0071014000	Bridge Assy., RH SGGB VTCRB-1
2	0037429000	Tuning Key, (6)		0021421000	Mounting Screw
	0053107000	Bushing (6)		0050920000	Knob, Tremolo Arm White
	0053106000	Washer (6)		0050918000	Claw, Tremolo
3	0083675000	Bone Nut		0015636000	Mounting Screw
4	0010389000	String Retainer		0015116000	Screw Sma
	0011357000	Mounting Screw		0050922000	Spring, Tremolo
5	0038454000	Truss Rod Adjustment Nut	25	0050919000	Adj. Wrench, Saddle Height
	0038467000	Truss Rod Adjusting Wrench		0040824002	Back Plate, Trem. Wht. Mex.
6	See Chart	Body, Mex. Strat, Roland		0015578000	Mounting Screw
7	0033024000	Neck Mounting Plate			
	0015636000	Mounting Screw			
8	0012344000	Strap Button			
	0015610000	Mounting Screw			
	0020491000	Felt Washer, White			
9	0047917002	Pickguard Roland, Strat. Mex.			
	0015578000	Mounting Screw			
10	0053206000	Pickup Ass'y, (Neck/Bridge), North (2)			
	0048631000	Mounting Screw			
	0036481000	Tubing, Latex Cut			
11	0053207000	Pickup Assy., (Middle), South			
	0048631000	Mounting Screw			
	0036481000	Tubing, Latex Cut			
12	0047921000	Pickup Ass'y Roland,			
	0047919000	Mounting Screw			
	0047920000	Tubing, Latex Cut			
13	0013446000	Control, 250k 10% Taper Split (2)			
	0016352000	Mounting Nut			
	0016436000	Washer, Lock Intl.			
14	0047923000	Control, Volume 50k B W/Connector, Roland			
15	0056148000	Knob, Tone, Strat., White			
16	0056149000	Knob, Volume, Strat., White (2)			
17	0053291000	Switch, Lever 5-Position			
	0019554000	Knob, Pickup Switch, White			
	0021417000	Mounting Screw			
18	0047922000	Switch, Harness-Roland			
	0048540000	Lever Cap, Mini Toggle, Wht.			
	0021718000	Washer, Flat			
	0022602000	Button-Knob, Push Switch Parch (2).			
	0038462000	Block, Switch Mtg.			
	0021404000	Mounting Screw			
19	0012869000	Solder Lug			
20	0024832000	Capacitor, MP .022f 250V 10%			
21	0053381000	Assy.-Output Jack, Mex. Gr Strat.			
	0033023000	Ferrule Jack, Chrome			
	0015578000	Mounting Screw			
22	0048541000	Assy.-Output Jack 13 Pin, Roland			
	0027956000	Mounting Screw			
23	0048546000	Back Cover, AS Strat Roland			
	0048722000	Tape Double Sided Foam			
	0048547000	P.C.B. Ass'y, Roland			
	0015578000	Mounting Screw			

Body Chart

P/N	Color
0049718532	Brown Sunburst
0049706506	Black
0049706580	Arctic White

SWITCH & CONTROL FUNCTION

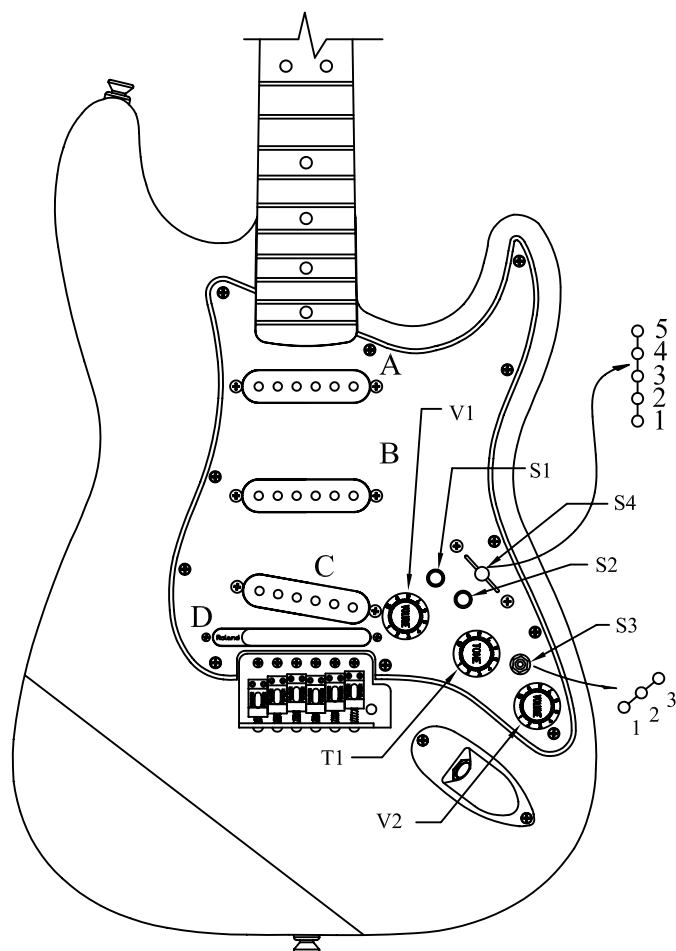

TOGGLE SWITCH FUNCTION (S3)

3 - GUITAR SOUND	2 - GUITAR & SYNTHESIZER SOUND	1 - SYNTHESIZER SOUND
------------------	--------------------------------	-----------------------

5 WAY SWITCH POSITION (S4)

5	4	3	2	1	5 WAY SWITCH POSITION
V1	V1	V1	V1	V1	VOLUME CONTROL
T1	T1	T1	T1	T1	TONE CONTROL
NECK PICKUP (A)	NECK PICKUP (A)	NECK PICKUP (A)	NECK PICKUP (A)	NECK PICKUP (A)	NECK PICKUP (A)
MIDDLE PICKUP (B)	MIDDLE PICKUP (B)	MIDDLE PICKUP (B)	MIDDLE PICKUP (B)	MIDDLE PICKUP (B)	MIDDLE PICKUP (B)
BRIDGE PICKUP (C)	BRIDGE PICKUP (C)	BRIDGE PICKUP (C)	BRIDGE PICKUP (C)	BRIDGE PICKUP (C)	BRIDGE PICKUP (C)
PICKUP IS ON	PICKUP IS ON	PICKUP IS ON	PICKUP IS ON	PICKUP IS ON	PICKUP IS ON
PICKUP IS OFF	PICKUP IS OFF	PICKUP IS OFF	PICKUP IS OFF	PICKUP IS OFF	PICKUP IS OFF

A	PICKUP (NECK)	T1	TONE 1
B	PICKUP (MIDDLE)	V1	VOLUME 1 GUITAR VOLUME
C	PICKUP (BRIDGE)	V2	VOLUME 2 SYTN VOLUME
D	ROLAND HEXAPHONE PICKUP	S1	SYNTHESIZER FUNCTION SWITCH
S3	TOGGLE SWITCH	S2	SYNTHESIZER FUNCTION SWITCH
S4	5 WAY SWITCH		

PICKGUARD ASSEMBLY

