
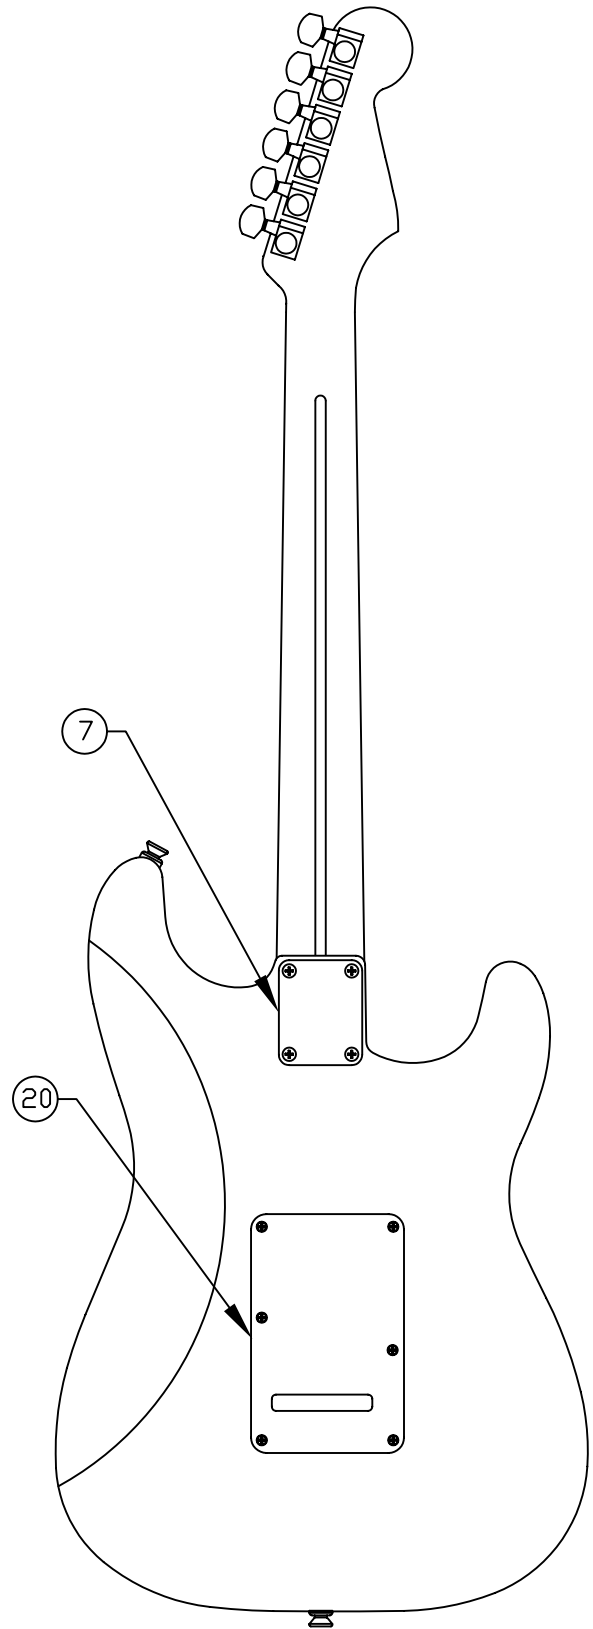


STANDARD STRATOCASTER® LEFT HAND 0134620/4622

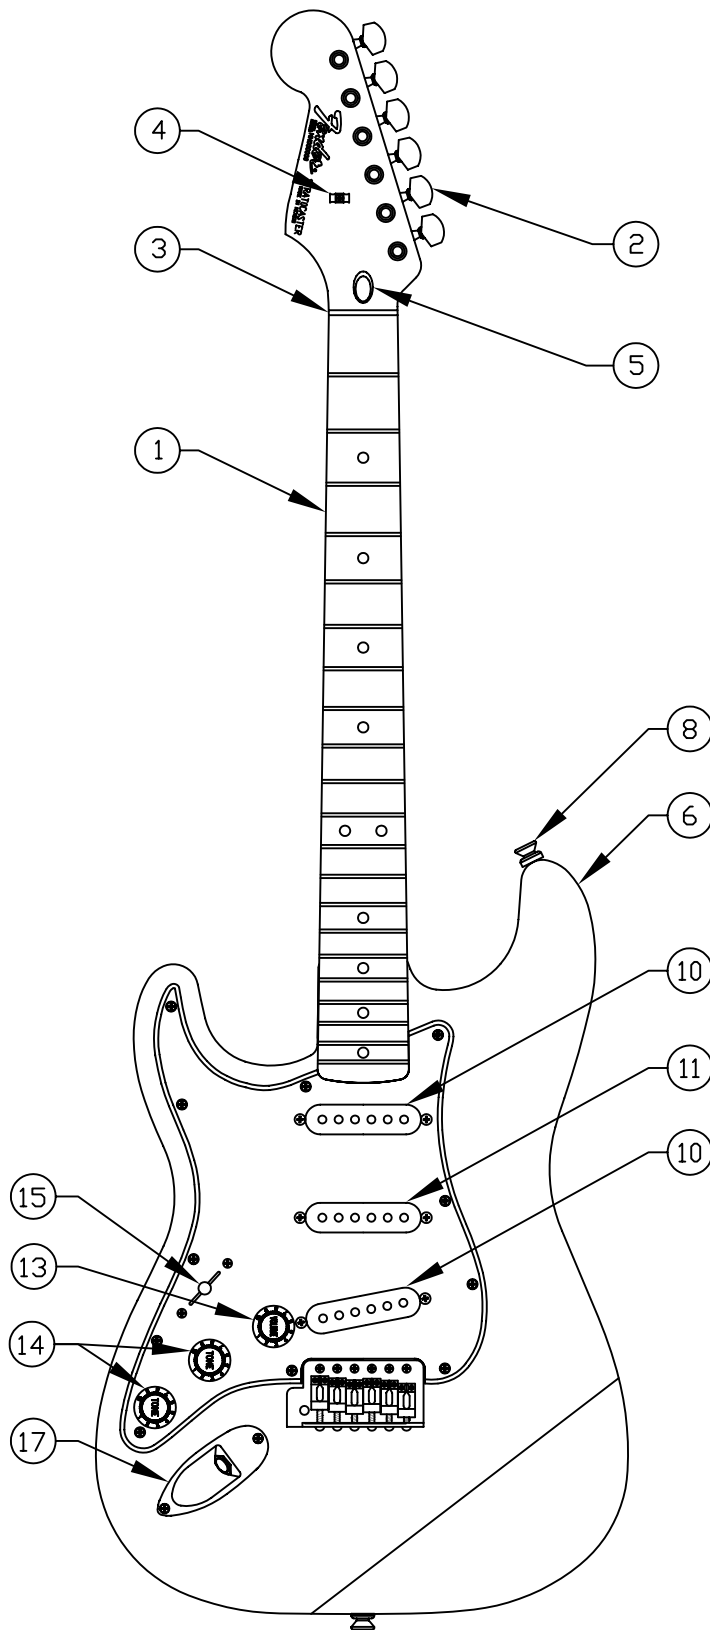

Fender®

STANDARD STRATOCASTER® LEFT HAND 0134620/4622

REF.#	P/N	DESCRIPTION
1	0053218000	Neck-Strat, Mex. L/H, R/W
	0053219000	Neck-Strat, Mex. L/H, M/N
2	0022151000	Tuning Key, (1) Set. W/Bushing XG - 1c L/H
3	0083675000	Bone Nut
4	0010389000	String Retainer
	0011357000	Mounting Screw
5	0038454000	Nut, Truss Rod Mex. Gtr/Bass
	0038467000	Truss Rod Adj. Wrench
6	0047337xxx	Body-Strat, Mex. L/H Solid Color
	0053220xxx	Body-Strat, Mex. L/H Sunburst
7	0033024000	Neck Mounting Plate
	0015636000	Neck Mounting Screw
8	0012344000	Strap Button
	0015610000	Mounting Screw
	0020491000	Felt Washer, White
9	0026077002	Pickguard Strat. Std. L/H W/B/W
	0015578000	Mounting screw
10	0053206000	Pickup, Mex. Strat. (Neck/Bridge), Wht.
	0048631000	Mounting Screw
	0036481000	Tubing, Std.
11	0053207000	Pickup, Mex. Strat. (Middle), Wht.
	0048631000	Mounting Screw
	0036481000	Tubing, Std.
12	0013446000	Control, 250K, Volume/Tone (3)
	0016352000	Mounting Nut
	0022384000	Lock Washer, Control
13	0056149000	Knob, Volume White
14	0056148000	Knob, Tone White (2)
15	0053291000	Switch, Lever, 5-Position
	0019554000	Knob, White
	0021417000	Mounting Screw
16	0024832000	Capacitor, .022uF
17	0047329000	Output Jack
	0016352000	Mounting Nut
	0016436000	Lock Washer, Jack
	0033023000	Jack Ferrule
	0015578000	Mounting Screw
18	0071016000	Bridge Assy, Strat Tremolo, L/H
	0021421000	Mounting Screw
	0060004000	Arm, Tremolo L/H
	0050920000	Knob, Tremolo Arm White
	0050918000	Claw, Tremolo
	0050922000	Spring, Tremolo
	0015636000	Mounting Screw
	0050919000	Adjusting Wrench, Saddle Height
20	0047341000	Back Plate, Tremolo Mex. L/H White
	0015578000	Mounting Screw
21	0012869000	Solder Lug
	0015116000	Mounting Screw

Body Part Number	
0053220532	Brown Sunburst
0047337506	Black
0047337525	Chrome Red
0047337575	Midnight Wine
0047337580	Arctic White
0047337587	Cobalt Blue Metallic



SWITCH & CONTROL FUNCTION


5 WAY SWITCH POSITION					
					← 5 WAY SWITCH POSITION
T1	T1&T2	T2	T2	NT	← TONE CONTROL
					← NECK PICKUP (A)
					← MIDDLE PICKUP (B)
					← BRIDGE PICKUP (C)
	 INDICATES POSITION OF 5 WAY SWITCH				
A					PICKUP (NECK)
B					PICKUP (MIDDLE)
C					PICKUP (BRIDGE)
NT					NO TONE

5
4
3
2
1
5 WAY SWITCH

MASTER VOLUME

TONE CONTROL (T1)


TONE CONTROL (T2)

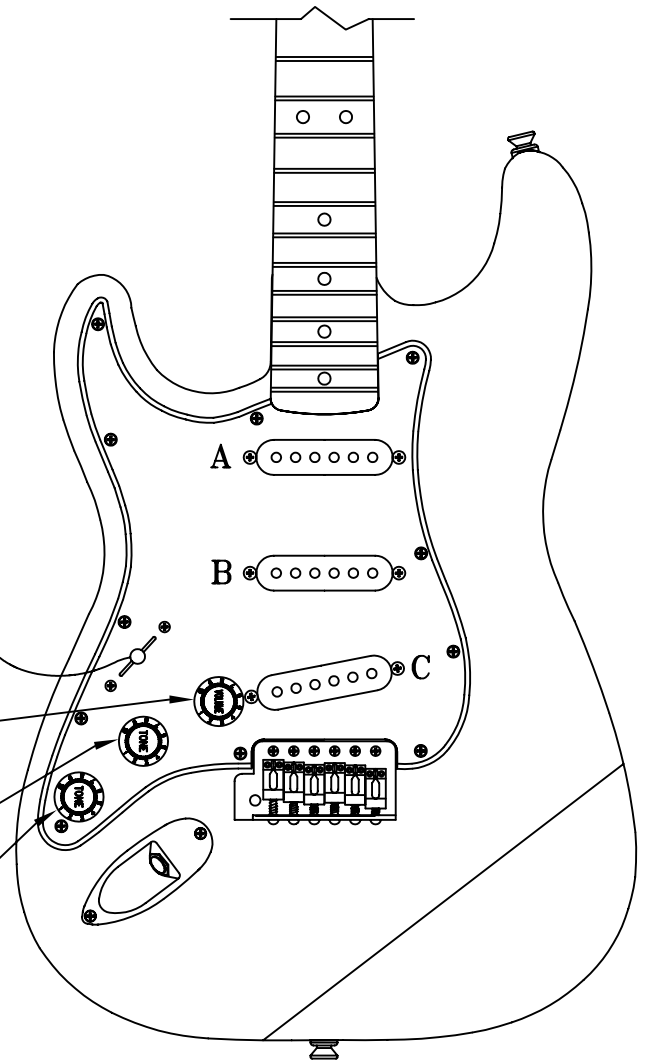


Fender®

STANDARD STRATOCASTER® LEFT HAND 0134620/4622

WIRING ASSEMBLY

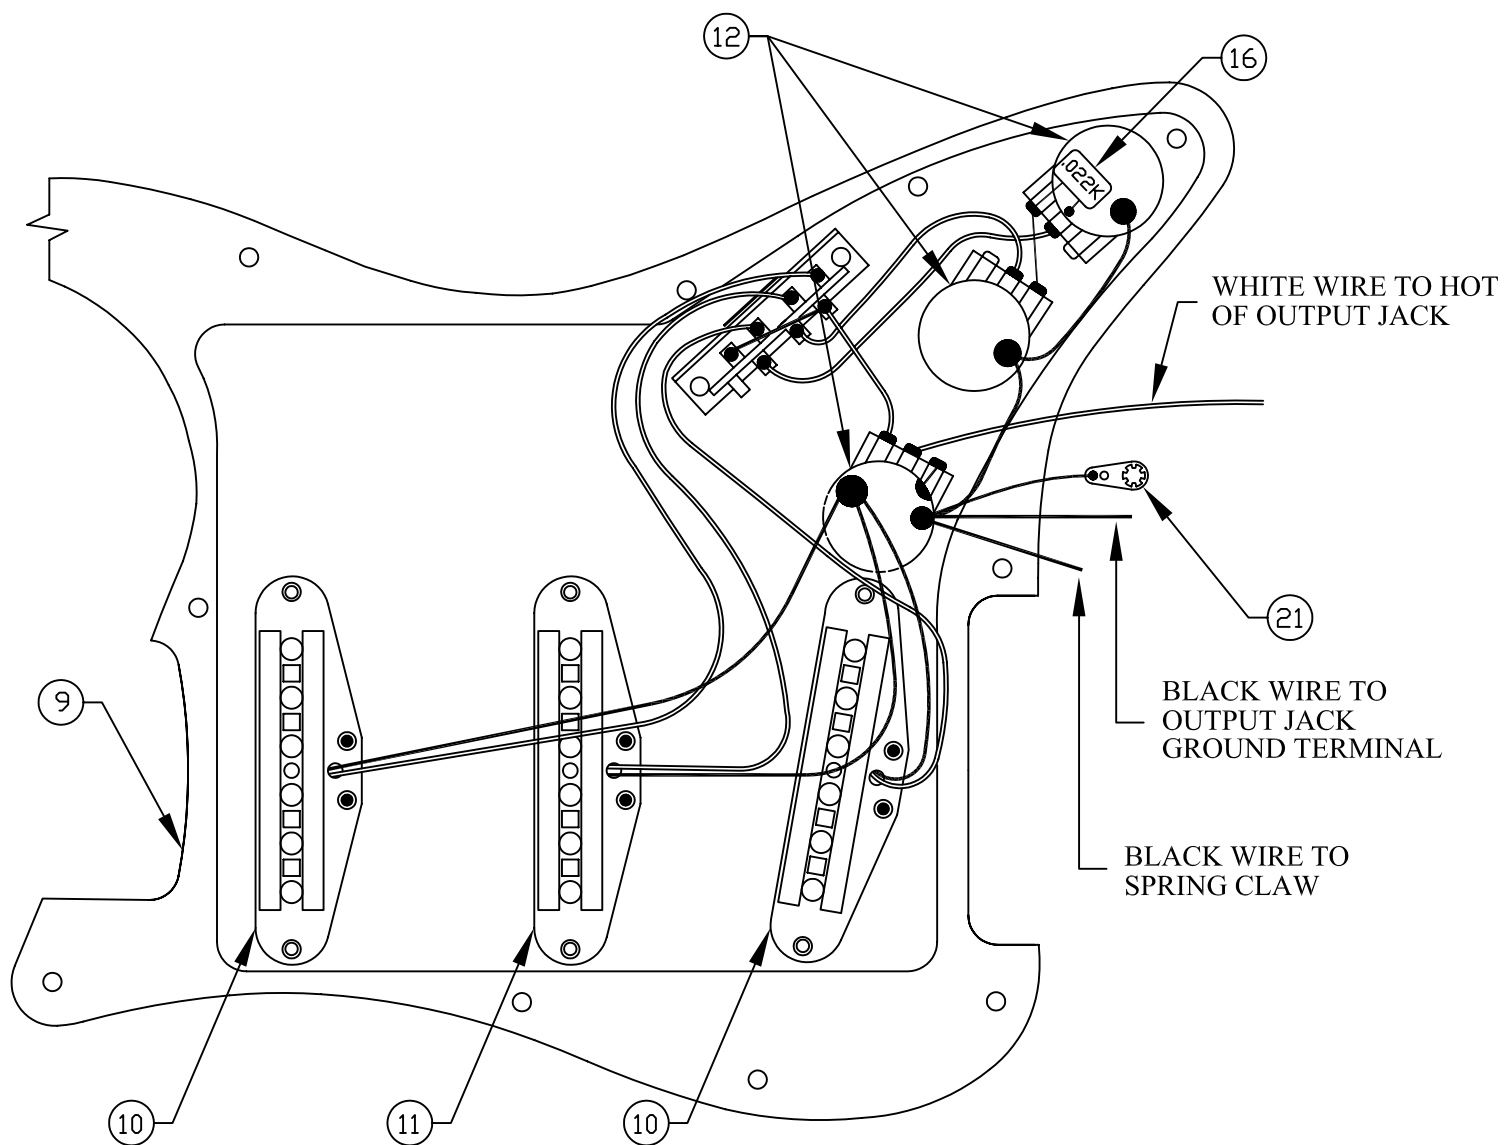

BRIDGE ASSEMBLY

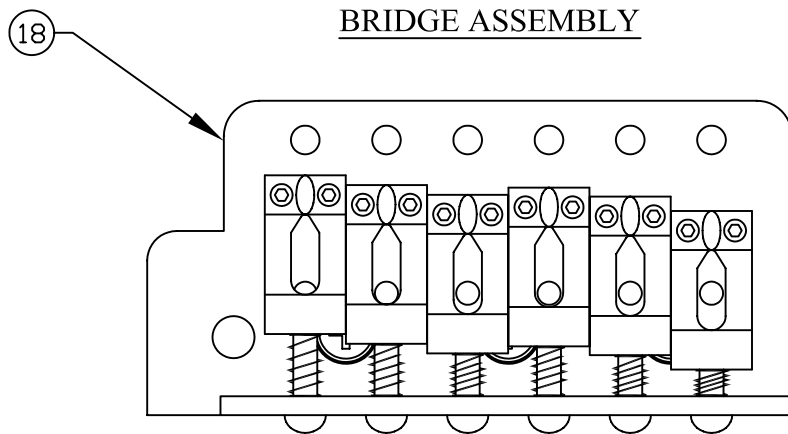

Fender®